


RISC OS 3

Programmer's Reference Manual

Indexes

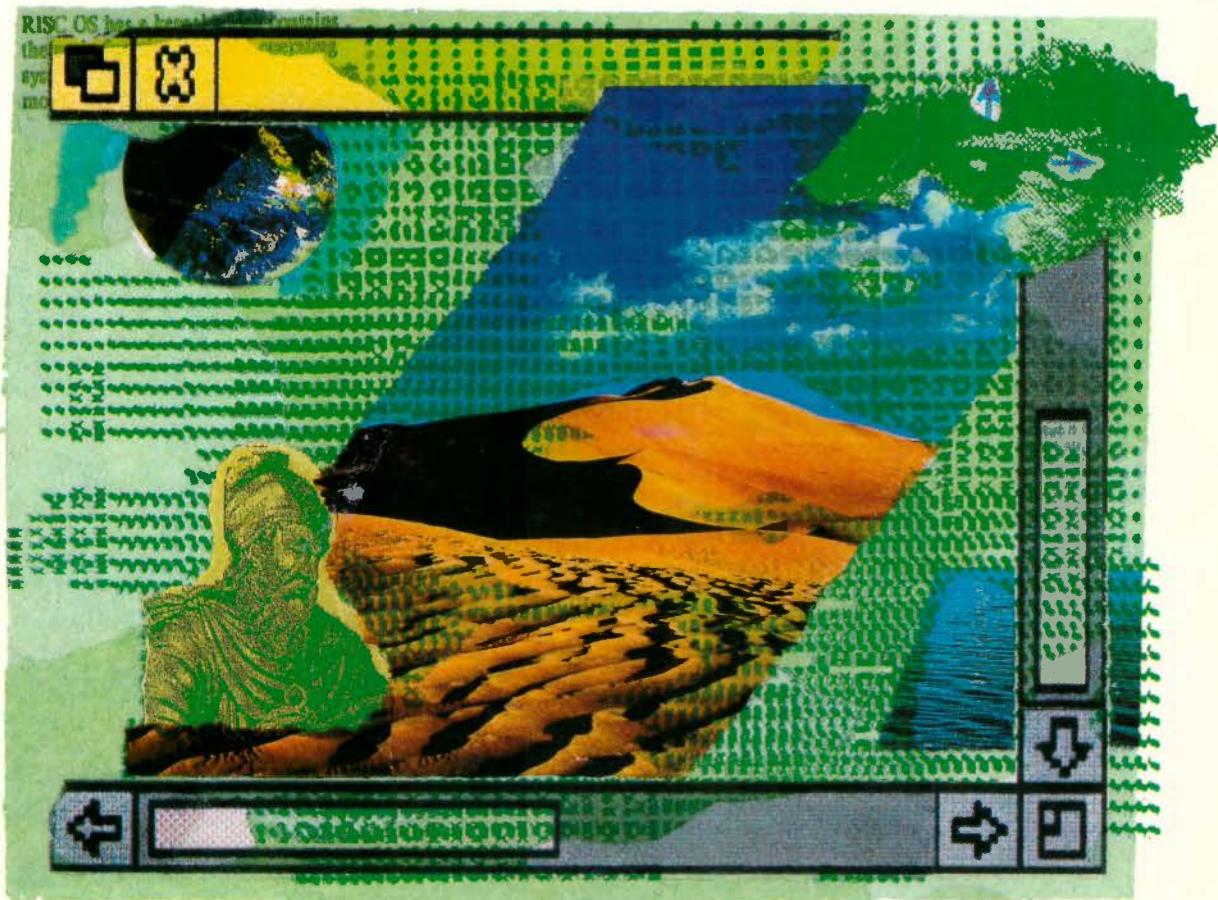


Acorn 

RISC OS 3

Programmer's Reference Manual

Indexes

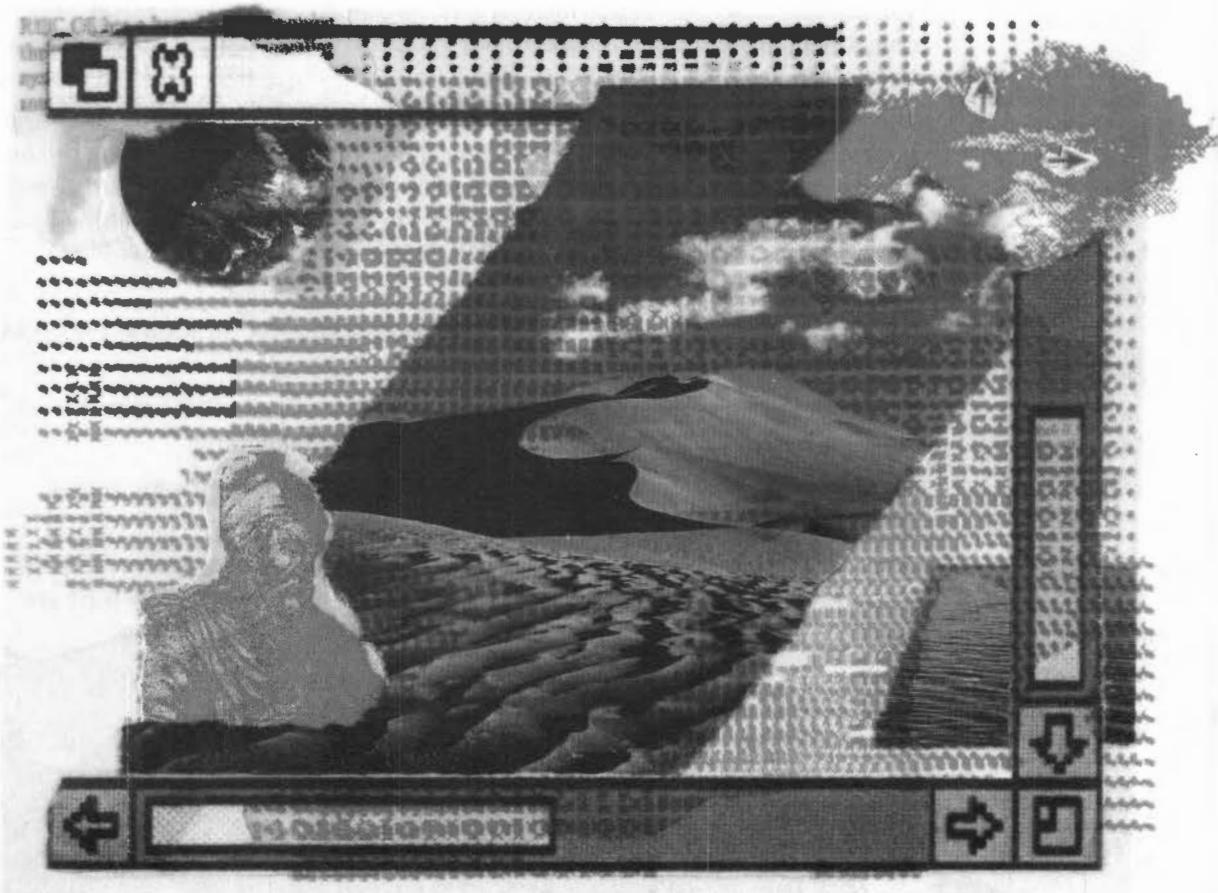

Acorn

Copyright © 1992 Acorn Computers Limited. All rights reserved.

Published by Acorn Computers Technical Publications Department.

No part of this publication may be reproduced or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, or stored in any retrieval system of any nature, without the written permission of the copyright holder and the publisher, application for which shall be made to the publisher.

The product described in this manual is not intended for use as a critical component in life support devices or any system in which failure could be expected to result in personal injury.

The product described in this manual is subject to continuous development and improvement. All information of a technical nature and particulars of the product and its use (including the information and particulars in this manual) are given by Acorn Computers Limited in good faith. However, Acorn Computers Limited cannot accept any liability for any loss or damage arising from the use of any information or particulars in this manual.

If you have any comments on this manual, please complete the form at the back of the manual and send it to the address given there.

Acorn supplies its products through an international distribution network. Your supplier is available to help resolve any queries you might have.

Within this publication, the term 'BBC' is used as an abbreviation for 'British Broadcasting Corporation'.

ACORN, ACORNSOFT, ACORN DESKTOP PUBLISHER, ARCHIMEDES, ARTHUR, ECONET, MASTER, MASTER COMPACT, THE TUBE, VIEW and VIEWSHEET are trademarks of Acorn Computers Limited.

Adobe and PostScript are trademarks of Adobe Systems Inc

ARM is a trademark of Advanced RISC Machines Ltd

T_EX is a trademark of the American Mathematical Society

ImageWriter, LaserWriter and Macintosh are trademarks of Apple Computer Inc

DBase is a trademark of Ashton Tate Ltd

UNIX is a trademark of AT&T

Atari is a trademark of Atari Corporation

AutoCAD is a trademark of AutoDesk Inc

Amiga is a trademark of Commodore-Amiga Inc

Commodore is a trademark of Commodore Electronics Limited

SuperCalc is a trademark of Computer Associates

CorelDraw is a trademark of Corel Corporation

VT is a trademark of Digital Equipment Corporation

1st Word Plus is a trademark of GST Holdings Ltd

Deskjet, HP, HPGL, LaserJet and PaintJet are trademarks of Hewlett-Packard Corporation

Colourjet is a trademark of Integrex Ltd

IBM is a trademark of International Business Machines Corporation

ITC Zapf Dingbats is a trademark of International Typeface Corporation

Helvetica and Times are trademarks of Linotype Corporation

Lotus 123 is a trademark of The Lotus Corporation

MS-DOS is a trademark of Microsoft Corporation

MultiSync and NEC are trademarks of NEC Limited

Epson, EX and FX are trademarks of Seiko Epson Corporation

Sun is a trademark of Sun Microsystems Inc

Ethernet is a trademark of Xerox Corporation

All other trademarks are acknowledged.

Published by Acorn Computers Limited

ISBN for complete set of five volumes: 1 85250 110 3

ISBN for this volume: 1 85250 115 4

Edition 1

Part number 0470,295

Issue 1, December 1992

Contents

About this manual 1-ix

Part 1 – Introduction 1-1

An introduction to RISC OS 1-3
ARM Hardware 1-9
An introduction to SWIs 1-23
* Commands and the CLI 1-33
Generating and handling errors 1-41
OS_Byte 1-49
OS_Word 1-59
Software vectors 1-63
Hardware vectors 1-111
Interrupts and handling them 1-117
Events 1-145
Buffers 1-161
Communications within RISC OS 1-175

Part 2 – The kernel 1-195

Modules 1-197
Program Environment 1-283
Memory Management 1-337
Time and Date 1-399
Conversions 1-441
Extension ROMs 1-485

Part 3 – Kernel input/output 1-487

Character Output 1-489
VDU Drivers 1-527
Sprites 1-745
Character Input 1-835
The CLI 1-923
The rest of the kernel 1-935

Part 4 – Using filing systems 2-1

Introduction to filing systems 2-3
FileSwitch 2-9
FileCore 2-195
ADFS 2-261
RamFS 2-309
DOSFS 2-317
NetFS 2-337
NetPrint 2-385
PipeFS 2-405
ResourceFS 2-407
DeskFS 2-419
DeviceFS 2-421
Serial device 2-439
Parallel device 2-477
System devices 2-485
The Filer 2-489
Filer_Action and FilerSWIs 2-503
Free 2-511

Part 5 – Writing filing systems 2-519

Writing a filing system 2-521
Writing a FileCore module 2-587
Writing a device driver 2-597

Part 6 – Networking 2-607

Econet 2-609
File server protocol interface 2-693
The Broadcast Loader 2-727
BBC Econet 2-729
Hourglass 2-733
NetStatus 2-745

Part 7 – The desktop 3-1

The Window Manager 3-3
Pinboard 3-293
Drag A Sprite 3-299
The Filter Manager 3-303
The TaskManager module 3-313
TaskWindow 3-321
ShellCLI 3-329

Part 8 – Non-kernel input/output 3-333

- ColourTrans 3-335
- The Font Manager 3-403
- SuperSample module 3-519
- Draw module 3-523

Part 9 – Printing 3-553

- Printer Drivers 3-555
- Printer Dumpers 3-663
- PDumperSupport 3-679
- Printer definition files 3-697
- MakePSFont 3-733

Part 10 – Internationalisation 3-735

- MessageTrans 3-737
- International module 3-759
- The Territory Manager 3-785

Part 11 – Sound 4-1

- The Sound system 4-3
- WaveSynth 4-77

Part 12 – Utilities 4-81

- The Buffer Manager 4-83
- Squash 4-101
- ScreenBlank 4-107

Part 13 – Hardware support 4-113

- Expansion Cards and Extension ROMs 4-115
- Floating point emulator 4-163
- ARM3 Support 4-185
- The Portable module 4-195
- Joystick module 4-207

Part 14 – Programmer’s support 4-211

- Debugger 4-213
- The shared C library 4-231
- BASIC and BASICTrans 4-337
- Command scripts 4-345

Appendices and tables 4-353

- Appendix A: ARM assembler 4-355
- Appendix B: Warnings on the use of ARM assembler 4-377
- Appendix C: ARM procedure call standard 4-393
- Appendix D: Code file formats 4-413
- Appendix E: File formats 4-453
- Appendix F: System variables 4-495
- Appendix G: The Acorn Terminal Interface Protocol 4-503
- Appendix H: Registering names 4-545
- Table A: VDU codes 4-551
- Table B: Modes 4-553
- Table C: File types 4-557
- Table D: Character sets 4-561

Indexes Index-1

- Index of * Commands Index-3
- Index of OS_Bytes Index-11
- Index of OS_Words Index-15
- Numeric index of Service Calls Index-17
- Alphabetic index of Service Calls Index-21
- Numeric index of SWIs Index-25
- Alphabetic index of SWIs Index-43
- Index by subject Index-61

Indexes

Indexes

Index of * Commands

Command	Page
*Access	2-138
*AddFS	2-370
*AddTinyDir	3-294
*ADFS	2-298
*Alphabet	3-775
*Alphabets	3-777
*Append	2-140
*Audio	4-54
*Back	2-141
*BackDrop	3-295
*Backup	2-247
*BASIC	4-341
*BASIC64	4-341
*BlankTime	4-111
*BreakClr	4-217
*BreakList	4-218
*BreakSet	4-219
*Build	2-142
*Bye (FileCore version)	2-248
*Bye (NetFS version)	2-371
*Cache	4-192
*Cat	2-143
*CDir	2-144
*ChangeDynamicArea	3-319
*ChannelVoice	4-55
*CheckMap	2-249
*Close	2-145
*ColourTransLoadings	3-399
*ColourTransMap	3-400
*ColourTransMapSize	3-401
*Compact	2-250
*Configure	1-392
*Configure ADFSbuffers	2-299
*Configure ADFSDirCache	2-300
*Configure Baud	2-473
*Configure Boot	2-146

Command	Page
*Configure BST	3-844
*Configure Cache	4-193
*Configure Caps	1-915
*Configure Country	3-778
*Configure Data	2-475
*Configure Delay	1-916
*Configure Dir	2-251
*Configure Drive	2-301
*Configure DST	3-844
*Configure DumpFormat	2-147
*Configure FileSystem	2-149
*Configure Floppies	2-302
*Configure FontMax	3-498
*Configure FontMax1	3-500
*Configure FontMax2	3-502
*Configure FontMax3	3-504
*Configure FontMax4	3-506
*Configure FontMax5	3-506
*Configure FontSize	3-510
*Configure FS	2-372
*Configure GMT	3-845
*Configure HardDiscs	2-303
*Configure IDEDiscs	2-303
*Configure Ignore	1-524
*Configure Language	1-945
*Configure Lib	2-373
*Configure Loud	1-728
*Configure Mode	1-729
*Configure MonitorType	1-731
*Configure MouseStep	1-733
*Configure NoBoot	2-150
*Configure NoCaps	1-917
*Configure NoDir	2-252
*Configure NoDST	3-845
*Configure NoScroll	1-734
*Configure Print	1-525
*Configure PrinterBufferSize	1-395
*Configure PS	2-400
*Configure Quiet	1-735
*Configure RamFsSize	2-315
*Configure Repeat	1-918
*Configure RMASize	1-396

Command	Page
*Configure ScreenSize	1-736
*Configure Scroll	1-737
*Configure ShCaps	1-919
*Configure SoundDefault	4-57
*Configure SpriteSize	1-816
*Configure Step	2-305
*Configure Sync	1-738
*Configure SystemSize	1-397
*Configure Territory	3-846
*Configure TimeZone	3-847
*Configure Truncate	2-151
*Configure TV	1-739
*Configure WimpAutoMenuDelay	3-268
*Configure WimpDoubleClickDelay	3-269
*Configure WimpDoubleClickMove	3-270
*Configure WimpDragDelay	3-271
*Configure WimpDragMove	3-272
*Configure WimpFlags	3-273
*Configure WimpMenuDragDelay	3-275
*Configure WimpMode	3-276
*Continue	4-220
*Copy	2-152
*CopyBoot	2-334
*Count	2-155
*Countries	3-780
*Country	3-781
*Create	2-157
*Debug	4-221
*Defect	2-158
*Delete	2-160
*DeskFS	2-420
*Desktop	3-278
*Desktop_ADFSfiler	3-280
*Desktop_Configure	3-280
*Desktop_Draw	3-280
*Desktop_Edit	3-280
*Desktop_Filer	3-280
*Desktop_Free	3-280
*Desktop_NetFiler	3-280
*Desktop_Paint	3-280
*Desktop_Palette	3-280
*Desktop_Pinboard	3-280

Command	Page
*Desktop_RAMFSFiler	3-280
*Desktop_ResourceFiler	3-280
*Desktop_SetPalette	3-281
*Desktop_TaskManager	3-280
*Dir	2-161
*Dismount	2-253
*DOSMap	2-336
*Drive	2-254
*Dump	2-162
*Echo	1-481
*EnumDir	2-163
*Error	1-47
*Eval	1-482
*Ex	2-164
*Exec	2-165
*FileInfo	2-166
*Filer_Action	2-509
*Filer_Boot	2-497
*Filer_CloseDir	2-498
*Filer_OpenDir	2-500
*Filer_Run	2-502
*Filters	3-312
*FontCat	3-511
*FontInstall	3-512
*FontLibrary	3-513
*FontList	3-514
*FontRemove	3-515
*Format	2-307
*Free (FileCore version)	2-255
*Free (NetFS version)	2-374
*FS	2-375
*FX	1-56
*Go	1-323
*GOS	1-933
*Help	1-947
*I am	2-376
*IconSprites	3-282
*If	1-483
*Ignore	1-526
*Info	2-167
*InitStore	4-222
*Key	1-920

Command	Page
*Keyboard	3-783
*LCat	2-168
*LEx	2-169
*Lib	2-170
*List	2-171
*ListFS	2-377
*ListPS	2-401
*Load	2-172
*LoadFontCache	3-516
*Logon	2-378
*Map	2-256
*Memory	4-223
*MemoryA	4-225
*MemoryI	4-227
*Modules	1-266
*Mount (FileCore version)	2-257
*Mount (NetFS version)	2-379
*NameDisc	2-258
*Net	2-380
*NoDir	2-173
*NoLib	2-174
*NoURD	2-175
*Obey	4-350
*Opt 1	2-176
*Opt 4	2-177
*Pass	2-381
*Pin	3-296
*Pinboard	3-297
*PipeCopy	2-406
*PoduleLoad	4-157
*Podules	4-158
*PoduleSave	4-159
*Pointer	3-284
*Print	2-178
*PS	2-402
*QSound	4-58
*Quit	1-324
*Ram	2-316
*Remove	2-179
*RemoveTinyDir	3-298
*Rename	2-180
*ResourceFS	2-417

Command	Page
*RMClear	1-268
*RMEnsure	1-269
*RMFaster	1-270
*RMInsert	1-271
*RMKill	1-273
*RMLoad	1-274
*RMReInit	1-275
*RMRun	1-277
*RMTidy	1-278
*ROMModules	1-279
*Run	2-181
*Save	2-183
*SaveFontCache	3-517
*SChoose	1-817
*SCopy	1-818
*ScreenLoad	1-819
*ScreenSave	1-820
*SDDelete	1-821
*SDisc	2-382
*Set	1-325
*SetEval	1-327
*SetMacro	1-328
*SetPS	2-403
*SetType	2-184
*SFlipX	1-822
*SFlipY	1-823
*SGet	1-824
*Shadow	1-740
*ShellCLI	3-332
*ShellCLI_Task	3-324
*ShellCLI_TaskQuit	3-325
*Show	1-330
*ShowFree	2-517
*ShowRegs	4-229
*Shut	2-185
*ShutDown	2-186
*SInfo	1-825
*SList	1-826
*SLoad	1-827
*SMerge	1-828
*SNew	1-829
*Sound	4-60

Command	Page
*Speaker	4-62
*Spool	2-187
*SpoolOn	2-188
*SRename	1-830
*SSave	1-831
*Stamp	2-189
*Status	1-398
*Stereo	4-63
*TaskWindow	3-326
*Tempo	4-64
*Territories	3-848
*Time	1-439
*Title	2-259
*ToolSprites	3-285
*Tuning	4-65
*TV	1-741
*Type	2-190
*Unplug	1-281
*Unset	1-331
*Up	2-191
*URD	2-192
*Verify	2-260
*Voices	4-66
*Volume	4-67
*WimpMode	3-286
*WimpPalette	3-287
*WimpSlot	3-289
*WimpTask	3-291
*WimpWriteDir	3-292
*Wipe	2-193

Index of OS_Bytes

OS_BytE	Description	Page
0 (&00)	Display OS version information	1-936
2 (&02)	Specify input stream	1-854
3 (&03)	Specify output streams	1-506
4 (&04)	Cursor key status	1-856
5 (&05)	Write printer driver type	1-508
6 (&06)	Write printer ignore character	1-510
7 (&07)	Write RS423 receive rate	2-444
8 (&08)	Write RS423 transmit rate	2-445
9 (&09)	Write duration of first colour	1-628
10 (&0A)	Write duration of second colour	1-630
11 (&0B)	Write keyboard auto-repeat delay	1-858
12 (&0C)	Write keyboard auto-repeat rate	1-859
13 (&0D)	Disable event	1-148
14 (&0E)	Enable event	1-150
15 (&0F)	Flush buffer	1-164
18 (&12)	Reset function keys	1-861
19 (&13)	Wait for vertical sync (vsync)	1-631
20 (&14)	Reset font definitions	1-633
21 (&15)	Flush selected buffer	1-165
25 (&19)	Reset group of font definitions	1-635
70 (&46)	Read/write country number	3-771
71 (&47)	Read/write alphabet or keyboard	3-772
106 (&6A)	Select pointer / activate mouse	1-637
112 (&70)	Write VDU driver screen bank	1-639
113 (&71)	Write display hardware screen bank	1-641
114 (&72)	Write shadow/non-shadow state	1-643
117 (&75)	Read VDU status	1-645
118 (&76)	Reflect keyboard status in LEDs	1-862
121 (&79)	Keyboard scan	1-863
122 (&7A)	Keyboard scan from 16 decimal	1-865
124 (&7C)	Clear escape condition	1-866
125 (&7D)	Set escape condition	1-867
126 (&7E)	Acknowledge escape condition	1-868
127 (&7F)	Check for end of file	2-25
128 (&80)	Get buffer/mouse status	1-166
129 (&81)	Scan a for a particular key	1-870

OS_BytE	Description	Page
134 (&86)	Read text cursor position	1-647
135 (&87)	Read character at text cursor and screen mode	1-649
138 (&8A)	Insert character code into buffer	1-168
139 (&8B)	Write filing system options	2-27
143 (&8F)	Issue module service call	1-223
144 (&90)	Set vertical screen shift and interlace	1-650
145 (&91)	Get character from buffer	1-170
152 (&98)	Examine buffer status	1-171
153 (&99)	Insert character into buffer	1-172
156 (&9C)	Read/write asynchronous communications state	2-446
160 (&A0)	Read VDU variable value	1-652
161 (&A1)	Read battery backed RAM	1-363
162 (&A2)	Write battery backed RAM	1-365
163 (&A3)	Read/write general graphics information	1-654
165 (&A5)	Read output cursor position	1-656
176 (&B0)	50Hz counter	1-405
177 (&B1)	Read input source	1-873
181 (&B5)	Read/write RS423 input interpretation status	2-449
182 (&B6)	Read/write Nolgnore state	1-511
191 (&BF)	Read/write RS423 busy flag	2-451
192 (&C0)	Read RS423 control byte	2-452
193 (&C1)	Read/write flash counter	1-657
194 (&C2)	Read duration of second colour	1-659
195 (&C3)	Read duration of first colour	1-660
196 (&C4)	Read/write keyboard auto-repeat delay	1-874
197 (&C5)	Read/write keyboard auto-repeat rate	1-875
198 (&C6)	Read/write *Exec file handle	1-877
199 (&C7)	Read/write *Spool file handle	1-513
200 (&C8)	Read/write Break and Escape effect	1-879
201 (&C9)	Read/write keyboard disable flag	1-881
202 (&CA)	Read/write keyboard status byte	1-883
203 (&CB)	Read/write RS423 input buffer minimum space	2-453
204 (&CC)	Read/write RS423 ignore flag	2-455
211 (&D3)	Read/write bell channel	1-661
212 (&D4)	Read/write bell sound volume	1-662
213 (&D5)	Read/write bell frequency	1-664
214 (&D6)	Read/write bell duration	1-666
216 (&D8)	Read/write length of function key string	1-885
217 (&D9)	Read/write paged mode line count	1-667
218 (&DA)	Read/write bytes in VDU queue	1-669
219 (&DB)	Read/write Tab key code	1-887
220 (&DC)	Read/write escape character	1-889

OS_Byt	Description	Page
221 (&DD)	Read/write interpretation of input values &C0 - &CF	1-891
222 (&DE)	Read/write interpretation of input values &D0 - &DF	1-891
223 (&DF)	Read/write interpretation of input values &E0 - &EF	1-891
224 (&E0)	Read/write interpretation of input values &F0 - &FF	1-891
225 (&E1)	Read/write function key interpretation	1-891
226 (&E2)	Read/write Shift function key interpretation	1-891
227 (&E3)	Read/write Ctrl function key interpretation	1-891
228 (&E4)	Read/write Ctrl Shift function key interpretation	1-891
229 (&E5)	Read/write Escape key status	1-894
230 (&E6)	Read/write escape effects	1-896
236 (&EC)	Read/write character destination status	1-514
237 (&ED)	Read/write cursor key status	1-898
238 (&EE)	Read/write numeric keypad interpretation	1-900
240 (&F0)	Read country flag	3-774
242 (&F2)	Read RS423 baud rates	2-457
243 (&F3)	Read timer switch state	1-407
245 (&F5)	Read printer driver type	1-515
246 (&F6)	Read/write printer ignore character	1-517
247 (&F7)	Read/write Break key actions	1-902
250 (&FA)	Read VDU driver screen bank number	1-671
251 (&FB)	Read display screen bank number	1-672
253 (&FD)	Read last break type	1-904
254 (&FE)	Set effect of Shift Ctrl on numeric keypad	1-906
255 (&FF)	Read/write boot option	2-28

Index of OS_Words

OS_Word	Description	Page
0 (&00)	Read line from input stream to memory	1-908
1 (&01)	Read system clock	1-407
2 (&02)	Write system clock	1-411
3 (&03)	Read interval timer	1-412
4 (&04)	Write interval timer	1-413
9 (&09)	Read pixel logical colour	1-673
10 (&0A)	Read a character definition	1-675
11 (&0B)	Read the palette	1-677
12 (&0C)	Write the palette	1-679
13 (&0D)	Read current and last graphics cursors	1-681
14 (&0E)	Read CMOS clock	1-415 to 1-422
15 (&0F)	Write CMOS clock	1-423 to 1-428
21 (&15)	Define pointer and mouse parameters	1-683 to 1-696
22 (&16)	Write screen base address	1-697

Numeric index of Service Calls

The names given below omit the initial 'Service_' for clarity:

No	Name	Meaning	Page
&04	UKCommand	Unknown command	1-255
&06	Error	Error has occurred	1-256
&07	UKByte	Unknown OS_BytE	1-257
&08	UKWord	Unknown OS_Word	1-258
&09	Help	*Help has been called	1-259
&0B	ReleaseFIQ	Release FIQ	1-135
&0C	ClaimFIQ	Claim FIQ	1-136
&11	Memory	Memory controller about to be remapped	3-68
&12	StartUpFS	Start up filing system	2-22
&27	Reset	Post-Reset	3-69
&28	UKConfig	Unknown *Configure	1-260
&29	UKStatus	Unknown *Status	1-261
&2A	NewApplication	Application about to start	1-262
&40	FSRedeclare	Start up filing system	2-23
&41	Print	For internal use only	3-598
&42	LookupFileType	Look up file type	1-263
&43	International	International service	3-763
&44	Keyhandler	Keyboard handler	1-851
&45	PreReset	Pre-reset	4-134
&46	ModeChange	Mode change	1-617
&47	ClaimFIQinBackground	Claim FIQ in background	1-137
&48	ReAllocatePorts	Econet restarting	2-642
&49	StartWimp	Start up any resident module tasks using Wimp_StartTask	3-70
&4A	StartedWimp	Request to task modules to set taskHandle variable to zero	3-72
&4B	StartFiler	Request to filing-system-specific desktop filers to start up	2-490

No	Name	Meaning	Page
&4C	StartedFiler	Request to filing-system-specific desktop filers to set taskHandle variable to zero	2-492
&4D	PreModeChange	Mode change	1-618
&4E	MemoryMoved	OS_ChangeDynamicArea has just finished	1-361
&4F	FilerDying	Notification that the Filer module is about to close down	2-493
&50	ModeExtension	Allow soft modes	1-620
&51	ModeTranslation	Translate modes for unknown monitor types	1-624
&52	MouseTrap	The Wimp has detected a significant mouse movement	3-74
&53	WimpCloseDown	Notification that the Window Manager is about to close down a task	3-75
&54	Sound	Parts of the Sound system are starting or dying	4-17
&55	NetFS	Either a *Logon, a *Bye or a *SDisc/*Mount has occurred	2-342
&56	EconetDying	Econet is about to leave	2-643
&57	WimpReportError	Request to suspend trapping of VDU output so an error can be displayed	3-77
&59	ResourceFSStarted	The file structure inside ResourceFS has changed	2-411
&5A	ResourceFSDying	ResourceFS is killed	2-412
&5B	CalibrationChanged	Screen calibration is changed	3-344
&5C	WimpSaveDesktop	Save some state to a desktop boot file	3-78
&5D	WimpPalette	Palette change	3-79
&5E	MessageFileClosed	Message files have been closed	3-741
&5F	NetFSDying	NetFS is dying	2-343
&60	ResourceFSStarting	ResourceFS module is reloaded or reinitialised	2-413
&64	TerritoryManagerLoaded	Tell territory modules to register themselves.	3-790
&65	PDriverStarting	PDriver sharer module started	3-599

No	Name	Meaning	Page
&66	PDumperStarting	PDriverDP module starting up	3-676
&67	PDumperDying	PDriverDP module dying	3-677
&68	CloseFile	Close an object, and any children of that object	2-24
\$69	IdentifyDisc	Identify disc format	2-218
&6A	EnumerateFormats	Enumerate available disc formats	2-494
&6B	IdentifyFormat	Identify disc format name	2-277
&6C	DisplayFormatHelp	Display list of available formats	2-278
&6D	ValidateAddress	OS_ValidateAddress has been called with an unrecognised area	1-362
&6E	FontsChanged	New Font\$Path detected	3-417
&6F	BufferStarting	Notifies modules that the buffer manager is starting	4-85
&70	DeviceFSStarting	DeviceFS is starting	2-424
&71	DeviceFSDying	DeviceFS is dying	2-425
&72	SwitchingOutputToSprite	Output switched to sprite, mask or screen	1-760
&73	PostInit	All modules have been initialised	1-264
&75	TerritoryStarted	New territory starting	3-791
&76	MonitorLeadTranslation	Translate monitor lead ID	1-625
&78	PDriverGetMessage	Get common messages file	3-600
&79	DeviceDead	Device has been killed by DeviceFS	2-426
&7A	ScreenBlanked	Screen blanked by screen blanker	4-108
&7B	ScreenRestored	Screen restored by screen blunker	4-109
&7C	DesktopWelcome	Desktop starting	3-80
&7D	DiscDismounted	Disc dismounted	2-496
&7E	ShutDown	Switcher shutting down	3-81
&7F	PDriverChanged	Currently selected printer driver has changed	3-601
\$80	ShutdownComplete	Shutdown completed	3-82
&81	DeviceFSCloseRequest	Opening a device which already has the maximum number of streams open	2-427

No	Name	Meaning	Page
&82	InvalidateCache	Broadcast whenever the cache is flushed within ColourTrans	3-345
&83	ProtocolDying	Part of the AUN Driver Control Interface	2-644
&84	FindNetworkDriver	Part of the AUN Driver Control Interface	2-645
&85	WimpSpritesMoved	Wimp sprite pools have moved	3-77
&86	WimpRegisterFilters	Allows the Filter Manager to install filters with the Window Manager	3-77
&87	FilterManagerInstalled	Filter Manager starting up	3-304
&88	FilterManagerDying	Filter Manager dying	3-305
&89	ModeChanging	Mode change	1-627
&8A	Portable	Power down or up	4-197
&8B	NetworkDriverStatus	Part of the AUN Driver Control Interface	2-646
&8C	SyntaxError	Syntax error translation	1-265
&10800	ADFSPodule	Issued by ADFS to locate an ST506 expansion card	4-135
&10801	ADFSPoduleIDE	Issued by ADFS to locate an IDE expansion card	4-136
&10802	ADFSPoduleIDEDying	IDE expansion card dying	4-137

Alphabetic index of Service Calls

The names given below omit the initial 'Service_' for clarity:

Name	No	Meaning	Page
ADFSPodule	&10800	Issued by ADFS to locate an ST506 expansion card	4-135
ADFSPoduleIDE	&10801	Issued by ADFS to locate an IDE expansion card	4-136
ADFSPoduleIDEDying	&10802	IDE expansion card dying	4-137
BufferStarting	&6F	Notifies modules that the buffer manager is starting	4-85
CalibrationChanged	&5B	Screen calibration is changed	3-344
ClaimFIQ	&0C	Claim FIQ	1-136
ClaimFIQinBackground	&47	Claim FIQ in background	1-137
CloseFile	&68	Close an object, and any children of that object	2-24
DisplayFormatHelp	&6C	Display list of available formats	2-278
DesktopWelcome	&7C	Desktop starting	3-80
DeviceDead	&79	Device has been killed by DeviceFS	2-426
DeviceFSCloseRequest	&81	Opening a device which already has the maximum number of streams open	2-427
DeviceFSDying	&71	DeviceFS is dying	2-425
DeviceFSStarting	&70	DeviceFS is starting	2-424
DiscDismounted	&7D	Disc dismounted	2-496
EconetDying	&56	Econet is about to leave	2-643
EnumerateFormats	&6A	Enumerate available disc formats	2-494
Error	&06	Error has occurred	1-256
FilerDying	&4F	Notification that the Filer module is about to close down	2-493
FilterManagerDying	&88	Filter Manager dying	3-305
FilterManagerInstalled	&87	Filter Manager starting up	3-304

Name	No	Meaning	Page
FindNetworkDriver	&84	Part of the AUN Driver Control Interface	2-645
FontsChanged	&6E	New Font\$Path detected	3-417
FSRedeclare	&40	Start up filing system	2-23
Help	&09	*Help has been called	1-259
IdentifyDisc	\$69	Identify disc format	2-218
IdentifyFormat	&6B	Identify disc format name	2-277
International	&43	International service	3-763
Keyhandler	&44	Keyboard handler	1-851
LookupFileType	&42	Look up file type	1-263
InvalidateCache	&82	Broadcast whenever the cache is flushed within ColourTrans	3-345
Memory	&11	Memory controller about to be remapped	3-68
MemoryMoved	&4E	OS_ChangeDynamicArea has just finished	1-361
MessageFileClosed	&5E	Message files have been closed	3-741
ModeChange	&46	Mode change	1-617
ModeChanging	&89	Mode change	1-627
ModeExtension	&50	Allow soft modes	1-620
ModeTranslation	&51	Translate modes for unknown monitor types	1-624
MonitorLeadTranslation	&76	Translate monitor lead ID	1-625
MouseTrap	&52	The Wimp has detected a significant mouse movement	3-74
NetFS	&55	Either a *Logon, a *Bye or a *SDisc/*Mount has occurred	2-342
NetFSDying	&5F	NetFS is dying	2-343
NetworkDriverStatus	&8B	Part of the AUN Driver Control Interface	2-646
NewApplication	&2A	Application about to start	1-262
PDriverChanged	&7F	Currently selected printer driver has changed	3-601
PDriverGetMessage	&78	Get common messages file	3-600
PDriverStarting	&65	PDriver sharer module started	3-599
PDumperDying	&67	PDumperDP module dying	3-677
PDumperStarting	&66	PDumperDP module starting up	3-676

Name	No	Meaning	Page
Portable	&8A	Power down or up	4-197
PostInit	&73	All modules have been initialised	1-264
PreModeChange	&4D	Mode change	1-618
PreReset	&45	Pre-reset	4-134
Print	&41	For internal use only	3-598
ProtocolDying	&83	Part of the AUN Driver Control Interface	2-644
ReAllocatePorts	&48	Econet restarting	2-642
ReleaseFIQ	&0B	Release FIQ	1-135
Reset	&27	Post-Reset	3-69
ResourceFSDying	&5A	ResourceFS is killed	2-412
ResourceFSStarted	&59	The file structure inside ResourceFS has changed	2-411
ResourceFSStarting	&60	ResourceFS module is reloaded or reinitialised	2-413
ScreenBlanked	&7A	Screen blanked by screen blunker	4-108
ScreenRestored	&7B	Screen restored by screen blunker	4-109
ShutDown	&7E	Switcher shutting down	3-81
ShutdownComplete	\$80	Shutdown completed	3-82
Sound	&54	Parts of the Sound system are starting or dying	4-17
StartedFiler	&4C	Request to filing-system-specific desktop filers to set taskHandle variable to zero	2-492
StartedWimp	&4A	Request to task modules to set taskHandle variable to zero	3-72
StartFiler	&4B	Request to filing-system-specific desktop filers to start up	2-490
StartUpFS	&12	Start up filing system	2-22
StartWimp	&49	Start up any resident module tasks using Wimp_StartTask	3-70
SwitchingOutputToSprite	&72	Output switched to sprite, mask or screen	1-760
SyntaxError	&8C	Syntax error translation	1-265
TerritoryManagerLoaded	&64	Tell territory modules to register themselves.	3-790

Name	No	Meaning	Page
TerritoryStarted	&75	New territory starting	3-791
UKByte	&07	Unknown OS_Byte	1-257
UKCommand	&04	Unknown command	1-255
UKConfig	&28	Unknown *Configure	1-260
UKStatus	&29	Unknown *Status	1-261
UKWord	&08	Unknown OS_Word	1-258
ValidateAddress	&6D	OS_ValidateAddress has been called with an unrecognised area	1-362
WimpCloseDown	&53	Notification that the Window Manager is about to close down a task	3-75
WimpPalette	&5D	Palette change	3-79
WimpRegisterFilters	&86	Allows the Filter Manager to install filters with the Window Manager	3-77
WimpReportError	&57	Request to suspend trapping of VDU output so an error can be displayed	3-77
WimpSaveDesktop	&5C	Save some state to a desktop boot file	3-78
WimpSpritesMoved	&85	Wimp sprite pools have moved	3-77

Numeric index of SWIs

OS SWIs

OS SWIs (Kernel and FileSwitch)

Number	SWI Name	Page
&00	OS_WriteC	1-501
&01	OS_WriteS	1-503
&02	OS_Write0	1-504
&03	OS_NewLine	1-505
&04	OS_ReadC	1-852
&05	OS_CLI	1-929
&06	OS_Byte	1-54, Index-11
&07	OS_Word	1-61, Index-15
&08	OS_File	2-30
&09	OS_Args	2-46
&0A	OS_BGet	2-60
&0B	OS_BPut	2-62
&0C	OS_GPB	2-63
&0D	OS_Find	2-72
&0E	OS_ReadLine	1-910
&0F	OS_Control	1-296
&10	OS_GetEnv	1-298
&11	OS_Exit	1-300
&12	OS_SetEnv	1-302
&13	OS_IntOn	1-138
&14	OS_IntOff	1-139
&15	OS_CallBack	1-304
&16	OS_EnterOS	1-140
&17	OS_BreakPt	1-305
&18	OS_BreakCtrl	1-306
&19	OS_UnusedSWI	1-307
&1A	OS_UpdateMEMC	1-366
&1B	OS_SetCallBack	1-308
&1C	OS_Mouse	1-699
&1D	OS_Heap	1-368

Number	SWI Name	Page
&1E	OS_Module	1-224
&1F	OS_Claim	1-66
&20	OS_Release	1-68
&21	OS_ReadUnsigned	1-448
&22	OS_GenerateEvent	1-152
&23	OS_ReadVarVal	1-309
&24	OS_SetVarVal	1-311
&25	OS_GSInit	1-450
&26	OS_GSRead	1-452
&27	OS_GSTrans	1-454
&28	OS_BinaryToDecimal	1-456
&29	OS_FSControl	2-77
&2A	OS_ChangeDynamicArea	1-377
&2B	OS_GenerateError	1-45
&2C	OS_ReadEscapeState	1-912
&2D	OS_EvaluateExpression	1-457
&2E	OS_SpriteOp	1-761
&2F	OS_ReadPalette	1-701
&30	OS_ServiceCall	1-250
&31	OS_ReadVduVariables	1-703
&32	OS_ReadPoint	1-707
&33	OS_UpCall	1-177
&34	OS_CallAVector	1-70
&35	OS_ReadModeVariable	1-709
&36	OS_RemoveCursors	1-712
&37	OS_RestoreCursors	1-714
&38	OS_SWINumberToString	1-459
&39	OS_SWINumberFromString	1-461
&3A	OS_ValidateAddress	1-379
&3B	OS_CallAfter	1-429
&3C	OS_CallEvery	1-431
&3D	OS_RemoveTickerEvent	1-433
&3E	OS_InstallKeyHandler	1-914
&3F	OS_CheckModeValid	1-715
&40	OS_ChangeEnvironment	1-315
&41	OS_ClaimScreenMemory	1-380
&42	OS_ReadMonotonicTime	1-434
&43	OS_SubstituteArgs	1-463
&44	OS_PrettyPrint	1-518
&45	OS_Plot	1-717
&46	OS_WriteN	1-522
&47	OS_AddToVector	1-72

Number	SWI Name	Page
&48	OS_WriteEnv	1-317
&49	OS_ReadArgs	1-465
&4A	OS_ReadRAMFsLimits	1-382
&4B	OS_ClaimDeviceVector	1-121
&4C	OS_ReleaseDeviceVector	1-123
&4D	OS_DelinkApplication	1-74
&4E	OS_RelinkApplication	1-76
&4F	OS_HeapSort	1-937
&50	OS_ExitAndDie	1-318
&51	OS_ReadMemMapInfo	1-383
&52	OS_ReadMemMapEntries	1-384
&53	OS_SetMemMapEntries	1-386
&54	OS_AddCallBack	1-319
&55	OS_ReadDefaultHandler	1-321
&56	OS_SetECFOOrigin	1-718
&57	OS_SerialOp	2-459
&58	OS_ReadSysInfo	1-719
&59	OS_Confirm	1-940
&5A	OS_ChangedBox	1-724
&5B	OS_CRC	1-942
&5C	OS_ReadDynamicArea	1-388
&5D	OS_PrintChar	1-521
&5E	OS_ChangeRedirection	1-931
&5F	OS_RemoveCallBack	1-322
&60	OS_FindMemMapEntries	1-390
&61	OS_SetColour	1-726
&C0	OS_ConvertStandardDateAndTime	1-435
&C1	OS_ConvertDateAndTime	1-437
&D0-E8	OS_ConvertNameNumber	1-469
&E9	OS_ConvertFixedNetStation	1-473
&EA	OS_ConvertNetStation	1-475
&EB	OS_ConvertFileSize	1-477
&EC	OS_ConvertFileSize	1-479
&100-1FF	OS_Writel	1-523

IIC SWI

Number	SWI Name	Page
&240	IIC_Control	1-944

Cache SWIs (for ARM3)

Number	SWI Name	Page
&280	Cache_Control	4-186
&281	Cache_Cacheable	4-187
&282	Cache_Updateable	4-188
&283	Cache_Disruptive	4-189
&284	Cache_Flush	4-191

System Extension SWIs**Econet SWIs**

Number	SWI Name	Page
&40000	Econet_CreateReceive	2-647
&40001	Econet_ExamineReceive	2-649
&40002	Econet_ReadReceive	2-651
&40003	Econet_AbandonReceive	2-653
&40004	Econet_WaitForReception	2-654
&40005	Econet_EnumerateReceive	2-656
&40006	Econet_StartTransmit	2-657
&40007	Econet_PollTransmit	2-659
&40008	Econet_AbandonTransmit	2-660
&40009	Econet_DoTransmit	2-661
&4000A	Econet_ReadLocalStationAndNet	2-663
&4000B	Econet_ConvertStatusToString	2-664
&4000C	Econet_ConvertStatusToError	2-666
&4000D	Econet_ReadProtection	2-668
&4000E	Econet_SetProtection	2-670
&4000F	Econet_ReadStationNumber	2-672
&40010	Econet_PrintBanner	2-673
&40011	Econet_ReadTransportType	2-674
&40012	Econet_ReleasePort	2-675
&40013	Econet_AllocatePort	2-676
&40014	Econet_DeAllocatePort	2-677
&40015	Econet_ClaimPort	2-678
&40016	Econet_StartImmediate	2-679
&40017	Econet_DoImmediate	2-681
&40018	Econet_AbandonAndReadReceive	2-683
&40019	Econet_Version	2-685
&4001A	Econet_NetworkState	2-686
&4001B	Econet_PacketSize	2-687
&4001C	Econet_ReadTransportName	2-689

NetFS SWIs

Number	SWI Name	Page
&40040	NetFS_ReadFSNumber	2-344
&40041	NetFS_SetFSNumber	2-345
&40042	NetFS_ReadFSName	2-346
&40043	NetFS_SetFSName	2-347
&40044	NetFS_ReadCurrentContext	2-348
&40045	NetFS_SetCurrentContext	2-349
&40046	NetFS_ReadFSTimeouts	2-350
&40047	NetFS_SetFSTimeouts	2-351
&40048	NetFS_DoFSOp	2-352
&40049	NetFS_EnumerateFSList	2-354
&4004A	NetFS_EnumerateFS	2-356
&4004B	NetFS_ConvertDate	2-358
&4004C	NetFS_DoFSOpToGivenFS	2-360
&4004D	NetFS_UpdateFSList	2-362
&4004E	NetFS_EnumerateFSContexts	2-364
&4004F	NetFS_ReadUserId	2-366
&40050	NetFS_GetObjectUID	2-367
&40051	NetFS_EnableCache	2-369

Font manager SWIs

Number	SWI Name	Page
&40080	Font_CacheAddr	3-418
&40081	Font_FindFont	3-419
&40082	Font_LoseFont	3-423
&40083	Font_ReadDefn	3-424
&40084	Font_ReadInfo	3-426
&40085	Font_StringWidth	3-427
&40086	Font_Paint	3-429
&40087	Font_Caret	3-436
&40088	Font_ConverttoOS	3-438
&40089	Font_Converttopoints	3-439
&4008A	Font_SetFont	3-440
&4008B	Font_CurrentFont	3-441
&4008C	Font_FutureFont	3-443
&4008D	Font_FindCaret	3-444
&4008E	Font_CharBBox	3-446
&4008F	Font_ReadScaleFactor	3-448
&40090	Font_SetScaleFactor	3-449
&40091	Font_ListFonts	3-450
&40092	Font_SetFontColours	3-453

Number	SWI Name	Page
&40093	Font_SetPalette	3-455
&40094	Font_ReadThresholds	3-457
&40095	Font_SetThresholds	3-460
&40096	Font_FindCaretJ	3-461
&40097	Font_StringBBox	3-463
&40098	Font_ReadColourTable	3-465
&40099	Font_MakeBitmap	3-466
&4009A	Font_UnCacheFile	3-468
&4009B	Font_SetFontMax	3-470
&4009C	Font_ReadFontMax	3-472
&4009D	Font_ReadFontPrefix	3-473
&4009E	Font_SwitchOutputToBuffer	3-475
&4009F	Font_ReadFontMetrics	3-477
&400A0	Font_DecodeMenu	3-481
&400A1	Font_ScanString	3-483
&400A2	Font_SetColourTable	3-487
&400A3	Font_CurrentRGB	3-488
&400A4	Font_FutureRGB	3-489
&400A5	Font_ReadEncodingFilename	3-491
&400A6	Font_FindField	3-493
&400A7	Font_ApplyFields	3-494
&400A8	Font_LookupFont	3-496

Wimp (window manager) SWIs

Number	SWI Name	Page
&400C0	Wimp_Initialise	3-87
&400C1	Wimp_CreateWindow	3-89
&400C2	Wimp_Createlcon	3-96
&400C3	Wimp_DeleteWindow	3-108
&400C4	Wimp_DeleteIcon	3-110
&400C5	Wimp_OpenWindow	3-112
&400C6	Wimp_CloseWindow	3-114
&400C7	Wimp_Poll	3-115
&400C8	Wimp_RedrawWindow	3-129
&400C9	Wimp_UpdateWindow	3-131
&400CA	Wimp_GetRectangle	3-133
&400CB	Wimp_GetWindowState	3-135
&400CC	Wimp_GetWindowInfo	3-137
&400CD	Wimp_SetIconState	3-139
&400CE	Wimp_GetIconState	3-141
&400CF	Wimp_GetPointerInfo	3-143
&400D0	Wimp_DragBox	3-145

Number	SWI Name	Page
&400D1	Wimp_ForceRedraw	3-150
&400D2	Wimp_SetCaretPosition	3-152
&400D3	Wimp_GetCaretPosition	3-154
&400D4	Wimp_CreateMenu	3-156
&400D5	Wimp_DecodeMenu	3-161
&400D6	Wimp_WhichIcon	3-162
&400D7	Wimp_SetExtent	3-164
&400D8	Wimp_SetPointerShape	3-166
&400D9	Wimp_OpenTemplate	3-168
&400DA	Wimp_CloseTemplate	3-169
&400DB	Wimp_LoadTemplate	3-170
&400DC	Wimp_ProcessKey	3-173
&400DD	Wimp_CloseDown	3-175
&400DE	Wimp_StartTask	3-177
&400DF	Wimp_ReportError	3-179
&400E0	Wimp_GetWindowOutline	3-182
&400E1	Wimp_PollIdle	3-184
&400E2	Wimp_PlotIcon	3-186
&400E3	Wimp_SetMode	3-188
&400E4	Wimp_SetPalette	3-190
&400E5	Wimp_ReadPalette	3-192
&400E6	Wimp_SetColour	3-194
&400E7	Wimp_SendMessage	3-196
&400E8	Wimp_CreateSubMenu	3-199
&400E9	Wimp_SpriteOp	3-201
&400EA	Wimp_BaseOfSprites	3-203
&400EB	Wimp_BlockCopy	3-204
&400EC	Wimp_SlotSize	3-206
&400ED	Wimp_ReadPixTrans	3-208
&400EE	Wimp_ClaimFreeMemory	3-210
&400EF	Wimp_CommandWindow	3-212
&400F0	Wimp_TextColour	3-214
&400F1	Wimp_TransferBlock	3-216
&400F2	Wimp_ReadSysInfo	3-218
&400F3	Wimp_SetFontColours	3-220
&400F4	Wimp_GetMenuState	3-222
&400F5	Wimp_RegisterFilter	3-224
&400F6	Wimp_AddMessages	3-226
&400F7	Wimp_RemoveMessages	3-227
&400F8	Wimp_SetColourMapping	3-228

Sound SWIs

Number	SWI Name	Page
&40140	Sound_Configure	4-18
&40141	Sound_Enable	4-20
&40142	Sound_Stereo	4-21
&40143	Sound_Speaker	4-23
&40180	Sound_Volume	4-25
&40181	Sound_SoundLog	4-26
&40182	Sound_LogScale	4-27
&40183	Sound_InstallVoice	4-28
&40184	Sound_RemoveVoice	4-34
&40185	Sound_AttachVoice	4-35
&40186	Sound_ControlPacked	4-36
&40187	Sound_Tuning	4-37
&40188	Sound_Pitch	4-38
&40189	Sound_Control	4-39
&4018A	Sound_AttachNamedVoice	4-41
&4018B	Sound_ReadControlBlock	4-42
&4018C	Sound_WriteControlBlock	4-43
&401C0	Sound_QInit	4-44
&401C1	Sound_QSchedule	4-45
&401C2	Sound_QRemove	4-47
&401C3	Sound_QFree	4-48
&401C4	Sound_QSDDispatch	4-49
&401C5	Sound_QTempo	4-50
&401C6	Sound_QBeat	4-51
&401C7	Sound_QInterface	4-53

NetPrint SWIs

Number	SWI Name	Page
&40200	NetPrint_ReadPSNumber	2-389
&40201	NetPrint_SetPSNumber	2-390
&40202	NetPrint_ReadPSName	2-391
&40203	NetPrint_SetPSName	2-392
&40204	NetPrint_ReadPSTimeouts	2-393
&40205	NetPrint_SetPSTimeouts	2-394
&40206	NetPrint_BindPSName	2-395
&40207	NetPrint_ListServers	2-396
&40208	NetPrint_ConvertStatusToString	2-398

ADFS SWIs

Number	SWI Name	Page
&40240	ADFS_DiscOp	2-279
&40241	ADFS_HDC	2-280
&40242	ADFS_Drives	2-282
&40243	ADFS_FreeSpace	2-283
&40244	ADFS_Retries	2-284
&40245	ADFS_DescribeDisc	2-286
&40246	ADFS_VetFormat	2-287
&40247	ADFS_FlpProcessDCB	2-289
&40248	ADFS_ControllerType	2-290
&40249	ADFS_PowerControl	2-291
&4024A	ADFS_SetIDEController	2-293
&4024B	ADFS_IDEUserOp	2-294
&4024C	ADFS_MiscOp	2-296
&40250	ADFS_ECCSAndRetries	2-297

Podule (expansion card) SWIs

Number	SWI Name	Page
&40280	Podule_ReadID	4-138
&40281	Podule_ReadHeader	4-139
&40282	Podule_EnumerateChunks	4-140
&40283	Podule_ReadChunk	4-142
&40284	Podule_ReadBytes	4-143
&40285	Podule_WriteBytes	4-144
&40286	Podule_CallLoader	4-145
&40287	Podule_RawRead	4-147
&40288	Podule_RawWrite	4-148
&40289	Podule_HardwareAddress	4-150
&4028A	Podule_EnumerateChunksWithInfo	4-152
&4028B	Podule_HardwareAddresses	4-154
&4028C	Podule_ReturnNumber	4-156

Debugger SWI

Number	SWI Name	Page
&40380	Debugger_Disassemble	4-215

FPEmulator SWI

Number	SWI Name	Page
&40480	FPEmulator_Version	4-184

FileCore SWIs

Number	SWI Name	Page
&40540	FileCore_DiscOp	2-221
&40541	FileCore_Create	2-226
&40542	FileCore_Drives	2-228
&40543	FileCore_FreeSpace	2-229
&40544	FileCore_FloppyStructure	2-230
&40545	FileCore_DescribeDisc	2-232
&40546	FileCore_DiscardReadSectorsCache	2-233
&40547	FileCore_DiscFormat	2-234
&40548	FileCore_LayoutStructure	2-237
&40549	FileCore_MiscOp	2-238

Shell (ShellCLI) SWIs

Number	SWI Name	Page
&405C0	Shell_Create	3-330
&405C1	Shell_Destroy	3-331

Hourglass SWIs

Number	SWI Name	Page
&406C0	Hourglass_On	2-734
&406C1	Hourglass_Off	2-736
&406C2	Hourglass_Smash	2-737
&406C3	Hourglass_Start	2-738
&406C4	Hourglass_Percentage	2-739
&406C5	Hourglass_LEDs	2-741
&406C6	Hourglass_Colours	2-742

Draw SWIs

Number	SWI Name	Page
&40700	Draw_ProcessPath	3-535
&40702	Draw_Fill	3-538
&40704	Draw_Stroke	3-540
&40706	Draw_StrokePath	3-542
&40708	Draw_FlattenPath	3-544
&4070A	Draw_TransformPath	3-546

ColourTrans SWIs

Number	SWI Name	Page
&40740	ColourTrans_SelectTable	3-346
&40741	ColourTrans_SelectGCOLTable	3-348
&40742	ColourTrans_ReturnGCOL	3-350
&40743	ColourTrans_SetGCOL	3-351
&40744	ColourTrans_ReturnColourNumber	3-353
&40745	ColourTrans_ReturnGCOLForMode	3-354
&40746	ColourTrans_ReturnColourNumberForMode	3-355
&40747	ColourTrans_ReturnOppGCOL	3-356
&40748	ColourTrans_SetOppGCOL	3-357
&40749	ColourTrans_ReturnOppColourNumber	3-359
&4074A	ColourTrans_ReturnOppGCOLForMode	3-360
&4074B	ColourTrans_ReturnOppColourNumberForMode	3-362
&4074C	ColourTrans_GCOLToColourNumber	3-363
&4074D	ColourTrans_ColourNumberToGCOL	3-364
&4074E	ColourTrans_ReturnFontColours	3-365
&4074F	ColourTrans_SetFontColours	3-367
&40750	ColourTrans_InvalidateCache	3-369
&40751	ColourTrans_SetCalibration	3-370
&40752	ColourTrans_ReadCalibration	3-371
&40753	ColourTrans_ConvertDeviceColour	3-372
&40754	ColourTrans_ConvertDevicePalette	3-373
&40755	ColourTrans_ConvertRGBToCIE	3-374
&40756	ColourTrans_ConvertCIEToRGB	3-376
&40757	ColourTrans_WriteCalibrationToFile	3-378
&40758	ColourTrans_ConvertRGBToHSV	3-379
&40759	ColourTrans_ConvertHSVToRGB	3-381
&4075A	ColourTrans_ConvertRGBToCMYK	3-383
&4075B	ColourTrans_ConvertCMYKToRGB	3-385
&4075C	ColourTrans_ReadPalette	3-387
&4075D	ColourTrans_WritePalette	3-389
&4075E	ColourTrans_SetColour	3-391
&4075F	ColourTrans_MiscOp	3-393
&40760	ColourTrans_WriteLoadingsToFile	3-394
&40761	ColourTrans_SetTextColour	3-395
&40762	ColourTrans_SetOppTextColour	3-396
&40763	ColourTrans_GenerateTable	3-346

RamFS SWIs

Number	SWI Name	Page
&40780	RamFS_DiscOp	2-311
&40782	RamFS_Drives	2-312
&40783	RamFS_FreeSpace	2-313
&40785	RamFS_DescribeDisc	2-314

SuperSample SWIs

Number	SWI Name	Page
&40D80	Super_Sample90	3-520
&40D81	Super_Sample45	3-521

Filer_Action SWIs

Number	SWI Name	Page
&40F80	FilerAction_SendSelectedDirectory	2-504
&40F81	FilerAction_SendSelectedFile	2-505
&40F82	FilerAction_SendStartOperation	2-506

MessageTrans SWIs

Number	SWI Name	Page
&41500	MessageTrans_FileInfo	3-742
&41501	MessageTrans_OpenFile	3-743
&41502	MessageTrans_Lookup	3-745
&41503	MessageTrans_MakeMenus	3-747
&41504	MessageTrans_CloseFile	3-750
&41505	MessageTrans_EnumerateTokens	3-751
&41506	MessageTrans_ErrorLookup	3-753
&41507	MessageTrans_GSLookup	3-755
&41508	MessageTrans_CopyError	3-757

PDumper (printer dumper) SWIs

Number	SWI Name	Page
&41B00	PDumper_Info	3-680
&41B01	PDumper_Claim	3-682
&41B02	PDumper_Free	3-684
&41B03	PDumper_Find	3-685
&41B04	PDumper_StartJob	3-686
&41B05	PDumper_TidyJob	3-688
&41B06	PDumper_SetColour	3-689
&41B07	PDumper_PrepareStrip	3-691

Number	SWI Name	Page
&41B08	PDumper_LookupError	3-693
&41B09	PDumper_CopyFilename	3-695

ResourceFS SWIs

Number	SWI Name	Page
&41B40	ResourceFS_RegisterFiles	2-414
&41B41	ResourceFS_DeregisterFiles	2-415

DragASprite SWIs

Number	SWI Name	Page
&42400	DragASprite_Start	3-300
&42401	DragASprite_Stop	3-302

Filter manager SWIs

Number	SWI Name	Page
&42640	Filter_RegisterPreFilter	3-306
&42641	Filter_RegisterPostFilter	3-308
&42642	Filter_DeRegisterPreFilter	3-310
&42643	Filter_DeRegisterPostFilter	3-311

TaskManager SWIs

Number	SWI Name	Page
&42680	TaskManager_TaskNameFromHandle	3-314
&42681	TaskManager_EnumerateTasks	3-315
&42682	TaskManager_Shutdown	3-317

Squash SWIs

Number	SWI Name	Page
&42700	Squash_Compress	4-102
&42701	Squash_Decompress	4-104

DeviceFS SWIs

Number	SWI Name	Page
&42740	DeviceFS_Register	2-428
&42741	DeviceFS_Deregister	2-431
&42742	DeviceFS_RegisterObjects	2-432
&42743	DeviceFS_DeregisterObjects	2-433
&42744	DeviceFS_CallDevice	2-434
&42745	DeviceFS_Threshold	2-435

Number	SWI Name	Page
&42746	DeviceFS_ReceivedCharacter	2-436
&42747	DeviceFS_TransmitCharacter	2-437

Buffer Manager SWIs

Number	SWI Name	Page
&42940	Buffer_Create	4-86
&42941	Buffer_Remove	4-88
&42942	Buffer_Register	4-89
&42943	Buffer_Deregister	4-91
&42944	Buffer_ModifyFlags	4-92
&42945	Buffer_LinkDevice	4-94
&42946	Buffer_UnlinkDevice	4-96
&42947	Buffer_GetInfo	4-97
&42948	Buffer_Threshold	4-99

BASICTrans SWIs

Number	SWI Name	Page
&42C80	BASICTrans_HELP	4-338
&42C81	BASICTrans_Error	4-339
&42C82	BASICTrans_Message	4-340

Parallel port driver SWIs

Number	SWI Name	Page
&42EC0	Parallel_HardwareAddress	2-479
&42EC1	Parallel_Op	2-480

Portable SWIs

Number	SWI Name	Page
&42FC0	Portable_Speed	4-198
&42FC1	Portable_Control	4-200
&42FC2	Portable_ReadBMUVariable	4-202
&42FC3	Portable_WriteBMUVariable	4-204
&42FC4	Portable_CommandBMU	4-205

Territory manager SWIs

Number	SWI Name	Page
&43040	Territory_Number	3-792
&43041	Territory_Register	3-793
&43042	Territory_Deregister	3-795

MakePSFont SWI

Number	SWI Name	Page
&43440	MakePSFont_MakeFont	3-734

Joystick SWI

Number	SWI Name	Page
&43F40	Joystick_Read	4-208

Free space display SWIs

Number	SWI Name	Page
&444C0	Free_Register	2-512
&444C1	Free_DeRegister	2-516

DOSFS SWIs

Number	SWI Name	Page
&44B00	DOSFS_DiscFormat	2-329
&44B01	DOSFS_LayoutStructure	2-332

Application SWIs**PDriver (printer driver) SWIs**

Number	SWI Name	Page
&80140	PDriver_Info	3-602
&80141	PDriver_SetInfo	3-606
&80142	PDriver_CheckFeatures	3-608
&80143	PDriver_PageSize	3-609
&80144	PDriver_SetPageSize	3-611
&80145	PDriver_SelectJob	3-613
&80146	PDriver_CurrentJob	3-615
&80147	PDriver_FontSWI	3-616
&80148	PDriver_EndJob	3-617
&80149	PDriver_AbortJob	3-619
&8014A	PDriver_Reset	3-621
&8014B	PDriver_GiveRectangle	3-623
&8014C	PDriver_DrawPage	3-626
&8014D	PDriver_GetRectangle	3-628
&8014E	PDriver_CancelJob	3-629
&8014F	PDriver_ScreenDump	3-630
&80150	PDriver_EnumerateJobs	3-631
&80151	PDriver_SetPrinter	3-632

Number	SWI Name	Page
&43043	Territory_NumberToName	3-796
&43044	Territory_Exists	3-797
&43045	Territory_AlphabetNumberToName	3-798
&43046	Territory_SelectAlphabet	3-799
&43047	Territory_SetTime	3-800
&43048	Territory_ReadCurrentTimeZone	3-801
&43049	Territory_ConvertTimeToUTCOrdinals	3-802
&4304A	Territory_ReadTimeZones	3-806
&4304B	Territory_ConvertDateAndTime	3-807
&4304C	Territory_ConvertStandardDateAndTime	3-809
&4304D	Territory_ConvertStandardDate	3-811
&4304E	Territory_ConvertStandardTime	3-813
&4304F	Territory_ConvertTimeToOrdinals	3-815
&43050	Territory_ConvertTimeStringToOrdinals	3-817
&43051	Territory_ConvertOrdinalsToTime	3-819
&43052	Territory_Alphabet	3-821
&43053	Territory_AlphabetIdentifier	3-822
&43054	Territory_SelectKeyboardHandler	3-823
&43055	Territory_WriteDirection	3-824
&43056	Territory_CharacterPropertyTable	3-826
&43057	Territory_LowerCaseTable	3-828
&43058	Territory_UpperCaseTable	3-829
&43059	Territory_ControlTable	3-830
&4305A	Territory_PlainTable	3-831
&4305B	Territory_ValueTable	3-832
&4305C	Territory_RepresentationTable	3-833
&4305D	Territory_Collate	3-834
&4305E	Territory_ReadSymbols	3-836
&4305F	Territory_ReadCalendarInformation	3-839
&43060	Territory_NameToNumber	3-841
&43061	Territory_TransformString	3-841
&43075	Territory_ConvertTextToString	3-804

ScreenBlanker SWI

Number	SWI Name	Page
&43100	ScreenBlanker_Control	4-110

TaskWindow SWI

Number	SWI Name	Page
&43380	TaskWindow_TaskInfo	3-322

Number	SWI Name	Page
&80152	PDriver_CancelJobWithError	3-633
&80153	PDriver_SelectIllustration	3-634
&80154	PDriver_InsertIllustration	3-636
&80155	PDriver_DeclareFont	3-638
&80156	PDriver_DeclareDriver	3-640
&80157	PDriver_RemoveDriver	3-642
&80158	PDriver_SelectDriver	3-643
&80159	PDriver_EnumerateDrivers	3-644
&8015A	PDriver_MiscOp	3-645
&8015B	PDriver_MiscOpForDriver	3-655
&8015C	PDriver_SetDriver	3-656

SharedCLibrary SWIs

Number	SWI Name	Page
&80680	SharedCLibrary_LibInitAPCS_A	4-244
&80681	SharedCLibrary_LibInitAPCS_R	4-245
&80682	SharedCLibrary_LibInitModule	4-249

SWI Name	Number	Page
Buffer_Threshold	&42948	4-99
Buffer_UnlinkDevice	&42946	4-96

Cache SWIs (for ARM3)

SWI Name	Number	Page
Cache_Cacheable	&281	4-187
Cache_Control	&280	4-186
Cache_Disruptive	&283	4-189
Cache_Flush	&284	4-191
Cache_Updateable	&282	4-188

ColourTrans SWIs

SWI Name	Number	Page
ColourTrans_ColourNumberToGCOL	&4074D	3-364
ColourTrans_ConvertCIEToRGB	&40756	3-376
ColourTrans_ConvertCMYKToRGB	&4075B	3-385
ColourTrans_ConvertDeviceColour	&40753	3-372
ColourTrans_ConvertDevicePalette	&40754	3-373
ColourTrans_ConvertHSVToRGB	&40759	3-381
ColourTrans_ConvertRGBToCIE	&40755	3-374
ColourTrans_ConvertRGBToCMYK	&4075A	3-383
ColourTrans_ConvertRGBToHSV	&40758	3-379
ColourTrans_GCOLToColourNumber	&4074C	3-363
ColourTrans_GenerateTable	&40763	3-346
ColourTrans_InvalidateCache	&40750	3-369
ColourTrans_MiscOp	&4075F	3-393
ColourTrans_ReadCalibration	&40752	3-371
ColourTrans_ReadPalette	&4075C	3-387
ColourTrans_ReturnColourNumber	&40744	3-353
ColourTrans_ReturnColourNumberForMode	&40746	3-355
ColourTrans_ReturnFontColours	&4074E	3-365
ColourTrans_ReturnGCOL	&40742	3-350
ColourTrans_ReturnGCOLForMode	&40745	3-354
ColourTrans_ReturnOppColourNumber	&40749	3-359
ColourTrans_ReturnOppColourNumberForMode	&4074B	3-362
ColourTrans_ReturnOppGCOL	&40747	3-356
ColourTrans_ReturnOppGCOLForMode	&4074A	3-360
ColourTrans_SelectGCOLTable	&40741	3-348
ColourTrans_SelectTable	&40740	3-346
ColourTrans_SetCalibration	&40751	3-370
ColourTrans_SetColour	&4075E	3-391

Alphabetic index of SWIs

Index of SWIs

ADFS SWIs

SWI Name	Number	Page
ADFS_ControllerType	&40248	2-290
ADFS_DescribeDisc	&40245	2-286
ADFS_DiscOp	&40240	2-279
ADFS_Drives	&40242	2-282
ADFS_ECCSAndRetries	&40250	2-297
ADFS_FlpProcessDCB	&40247	2-289
ADFS_FreeSpace	&40243	2-283
ADFS_HDC	&40241	2-280
ADFS_IDEUserOp	&4024B	2-294
ADFS_MiscOp	&4024C	2-296
ADFS_PowerControl	&40249	2-291
ADFS_Retries	&40244	2-284
ADFS_SetIDEController	&4024A	2-293
ADFS_VetFormat	&40246	2-287

BASICTrans SWIs

SWI Name	Number	Page
BASICTrans_Error	&42C81	4-339
BASICTrans_HELP	&42C80	4-338
BASICTrans_Message	&42C82	4-340

Buffer Manager SWIs

SWI Name	Number	Page
Buffer_Create	&42940	4-86
Buffer_Deregister	&42943	4-91
Buffer_GetInfo	&42947	4-97
Buffer_LinkDevice	&42945	4-94
Buffer_ModifyFlags	&42944	4-92
Buffer_Register	&42942	4-89
Buffer_Remove	&42941	4-88

SWI Name	Number	Page
Draw_Stroke	&40704	3-540
Draw_StrokePath	&40706	3-542
Draw_TransformPath	&4070A	3-546

Econet SWIs

SWI Name	Number	Page
Econet_AbandonAndReadReceive	&40018	2-683
Econet_AbandonReceive	&40003	2-653
Econet_AbandonTransmit	&40008	2-660
Econet_AllocatePort	&40013	2-676
Econet_ClaimPort	&40015	2-678
Econet_ConvertStatusToError	&4000C	2-666
Econet_ConvertStatusToString	&4000B	2-664
Econet_CreateReceive	&40000	2-647
Econet_DeAllocatePort	&40014	2-677
Econet_DoImmediate	&40017	2-681
Econet_DoTransmit	&40009	2-661
Econet_EnumerateReceive	&40005	2-656
Econet_ExamineReceive	&40001	2-649
Econet_NetworkState	&4001A	2-686
Econet_PacketSize	&4001B	2-687
Econet_PollTransmit	&40007	2-659
Econet_PrintBanner	&40010	2-673
Econet_ReadLocalStationAndNet	&4000A	2-663
Econet_ReadProtection	&4000D	2-668
Econet_ReadReceive	&40002	2-651
Econet_ReadStationNumber	&4000F	2-672
Econet_ReadTransportName	&4001C	2-689
Econet_ReadTransportType	&40011	2-674
Econet_ReleasePort	&40012	2-675
Econet_SetProtection	&4000E	2-670
Econet_StartImmediate	&40016	2-679
Econet_StartTransmit	&40006	2-657
Econet_Version	&40019	2-685
Econet_WaitForReception	&40004	2-654

FileCore SWIs

SWI Name	Number	Page
FileCore_Create	&40541	2-226
FileCore_DescribeDisc	&40545	2-232
FileCore_DiscardReadSectorsCache	&40546	2-233

SWI Name	Number	Page
ColourTrans_SetFontColours	&4074F	3-367
ColourTrans_SetGCOL	&40743	3-351
ColourTrans_SetOppGCOL	&40748	3-357
ColourTrans_SetOppTextColour	&40762	3-396
ColourTrans_SetTextColour	&40761	3-395
ColourTrans_WriteCalibrationToFile	&40757	3-378
ColourTrans_WriteLoadingsToFile	&40760	3-394
ColourTrans_WritePalette	&4075D	3-389

Debugger SWI

SWI Name	Number	Page
Debugger_Disassemble	&40380	4-215

DeviceFS SWIs

SWI Name	Number	Page
DeviceFS_CallDevice	&42744	2-434
DeviceFS_Deregister	&42741	2-431
DeviceFS_DeregisterObjects	&42743	2-433
DeviceFS_ReceivedCharacter	&42746	2-436
DeviceFS_Register	&42740	2-428
DeviceFS_RegisterObjects	&42742	2-432
DeviceFS_Threshold	&42745	2-435
DeviceFS_TransmitCharacter	&42747	2-437

DOSFS SWIs

SWI Name	Number	Page
DOSFS_DiscFormat	&44B00	2-329
DOSFS_LayoutStructure	&44B01	2-332

DragASprite SWIs

SWI Name	Number	Page
DragASprite_Start	&42400	3-300
DragASprite_Stop	&42401	3-302

Draw SWIs

SWI Name	Number	Page
Draw_Fill	&40702	3-538
Draw_FlattenPath	&40708	3-544
Draw_ProcessPath	&40700	3-535

SWI Name	Number	Page
Font_MakeBitmap	&40099	3-466
Font_Paint	&40086	3-429
Font_ReadColourTable	&40098	3-465
Font_ReadDefn	&40083	3-424
Font_ReadEncodingFilename	&400A5	3-491
Font_ReadFontMax	&4009C	3-472
Font_ReadFontMetrics	&4009F	3-477
Font_ReadFontPrefix	&4009D	3-473
Font_ReadInfo	&40084	3-426
Font_ReadScaleFactor	&4008F	3-448
Font_ReadThresholds	&40094	3-457
Font_ScanString	&400A1	3-483
Font_SetColourTable	&400A2	3-487
Font_SetFont	&4008A	3-440
Font_SetFontColours	&40092	3-453
Font_SetFontMax	&4009B	3-470
Font_SetPalette	&40093	3-455
Font_SetScaleFactor	&40090	3-449
Font_SetThresholds	&40095	3-460
Font_StringBBox	&40097	3-463
Font_StringWidth	&40085	3-427
Font_SwitchOutputToBuffer	&4009E	3-475
Font_UnCacheFile	&4009A	3-468

FPEmulator SWI

SWI Name	Number	Page
FPEmulator_Version	&40480	4-184

Free space display SWIs

SWI Name	Number	Page
Free_DeRegister	&444C1	2-516
Free_Register	&444C0	2-512

Hourglass SWIs

SWI Name	Number	Page
Hourglass_Colours	&406C6	2-742
Hourglass_LEDs	&406C5	2-741
Hourglass_Off	&406C1	2-736
Hourglass_On	&406C0	2-734
Hourglass_Percentage	&406C4	2-739

SWI Name	Number	Page
Hourglass_Smash	&406C2	2-737
Hourglass_Start	&406C3	2-738

IIC SWI

SWI Name	Number	Page
IIC_Control	&240	1-944

Joystick SWI

SWI Name	Number	Page
Joystick_Read	&43F40	4-208

MakePSFont SWI

SWI Name	Number	Page
MakePSFont_MakeFont	&43440	3-734

MessageTrans SWIs

SWI Name	Number	Page
MessageTrans_CloseFile	&41504	3-750
MessageTrans_CopyError	&41508	3-757
MessageTrans_EnumerateTokens	&41505	3-751
MessageTrans_ErrorLookup	&41506	3-753
MessageTrans_FileInfo	&41500	3-742
MessageTrans_GSLookup	&41507	3-755
MessageTrans_Lookup	&41502	3-745
MessageTrans_MakeMenus	&41503	3-747
MessageTrans_OpenFile	&41501	3-743

NetFS SWIs

SWI Name	Number	Page
NetFS_ConvertDate	&4004B	2-358
NetFS_DoFSOp	&40048	2-352
NetFS_DoFSOpToGivenFS	&4004C	2-360
NetFS_EnableCache	&40051	2-369
NetFS_EnumerateFS	&4004A	2-356
NetFS_EnumerateFSContexts	&4004E	2-364
NetFS_EnumerateFSList	&40049	2-354
NetFS_GetObjectUID	&40050	2-367
NetFS_ReadCurrentContext	&40044	2-348
NetFS_ReadFSName	&40042	2-346

SWI Name	Number	Page
NetFS_ReadFSNumber	&40040	2-344
NetFS_ReadFSTimeouts	&40046	2-350
NetFS_ReadUserId	&4004F	2-366
NetFS_SetCurrentContext	&40045	2-349
NetFS_SetFSName	&40043	2-347
NetFS_SetFSNumber	&40041	2-345
NetFS_SetFSTimeouts	&40047	2-351
NetFS_UpdateFSList	&4004D	2-362

NetPrint SWIs

SWI Name	Number	Page
NetPrint_BindPSName	&40206	2-395
NetPrint_ConvertStatusToString	&40208	2-398
NetPrint_ListServers	&40207	2-396
NetPrint_ReadPSName	&40202	2-391
NetPrint_ReadPSNumber	&40200	2-389
NetPrint_ReadPSTimeouts	&40204	2-393
NetPrint_SetPSName	&40203	2-392
NetPrint_SetPSNumber	&40201	2-390
NetPrint_SetPSTimeouts	&40205	2-394

OS SWIs (Kernel and FileSwitch)

SWI Name	Number	Page
OS_AddCallBack	&54	1-319
OS_AddToVector	&47	1-72
OS_Args	&09	2-46
OS_BGet	&0A	2-60
OS_BinaryToDecimal	&28	1-456
OS_BPut	&0B	2-62
OS_BreakCtrl	&18	1-306
OS_BreakPt	&17	1-305
OS_Byte	&06	1-54,
		Index-11
OS_CallAfter	&3B	1-429
OS_CallAVector	&34	1-70
OS_CallBack	&15	1-304
OS_CallEvery	&3C	1-431
OS_ChangedBox	&5A	1-724
OS_ChangeDynamicArea	&2A	1-377
OS_ChangeEnvironment	&40	1-315
OS_ChangeRedirection	&5E	1-931

SWI Name	Number	Page
OS_CheckModeValid	&3F	1-715
OS_Claim	&1F	1-66
OS_ClaimDeviceVector	&4B	1-121
OS_ClaimScreenMemory	&41	1-380
OS_CLI	&05	1-929
OS_Confirm	&59	1-940
OS_Control	&0F	1-296
OS_ConvertDateAndTime	&C1	1-437
OS_ConvertFileSize	&EC	1-479
OS_ConvertFixedFileSize	&EB	1-477
OS_ConvertFixedNetStation	&E9	1-473
OS_ConvertNameNumber	&D0-E8	1-469
OS_ConvertNetStation	&EA	1-475
OS_ConvertStandardDateAndTime	&C0	1-435
OS_CRC	&5B	1-942
OS_DelinkApplication	&4D	1-74
OS_EnterOS	&16	1-140
OS_EvaluateExpression	&2D	1-457
OS_Exit	&11	1-300
OS_ExitAndDie	&50	1-318
OS_File	&08	2-30
OS_Find	&0D	2-72
OS_FindMemMapEntries	&60	1-390
OS_FSCtrl	&29	2-77
OS_GPB	&0C	2-63
OS_GenerateError	&2B	1-45
OS_GenerateEvent	&22	1-152
OS_GetEnv	&10	1-298
OS_GSInit	&25	1-450
OS_GSRead	&26	1-452
OS_GSTrans	&27	1-454
OS_Heap	&1D	1-368
OS_HeapSort	&4F	1-937
OS_InstallKeyHandler	&3E	1-914
OS_IntOff	&14	1-139
OS_IntOn	&13	1-138
OS_Module	&1E	1-224
OS_Mouse	&1C	1-699
OS_NewLine	&03	1-505
OS_Plot	&45	1-717
OS_PrettyPrint	&44	1-518
OS_PrintChar	&5D	1-521

SWI Name	Number	Page
OS_ReadArgs	&49	1-465
OS_ReadC	&04	1-852
OS_ReadDefaultHandler	&55	1-321
OS_ReadDynamicArea	&5C	1-388
OS_ReadEscapeState	&2C	1-912
OS_ReadLine	&0E	1-910
OS_ReadMemMapEntries	&52	1-384
OS_ReadMemMapInfo	&51	1-383
OS_ReadModeVariable	&35	1-709
OS_ReadMonotonicTime	&42	1-434
OS_ReadPalette	&2F	1-701
OS_ReadPoint	&32	1-707
OS_ReadRAMFsLimits	&4A	1-382
OS_ReadSysInfo	&58	1-719
OS_ReadUnsigned	&21	1-448
OS_ReadVarVal	&23	1-309
OS_ReadVduVariables	&31	1-703
OS_Release	&20	1-68
OS_ReleaseDeviceVector	&4C	1-123
OS_RelinkApplication	&4E	1-76
OS_RemoveCallBack	&5F	1-322
OS_Remove Cursors	&36	1-712
OS_RemoveTickerEvent	&3D	1-433
OS_Restore Cursors	&37	1-714
OS_SerialOp	&57	2-459
OS_ServiceCall	&30	1-250
OS_SetCallBack	&1B	1-308
OS_SetColour	&61	1-726
OS_SetECFOrigin	&56	1-718
OS_SetEnv	&12	1-302
OS_SetMemMapEntries	&53	1-386
OS_SetVarVal	&24	1-311
OS_SpriteOp	&2E	1-761
OS_SubstituteArgs	&43	1-463
OS_SWINumberFromString	&39	1-461
OS_SWINumberToString	&38	1-459
OS_UnusedSWI	&19	1-307
OS_UpCall	&33	1-177
OS_UpdateMEMC	&1A	1-366
OS_ValidateAddress	&3A	1-379
OS_Word	&07	1-61,

SWI Name	Number	Page
OS_Write0	&02	1-504
OS_WriteC	&00	1-501
OS_WriteEnv	&48	1-317
OS_WriteI	&100-1FF	1-523
OS_WriteN	&46	1-522
OS_WriteS	&01	1-503

Parallel port driver SWIs

SWI Name	Number	Page
Parallel_HardwareAddress	&42EC0	2-479
Parallel_Op	&42EC1	2-480

PDriver (printer driver) SWIs

SWI Name	Number	Page
PDriver_AbortJob	&80149	3-619
PDriver_CancelJob	&8014E	3-629
PDriver_CancelJobWithError	&80152	3-633
PDriver_CheckFeatures	&80142	3-608
PDriver_CurrentJob	&80146	3-615
PDriver_DeclareDriver	&80156	3-640
PDriver_DeclareFont	&80155	3-638
PDriver_DrawPage	&8014C	3-626
PDriver_EndJob	&80148	3-617
PDriver_EnumerateDrivers	&80159	3-644
PDriver_EnumerateJobs	&80150	3-631
PDriver_FontSWI	&80147	3-616
PDriver_GetRectangle	&8014D	3-628
PDriver_GiveRectangle	&8014B	3-623
PDriver_Info	&80140	3-602
PDriver_InsertIllustration	&80154	3-636
PDriver_MiscOp	&8015A	3-645
PDriver_MiscOpForDriver	&8015B	3-655
PDriver_PageSize	&80143	3-609
PDriver_RemoveDriver	&80157	3-642
PDriver_Reset	&8014A	3-621
PDriver_ScreenDump	&8014F	3-630
PDriver_SelectDriver	&80158	3-643
PDriver_SelectIllustration	&80153	3-634
PDriver_SelectJob	&80145	3-613
PDriver_SetDriver	&8015C	3-656
PDriver_SetInfo	&80141	3-606

SWI Name	Number	Page
PDriver_SetPageSize	&80144	3-611
PDriver_SetPrinter	&80151	3-632

PDumper (printer dumper) SWIs

SWI Name	Number	Page
PDumper_Claim	&41B01	3-682
PDumper_CopyFilename	&41B09	3-695
PDumper_Find	&41B03	3-685
PDumper_Free	&41B02	3-684
PDumper_Info	&41B00	3-680
PDumper_LookupError	&41B08	3-693
PDumper_PreparesStrip	&41B07	3-691
PDumper_SetColour	&41B06	3-689
PDumper_StartJob	&41B04	3-686
PDumper_TidyJob	&41B05	3-688

Podule (expansion card) SWIs

SWI Name	Number	Page
Podule_CallLoader	&40286	4-145
Podule_EnumerateChunks	&40282	4-140
Podule_EnumerateChunksWithInfo	&4028A	4-152
Podule_HardwareAddress	&40289	4-150
Podule_HardwareAddresses	&4028B	4-154
Podule_RawRead	&40287	4-147
Podule_RawWrite	&40288	4-148
Podule_ReadBytes	&40284	4-143
Podule_ReadChunk	&40283	4-142
Podule_ReadHeader	&40281	4-139
Podule_ReadID	&40280	4-138
Podule_ReturnNumber	&4028C	4-156
Podule_WriteBytes	&40285	4-144

Portable SWIs

SWI Name	Number	Page
Portable_CommandBMU	&42FC4	4-205
Portable_Control	&42FC1	4-200
Portable_ReadBMUVariable	&42FC2	4-202
Portable_Speed	&42FC0	4-198
Portable_WriteBMUVariable	&42FC3	4-204

RamFS SWIs

SWI Name	Number	Page
RamFS_DescribeDisc	&40785	2-314
RamFS_DiscOp	&40780	2-311
RamFS_Drives	&40782	2-312
RamFS_FreeSpace	&40783	2-313

ResourceFS SWIs

SWI Name	Number	Page
ResourceFS_DeregisterFiles	&41B41	2-415
ResourceFS_RegisterFiles	&41B40	2-414

ScreenBlanker SWI

SWI Name	Number	Page
ScreenBlanker_Control	&43100	4-110

SharedCLibrary SWIs

SWI Name	Number	Page
SharedCLibrary_LibInitAPCS_A	&80680	4-244
SharedCLibrary_LibInitAPCS_R	&80681	4-245
SharedCLibrary_LibInitModule	&80682	4-249

Shell (ShellCLI) SWIs

SWI Name	Number	Page
Shell_Create	&405C0	3-330
Shell_Destroy	&405C1	3-331

Sound SWIs

SWI Name	Number	Page
Sound_AttachNamedVoice	&4018A	4-41
Sound_AttachVoice	&40185	4-35
Sound_Configure	&40140	4-18
Sound_Control	&40189	4-39
Sound_ControlPacked	&40186	4-36
Sound_Enable	&40141	4-20
Sound_InstallVoice	&40183	4-28
Sound_LogScale	&40182	4-27
Sound_Pitch	&40188	4-38
Sound_QBeat	&401C6	4-51
Sound_QFree	&401C3	4-48

SWI Name	Number	Page
Sound_QInit	&401C0	4-44
Sound_QInterface	&401C7	4-53
Sound_QRemove	&401C2	4-47
Sound_QSchedule	&401C1	4-45
Sound_QSDispatch	&401C4	4-49
Sound_QTempo	&401C5	4-50
Sound_ReadControlBlock	&4018B	4-42
Sound_RemoveVoice	&40184	4-34
Sound_SoundLog	&40181	4-26
Sound_Speaker	&40143	4-23
Sound_Stereo	&40142	4-21
Sound_Tuning	&40187	4-37
Sound_Volume	&40180	4-25
Sound_WriteControlBlock	&4018C	4-43

Squash SWIs

SWI Name	Number	Page
Squash_Compress	&42700	4-102
Squash_Decompress	&42701	4-104

SuperSample SWIs

SWI Name	Number	Page
Super_Sample90	&40D80	3-520
Super_Sample45	&40D81	3-521

TaskManager SWIs

SWI Name	Number	Page
TaskManager_EnumerateTasks	&42681	3-315
TaskManager_Shutdown	&42682	3-317
TaskManager_TaskNameFromHandle	&42680	3-314

TaskWindow SWI

SWI Name	Number	Page
TaskWindow_TaskInfo	&43380	3-322

Territory manager SWIs

SWI Name	Number	Page
Territory_Alphabet	&43052	3-821
Territory_AlphabetIdentifier	&43053	3-822

SWI Name	Number	Page
Territory_AlphabetNumberToName	&43045	3-798
Territory_CharacterPropertyTable	&43056	3-826
Territory_Collate	&4305D	3-834
Territory_ControlTable	&43059	3-830
Territory_ConvertDateAndTime	&4304B	3-807
Territory_ConvertOrdinalsToTime	&43051	3-819
Territory_ConvertStandardDate	&4304D	3-811
Territory_ConvertStandardDateAndTime	&4304C	3-809
Territory_ConvertStandardTime	&4304E	3-813
Territory_ConvertTextToString	&43075	3-804
Territory_ConvertTimeStringToOrdinals	&43050	3-817
Territory_ConvertTimeToOrdinals	&4304F	3-815
Territory_ConvertTimeToUTCOrdinals	&43049	3-802
Territory_Deregister	&43042	3-795
Territory_Exists	&43044	3-797
Territory_LowerCaseTable	&43057	3-828
Territory_NameToNumber	&43060	3-841
Territory_Number	&43040	3-792
Territory_NumberToName	&43043	3-796
Territory_PlainTable	&4305A	3-831
Territory_ReadCalendarInformation	&4305F	3-839
Territory_ReadCurrentTimeZone	&43048	3-801
Territory_ReadSymbols	&4305E	3-836
Territory_ReadTimeZones	&4304A	3-806
Territory_Register	&43041	3-793
Territory_RepresentationTable	&4305C	3-833
Territory_SelectAlphabet	&43046	3-799
Territory_SelectKeyboardHandler	&43054	3-823
Territory_SetTime	&43047	3-800
Territory_TransformString	&43061	3-841
Territory_UpperCaseTable	&43058	3-829
Territory_ValueTable	&4305B	3-832
Territory_WriteDirection	&43055	3-824

Wimp (window manager) SWIs

SWI Name	Number	Page
Wimp_AddMessages	&400F6	3-226
Wimp_BaseOfSprites	&400EA	3-203
Wimp_BlockCopy	&400EB	3-204
Wimp_ClaimFreeMemory	&400EE	3-210
Wimp_CloseDown	&400DD	3-175
Wimp_CloseTemplate	&400DA	3-169

SWI Name	Number	Page
Wimp_CloseWindow	&400C6	3-114
Wimp_CommandWindow	&400EF	3-212
Wimp_CreateIcon	&400C2	3-96
Wimp_CreateMenu	&400D4	3-156
Wimp_CreateSubMenu	&400E8	3-199
Wimp_CreateWindow	&400C1	3-89
Wimp_DecodeMenu	&400D5	3-161
Wimp_DeleteIcon	&400C4	3-110
Wimp_DeleteWindow	&400C3	3-108
Wimp_DragBox	&400D0	3-145
Wimp_ForceRedraw	&400D1	3-150
Wimp_GetCaretPosition	&400D3	3-154
Wimp_GetIconState	&400CE	3-141
Wimp_GetMenuState	&400F4	3-222
Wimp_GetPointerInfo	&400CF	3-143
Wimp_GetRectangle	&400CA	3-133
Wimp_GetWindowInfo	&400CC	3-137
Wimp_GetWindowOutline	&400E0	3-182
Wimp_GetWindowState	&400CB	3-135
Wimp Initialise	&400C0	3-87
Wimp_LoadTemplate	&400DB	3-170
Wimp_OpenTemplate	&400D9	3-168
Wimp_OpenWindow	&400C5	3-112
Wimp_PlotIcon	&400E2	3-186
Wimp_Poll	&400C7	3-115
Wimp_PollIdle	&400E1	3-184
Wimp_ProcessKey	&400DC	3-173
Wimp_ReadPalette	&400E5	3-192
Wimp_ReadPixTrans	&400ED	3-208
Wimp_ReadSysInfo	&400F2	3-218
Wimp_RedrawWindow	&400C8	3-129
Wimp_RegisterFilter	&400F5	3-224
Wimp_RemoveMessages	&400F7	3-227
Wimp_ReportError	&400DF	3-179
Wimp_SendMessage	&400E7	3-196
Wimp_SetCaretPosition	&400D2	3-152
Wimp_SetColour	&400E6	3-194
Wimp_SetColourMapping	&400F8	3-228
Wimp_SetExtent	&400D7	3-164
Wimp_SetFontColours	&400F3	3-220
Wimp_SetIconState	&400CD	3-139
Wimp_SetMode	&400E3	3-188

SWI Name	Number	Page
Wimp_SetPalette	&400E4	3-190
Wimp_SetPointerShape	&400D8	3-166
Wimp_SlotSize	&400EC	3-206
Wimp_SpriteOp	&400E9	3-201
Wimp_StartTask	&400DE	3-177
Wimp_TextColour	&400F0	3-214
Wimp_TransferBlock	&400F1	3-216
Wimp_UpdateWindow	&400C9	3-131
Wimp_WhichIcon	&400D6	3-162

Index by subject

Symbols

- * Commands 1-4, 1-33 to 1-39
 - abbreviations *see* CLI (abbreviations)
 - example documentation 1-34
 - handling 1-213 to 1-217, 1-927
 - issuing from assembler 1-36
 - issuing from BASIC 1-36
 - issuing from C 1-37
 - naming 4-550
 - see also* CLI and Index of * Commands
- *Configure commands *see* Index of *Commands

Numerics

- 65Host application 1-839
- 82C710, 82C711 1-722 to 1-723
 - features mask 1-723

A

- a.out format 4-417
- A3010, A3020 1-9
- AAsm 4-356
 - see also* assembler
- abbreviations *see* CLI (abbreviations)
- access *see* files (attributes)
- 'Access to window denied' error 3-85
- 'Access violation' error 2-553
- Acorn Library Format *see* ALF
- Acorn Terminal Interface Protocol *see* TIP
- ADC end conversion event 1-154
- address bus *see* ARM (address bus)
- address exception vector 1-112
- addresses 1-141 to 1-144

- ADFS 2-3, 2-5, 2-6, 2-195, 2-261 to 2-308, 2-318, 2-326
 - selecting 2-298
 - see also* disc drives and discs
- Adjust *see* mouse (Adjust button)
- AIF 4-413, 4-434
 - header layout 4-436
 - image debugging 4-434
 - layout of an image 4-435
 - layout of uncompressed image 4-435
 - relocation 4-434
 - self relocation 4-438
 - zero-initialisation code 4-437
- Alarm application *see* applications (running)
- ALF 4-413, 4-430
 - Chunkindex 4-431
 - DataLength 4-431
 - EntryLength 4-431
 - LIB_DIRY 4-430
 - library file chunks 4-430
 - library file format types 4-430
 - object code libraries 4-433
 - overall structure 4-414
- Alias\$... variables 1-39, 1-325, 1-923, 1-926 to 1-927, 4-345, 4-352, 4-497
 - listing 1-326
- Alias\$@LoadType... variables 2-15 to 2-16, 2-172, 4-498, 4-546, 4-557
- Alias\$@PrintType... variables 4-498, 4-546
- Alias\$@RunType... variables 2-15 to 2-16, 2-84, 2-181, 3-51, 3-52, 4-498, 4-546, 4-557
- aliases *see* Alias\$... variables
- allocation bytes *see* discs (map)

- alphabets 3-409, 3-786, 4-561 to 4-571
 adding 3-769, 3-789
BFont 4-571
 currently selected 3-761, 3-772 to 3-773,
 3-775 to 3-776, 3-781 to 3-782,
 3-799
Cyrillic 4-567
Cyrillic2 4-570
 default 3-778 to 3-779
Greek 4-568
Hebrew 4-569
 identifiers 3-822
Latin1 4-563
Latin2 4-564
Latin3 4-565
Latin4 4-566
 listing 3-761, 3-777
 names 3-761, 3-765, 3-767, 3-798, 4-547
 see also alphabets (identifiers)
 numbers 3-760, 3-761, 3-765, 3-767, 3-768,
 3-798, 4-547
 selecting 3-761 to 3-762, 3-772 to 3-773,
 3-775 to 3-776, 3-781 to 3-782,
 3-789, 3-799, 3-821 to 3-822
Alt key 1-842, 1-849, 3-42, 4-562
analogue-to-digital convertor 1-154
AOF 4-413
 area attributes 4-419
 area name 4-419
 area size 4-421
 entry address area/ entry address
 offset 4-419
 format of the areas chunk 4-421
 format of the symbol table chunk 4-424
 format of type 1 relocation directives 4-423
 format of type 2 relocation directives 4-424
 header chunk format 4-417
 identification chunk (OBJ_IDFN) 4-427
 internal relocation directives 4-422
 number of areas 4-418
 number of relocations 4-421
 obsolete features 4-428
 overall structure 4-414
 relocation directives 4-422
 string table chunk (OBJ_STRT) 4-427
 symbol table 4-418
AOF and ALF files
 chunk names 4-416
 structure 4-414
APCS 4-393 to 4-411
 argument passing 4-397 to 4-398
 bindings 4-403 to 4-406
 control arrival 4-397 to 4-398
 control return 4-398
 design criteria 4-394
 examples 4-407 to 4-411
 purpose 4-393 to 4-394
 stack backtrace 4-400 to 4-403
 terminology for registers 4-395 to 4-396
App\$Dir variables 4-549
App\$Dir variables *see* paths
App\$Options variables 4-496, 4-547, 4-549
App\$Path variables *see* paths
App\$Path_Message variables 4-495
App\$PrintFile variables 4-496
App\$Resources variables 4-496
App\$Running variables 4-497
Application Image Format *see* AIF
 'Application needs at least...' errors 3-289
 applications 3-50 to 3-54
 absolute 2-84, 2-181
 address 1-352
 auto-starting 2-409
 booting 2-497
 icon bar *see* icon bar (adding and removing
 directories etc)
 internationalising *see* internationalisation
 memory areas 1-346
 memory available 1-287
 names 4-548
 pinboard – placing on *see* pinboard (adding
 directories etc)
 quitting 1-285, 1-293, 1-300, 1-318, 1-324,
 1-933, 3-53, 3-230 to 3-232, 3-233
 resource files 3-58 to 3-61
 see also directories (shared resources)

- running 2-181, 2-502
 from Alarm 3-243 to 3-244
 power on default *see* modules (running)
 starting 1-193, 1-262, 1-287, 1-293, 1-298,
 1-317, 1-323, 2-82 to 2-83,
 3-51 to 3-52, 4-496
 terminology 3-50
 updated flag 3-50
 vector usage 1-74 to 1-76
 workspace 1-347, 1-351
arcs *see* graphics (plotting)
area headers
 format 4-419
ArgsV 1-80, 1-81, 2-46
arguments *see* conversions (argument decoding)
ARM 1-9, 1-11 to 1-15, 4-185 to 4-194
 address bus 1-12
 cache 4-186 to 4-194
 cacheable memory 4-187
 disabling 4-186, 4-192 to 4-194
 disruptive memory 4-189 to 4-190
 enabling 4-186, 4-192 to 4-193
 flushing 4-189 to 4-191
 updateable memory 4-188
 changing mode 1-12
 clock rate 4-198 to 4-199
 data bus 1-12
 instruction set *see* assembler (instruction set)
 pipelining 1-12
 privileged modes 1-12, 1-13, 1-21
 processor modes *see individual modes (eg SVC mode)*
 processor status register *see* registers (PSR)
 program counter *see* registers (R15)
 registers *see* registers
 stack pointer *see* registers (R13)
 static 4-390
 subroutine link register *see* registers (R14)
 versions 1-11, 4-194
 word size 1-12
Arm Object Format *see* AOF
ARM Procedure Call Standard *see* APCS
- ARM3 Support module *see* ARM (cache)
!ArmBoot *see* files (boot)
arrow keys *see* cursors (keys)
Arthur 1-6
ASD 4-442
 AREAs
 items 4-442
data items
 Array 4-449
 Endproc 4-447
 Fileinfo 4-450
 order of 4-442
 Procedure 4-447
 Section 4-445
 Set 4-450
 source file position 4-444
 Struct 4-449
 Subrange 4-450
 Type 4-448
 Variable 4-448
data types 4-443
sourcepos field 4-444
assembler 4-355 to 4-391
 arithmetic instructions 4-367 to 4-368,
 4-383
 BASIC variables 4-357
 branching instructions 1-14, 4-359, 4-370
 comparison instructions 1-12,
 4-368 to 4-369, 4-379, 4-383, 4-386
 condition codes 4-364
 NV 4-377, 4-383
 coprocessor data transfer
 instructions 4-385, 4-389
 directives 4-362
 format of statements 4-361 to 4-362
 instruction set 4-365 to 4-376
 logical instructions 4-367 to 4-368, 4-383
 memory pointers 4-358
 memory usage 4-357
 move instructions 4-366, 4-383

assembler (*continued*)
 multiple register load/save
 instructions 4-373 to 4-375,
 4-380 to 4-381, 4-385, 4-386, 4-387,
 4-388
 multiply instructions 4-369, 4-383, 4-387
 no-op instruction 1-12, 4-377
 OPT directive 4-360
 passes 4-359
 shifts 4-365, 4-383
 single register load/save
 instructions 4-371 to 4-372, 4-384,
 4-390
 stacks 4-373 to 4-375
 swap instruction 4-385
 SWI instruction 1-14, 4-376, 4-382
 syntax of descriptions 4-365
 undefined instructions 4-377, 4-382, 4-386
 writeback 4-378, 4-380, 4-384, 4-385, 4-387,
 4-390
see also floating point
atexit() 1-348
attributes *see* files (attributes)
AUN Driver Control Interface 2-644 to 2-646
auto-repeat *see* keyboard (auto-repeat)

B

backdrop *see* desktop (backdrop)
backspace 1-543, 1-550, 1-556, 1-911
'Bad address for module Squash' error 4-101
'Bad breakpoint' error 4-214
'Bad calibration table' error 3-370
'Bad expression' error 1-313
'Bad input for module Squash' error 4-101
'Bad macro value' error 1-313
'Bad name' error 1-313
'Bad parameter passed to Wimp in R1'
 error 3-65
'Bad parameters' error 3-452
'Bad parameters for module Squash' error 4-101
'Bad string' error 1-313

'Bad variable type' error 1-313
'Bad work area extent' error 3-65
'Bad workspace for module Squash' error 4-101
base/limit pairs 4-427
BASIC 3-68, 4-337 to 4-343
assembler *see* assembler
 entering 4-341 to 4-343
 error messages 4-339
 help messages 4-338
 miscellaneous messages 4-340
BASICTrans module *see* BASIC
Battery Management Unit 4-202 to 4-205
 issuing commands to 4-205
 reading variables 4-202 to 4-203
 writing variables 4-204
see also Portable module
BBC Econet module 2-729 to 2-731
BBC I/O expansion card 1-154
beat counter *see* sound (beat counter)
beep *see* sound (bell)
bell *see* sound (bell)
BFont *see* alphabets (BFont)
BGetV 1-80, 1-81
bits per pixel *see* colours (bits per pixel)
BMU *see* Battery Management Unit
boot action 2-28, 2-146, 2-150
boot file *see* files (boot)
!Boot *see* applications (booting) and files (boot)
BPutV 1-80, 1-81
'Branch through zero' error 1-111
Break key 1-839, 1-846, 1-847, 1-879, 1-902, 2-96,
 2-146, 2-150
'Break point at ...' error 1-290
breakpoints
 listing 4-218
 removing 4-217
 resuming execution after 4-220
 setting 4-219
Broadcast Loader 2-343, 2-727 to 2-728, 2-746
buffer
 serial port *see* serial port (buffering)
'Buffer overflow' error 3-452, 3-492, 3-748

buffers 1-161 to 1-173, 1-491, 1-836,
2-602 to 2-603, 4-83 to 4-99
addresses 4-97
counting entries 1-92, 1-166
creating 4-83, 4-86 to 4-87
data format 1-162
deregistering 4-88, 4-91, 4-95
events 1-153, 4-84, 4-87, 4-90
flags word 4-87, 4-90, 4-92 to 4-93, 4-97
flushing 1-92, 1-164 to 1-165, 1-896, 4-88,
4-91
free space 1-92, 1-166, 1-189 to 1-190, 4-84,
4-87, 4-90, 4-97, 4-99
getting status 1-171
handles 4-83, 4-86, 4-90
information 4-97 to 4-98
inserting into 1-88, 1-168, 1-172, 1-189,
4-83, 4-84
keyboard 1-842, 1-843
manager 4-83 to 4-99
 killing 4-95
 starting 4-84, 4-85
mouse 1-543, 1-699
mouse data 1-163
numbers 1-162
owner change routine 4-83, 4-94 to 4-96
registering 4-83, 4-84, 4-85, 4-86 to 4-87,
4-89 to 4-90
removing 4-88, 4-95
removing from 1-90, 1-170, 1-190, 4-83, 4-84
resizing 1-163
sizes 1-162
thresholds 1-189 to 1-190, 4-84, 4-87, 4-90,
4-99
wake up routine 4-83, 4-87, 4-90,
4-94 to 4-96
button types *see* icons (button types)
byte
 definition 4-413
 sex 4-413
ByteV 1-70, 1-81, 2-731, 3-563, 3-565

C**C**

arrays 1-348
see also shared C library
static variables 1-348
storage manager 1-343 to 1-348
 bins (linked lists) 1-344
 block sizes 1-343
 coalescing blocks 1-344
 deallocating blocks 1-345
 description 1-344
 fragmentation 1-345
 overflow list 1-344
 splitting blocks 1-344
 stack allocation 1-346
C flag *see* registers (PSR)
CallBack flag 1-290, 1-292, 1-308
CallBacks 1-28, 1-292 to 1-293, 1-322,
1-334 to 1-335
 transient 1-292, 1-319, 1-322
'Can only print from applications when...'
 error 3-262
Caps Lock key 1-842, 1-862, 1-884, 1-915, 1-917,
1-919
caret
 defining 3-436 to 3-437
 gaining *see* windows (input focus)
 losing *see* windows (input focus)
 position 3-41, 3-42, 3-122, 3-152 to 3-155,
 3-415 to 3-416, 3-428,
 3-444 to 3-445, 3-461 to 3-462,
 3-484
 replacing 3-41, 3-132
carriage return 1-550, 1-561, 1-911, 2-142, 3-713
carry flag *see* registers (PSR)
ChangeEnvironmentV 1-83, 1-288
character input event 1-153

characters

colours *see* colours (text)
 conversion tables *see* conversions
 currency symbol 3-836 to 3-838
 decimal point 3-836 to 3-838
 definitions
 changing 1-546, 1-605, 3-769, 3-789
 default 1-546, 1-633 to 1-636, 4-563
 reading 1-546, 1-675, 3-585
 direction of I/O 3-219, 3-292, 3-824 to 3-825
 inputting 1-835 to 1-921, 2-436,
 3-40 to 3-43, 3-104, 3-122 to 3-123,
 3-173 to 3-174
 outputting 1-489 to 1-526, 1-528, 1-533,
 1-536, 1-545, 2-437, 3-47, 3-212
 printing *see* printing (characters)
 property tables 3-826 to 3-827
 reading from cursor 1-535, 1-545, 1-649
 redefining 1-499
 scaling 1-758, 1-802, 3-47
 sets *see* alphabets and Teletext
 size/spacing 1-546, 1-600
 thousands separator 3-836 to 3-838
see also strings

chunk file

- chunkId 4-415
- format 4-414
- header entries 4-415
- layout 4-415
- library file format 4-414
- object file format 4-414
- offset 4-415

CIE *see* conversions

circles *see* graphics (plotting)

CISC processors 1-11

CLI 1-81, 1-923 to 1-933

- abbreviations 1-926, 4-349
- accessing from Wimp 3-332
- calling 1-924, 1-929
- leading characters 1-924
- looking up commands 1-927
- parameters 1-928
- processing 1-924 to 1-927, 1-929

CLI\$Prompt variable 1-286, 1-328, 4-499
 clipping *see* VDU drivers (graphics and text windows)
 CLIV 1-81
 clocks *see* time and timers
 CMOS RAM 1-337, 1-339, 4-547

- allocation 1-355 to 1-360
- reading 1-363
- writing 1-365

CMYK *see* conversions

CnpV 1-70, 1-77, 1-82, 1-92, 4-83, 4-88, 4-91

colours 1-531 to 1-532, 1-538 to 1-540,
 3-45 to 3-47

background *see* colours (graphics and text)
 bits per pixel 1-528, 1-569
 border 1-531, 1-540
 calibration 3-338, 3-342 to 3-343, 3-344,
 3-370 to 3-373, 3-378,
 3-400 to 3-401

CIE *see* conversions

CMYK *see* conversions

default 1-572

devices 3-342 to 3-343, 3-372

flashing 1-540, 1-568, 1-588 to 1-589,
 1-628 to 1-630, 1-657 to 1-660,
 1-702, 3-387, 3-389

fonts *see* fonts (colours)

foreground *see* colours (graphics and text)

graphics 1-531, 1-534, 1-540, 1-566 to 1-567,
 1-572, 1-578, 1-726, 3-194 to 3-195,
 3-336, 3-339 to 3-341,
 3-348 to 3-352, 3-354,
 3-356 to 3-358, 3-360 to 3-361,
 3-363 to 3-364, 3-391 to 3-392,
 3-570, 3-585

HSV *see* conversions

internal colour numbers 3-336,
 3-339 to 3-341, 3-353, 3-355, 3-359,
 3-362, 3-363 to 3-364,
 3-568 to 3-569

inverse video 1-540, 1-598

loadings 3-341, 3-394, 3-399

- logical-physical mapping 1-531, 1-540, 1-568, 1-577, 3-228 to 3-229
- plotting actions 1-566, 1-572, 1-727, 3-18, 3-194 to 3-195, 3-351, 3-357, 3-391, 3-585
- pointer 1-531, 1-540, 1-544, 3-44
- printing *see* printing
- reading from pixel 1-535, 1-545, 1-673, 1-707
- text 1-531, 1-534, 1-540, 1-565, 1-572, 1-578, 1-598, 3-214 to 3-215, 3-395 to 3-396, 3-570
- tints 1-532, 1-539, 1-540, 1-571, 1-572, 1-596, 3-194, 3-389
- reading from pixel 1-535, 1-707
- translation tables *see* sprites (pixel translation)
- Wimp 3-45 to 3-47
- see also* ECF patterns and palette
- ColourTrans 3-335 to 3-401
- cache 3-337, 3-342, 3-345, 3-369
- see also* colours and conversions
- ColourV 1-70, 1-84, 1-102, 3-563, 3-566
- command line interpreter *see* CLI
- command line mode 1-33, 1-838
- accessing 1-933
- command scripts 4-345 to 4-352
- control characters 4-351
- creating 4-346
- differences between Command and Obey files 4-351 to 4-352
- parameters 4-348 to 4-349
- running 4-346, 4-348
- command shell 3-332
- common area symbols 4-428
- comparison routines 1-938
- compression *see* Squash
- computer
- schematic 1-10
- condition flags *see* registers (PSR)
- conditional execution 1-483
- configure options
- adding 1-260
- reading values 1-398
- writing values 1-392
- confirmation 1-940 to 1-941
- connection *see* TIP (connection)
- contention 1-12
- conversions 1-441 to 1-483
- alphabet name to alphabet number 3-761, 3-765
- alphabet number to alphabet name 3-761, 3-767, 3-798
- argument decoding 1-465 to 1-468
- characters to control characters 3-830
- characters to lower case 3-828
- characters to numeric values 3-832
- characters to unaccented version 3-831
- characters to upper case 3-829
- CIE to RGB 3-376 to 3-377
- CMYK to RGB 3-385 to 3-386
- colour number to GCOL 3-364
- country name to country number 3-762, 3-764
- country number to alphabet number 3-762, 3-768
- country number to country name 3-762, 3-766
- device colour to standard colour 3-372
- device palette to standard colours 3-373
- Eonet numbers to strings 1-446, 1-473 to 1-476
- Eonet status to string 2-616 to 2-620, 2-664 to 2-667
- expression evaluation 1-327, 1-444 to 1-446, 1-457, 1-482, 1-483
- file sizes to strings 1-447, 1-477 to 1-480
- fonts to Draw files 3-475
- GCOL to colour number 3-363
- GS string operations 1-442 to 1-444, 1-450 to 1-455, 1-481, 2-140, 2-142, 3-247, 4-351
- HSV to RGB 3-381 to 3-382

- conversions (*continued*)
 message token to string 3-745 to 3-746,
 3-753 to 3-756
 millipoins to OS units 3-408, 3-438,
 3-448 to 3-449
 numbers to strings 1-442, 1-456,
 1-469 to 1-472
 numeric values to characters 3-833
 OS units to millipoins 3-408, 3-439,
 3-448 to 3-449
 palette entries to font
 colours 3-365 to 3-368
 palette entry to colour number 3-353, 3-355,
 3-359, 3-362, 3-568 to 3-569
 palette entry to GCOL 3-350 to 3-352, 3-354,
 3-356 to 3-358, 3-360 to 3-361,
 3-570
 parameter substitution 1-446, 1-463
 RGB to CIE 3-374 to 3-375
 RGB to CMYK 3-383 to 3-384
 RGB to HSV 3-379 to 3-380
 signed integer to volume-scaled signed
 VIDC logarithm 4-10, 4-26, 4-70,
 4-72.
 signed VIDC logarithm to volume-scaled
 signed VIDC logarithm 4-11, 4-27,
 4-70
 sound pitch to phase accumulator
 value 4-38
 strings to numbers 1-442, 1-448
 SWI names to numbers 1-446, 1-461
 SWI numbers to names 1-446, 1-459
 territory name to number 3-841
 time (5-byte) to ordinals 3-802 to 3-803,
 3-815 to 3-816
 time (5-byte) to string 1-435 to 1-438,
 3-807 to 3-814
 time (BCD) to string 1-419
 time (file server) to time (RISC OS) 2-358
 time (ordinals) to 5-byte 3-819 to 3-820
 time (string) to ordinals 3-817 to 3-818
 coprocessors 4-163
- Copy key 1-530, 1-844, 1-852, 1-856, 1-892,
 1-920, 3-104, 3-123
 copy protection *see* discs (copy protecting)
 Copy\$Options variable 2-152 to 2-154, 4-499
 Count\$Options variable 2-155, 4-499
 counters *see* timers
 countries
 currently selected 3-762, 3-771, 3-774,
 3-781 to 3-782
 default 3-762, 4-562
 listing 3-762, 3-780
 names 3-760 to 3-761, 3-764, 3-766, 4-547
 numbers 3-760 to 3-761, 3-764, 3-766,
 3-768, 4-547
 selecting 3-762, 3-771, 3-781 to 3-782
 CPU *see* ARM
 CRC 1-942 to 1-943
 CSD *see* directories (currently selected)
 Ctrl key 1-842, 1-849, 1-884, 1-892, 1-906
 currency symbol *see* characters
 currently active object pointer 1-293, 1-315,
 2-82, 3-68, 3-207
 Currently Selected Directory *see* directories
 (currently selected)
 cursors 1-529, 1-542 to 1-543
 appearance 1-580, 1-581
 editing facility 1-530, 1-535, 1-577, 1-581,
 1-649, 1-852, 1-856, 1-859
 graphics 1-530, 1-542, 1-546, 1-577, 1-614,
 1-681
 homing 1-542, 1-560, 1-577, 1-614
 keys 1-843, 1-844, 1-852, 1-856, 1-892, 1-898,
 1-920, 3-104, 3-123
 linking 1-553
 movement 1-543, 1-556 to 1-559, 1-561,
 1-594, 1-607, 1-610, 1-615, 1-616
 reading position 1-543, 1-656, 1-681
 removing 1-543, 1-581, 1-712
 restoring 1-581, 1-714
 splitting 1-552
 text 1-530, 1-542, 1-577, 1-614, 1-615, 1-647
see also caret
 cyclic-redundancy check *see* CRC

Cyrillic alphabets *see* alphabets (Cyrillic...)

D

DACs 1-16

data abort vector 1-112

data bus *see* ARM (data bus)

'Data transfer failed: Receiver died' error 3-254

data transfer protocol *see* tasks (transferring data)

date *see* time and timers

daylight saving time 3-806

 selecting 3-844 to 3-845

DDT

 debug data items *see* ASD data items

 debugging AIF images 4-434

debugger 4-213 to 4-230

 entering 4-221

 exiting 4-214

debugging

 format of symbolic data 4-442

decompression *see* Squash

delete 1-543, 1-616, 1-911, 3-104

DeskFS 2-419 to 2-420

 selecting 2-420

desktop 3-219

 backdrop 3-295

 boot files 3-78, 3-245, 3-278, 3-289, 4-501

 directory displays 2-498 to 2-501,

 2-504 to 2-507, 3-16, 3-233 to 3-234

 entering 1-945, 2-177, 2-409, 3-70 to 3-73,

 3-80, 3-278 to 3-279

 free space display 2-511 to 2-517

 initialising ROM-resident utilities 3-280

 leaving 3-127, 3-232, 3-246, 3-317 to 3-318

see also shutting down

 saving state 3-78, 3-245 to 3-247, 3-289,

 3-319, 3-394, 3-399 to 3-400

 startup screen 3-80

Desktop Assembler *see* assembler

Desktop\$File variable 4-501

device drivers 2-5, 2-18, 2-421 to 2-437

 adding 2-5, 2-424, 2-428 to 2-430,

 2-597 to 2-605

 initialising 2-597

 interfaces 2-599 to 2-605

 introduction 2-598

 private word 2-430, 2-598

 receiving characters 2-436, 2-601,
 2-603 to 2-605

 removing 2-426, 2-431, 2-597, 2-600

 thresholds 2-435, 2-602 to 2-604

 transmitting characters 2-437, 2-600

 workspace pointer 2-430, 2-598

see also DeviceFS and devices

device overrun event 1-159

DeviceFS 1-191 to 1-192, 2-3, 2-5,

 2-421 to 2-437, 4-83, 4-95

 initialising 2-424

 shutting down 2-425

 special fields 2-422 to 2-423

 validation strings 2-422 to 2-423, 2-430

see also device drivers and devices

DeviceFS\$... variables 4-501

DeviceFS\$...\$Options variables 2-429, 2-431

devices 2-421 to 2-437, 4-501

 adding 2-428 to 2-430, 2-432, 2-597

 block 2-421, 2-428

 buffers 2-429

 calling 2-434

 character 2-421, 2-428

 claiming 3-247 to 3-249

 listing 2-602

 numbers 3-248, 4-550

 overloading 2-427

 removing 2-426, 2-431, 2-433, 2-597

see also device drivers, DeviceFS, interrupts

 (device drivers) and system devices

dialogue boxes 3-36 to 3-39

 informational 3-37

see also icons and windows

digital to analogue converters *see* DACs

direct memory access *see* DMA

- directories 2-11
 cache 2-300, 2-578
 checksum 2-212
 closing 2-24
 creating 1-181, 2-39, 2-144, 2-551, 2-718
 currently selected 2-12, 2-67, 2-80, 2-122, 2-125, 2-135, 2-137, 2-141, 2-161, 2-173, 2-191, 2-217, 2-257, 2-376, 2-378, 2-379, 2-382, 2-554, 2-561 to 2-562, 2-693, 2-700, 2-701, 2-716, 4-497
 displays *see* desktop (directory displays)
 entries 2-210
 formats 2-209 to 2-212
 header 2-210
 icon bar *see* icon bar (adding and removing directories etc)
 library *see* library
 listing 2-68 to 2-71, 2-86, 2-87, 2-90, 2-114, 2-143, 2-163, 2-164, 2-166, 2-167, 2-555 to 2-556, 2-558, 2-563 to 2-565, 2-566 to 2-567, 2-700, 2-704 to 2-705, 2-714 to 2-715
 pinboard – placing on *see* pinboard (adding directories etc)
 previously selected 2-10, 2-12, 2-122, 2-135, 2-137, 2-141, 4-497
 privilege 2-67, 2-561 to 2-562
 reading path of 2-137
 reading *see* directories (listing)
 resources *see* ResourceFS
 root 2-11, 2-203
 reading 2-230
 selecting 2-11, 2-80, 2-122, 2-135, 2-141, 2-161, 2-191, 2-251 to 2-252, 2-257, 2-342, 2-376, 2-378, 2-379, 2-382, 2-504, 2-554, 2-693, 2-700, 2-701
 defaults 2-217
 shared resources 3-61, 4-549
 tail 2-211
 titles 2-259
 user root 2-12, 2-80, 2-126, 2-135, 2-137, 2-161, 2-175, 2-192, 2-217, 2-257, 2-376, 2-378, 2-379, 2-382, 2-693, 2-700, 4-497
see also library, and files for topics omitted above
'Directory... is a directory' error 2-553
disassembling instructions 4-215
disc cycle id 2-322 to 2-323
disc drives
 controller 2-263
 alternative 2-280, 2-293, 4-135 to 4-137
 powering down 4-197, 4-200 to 4-201
 type 2-290
interface signals 2-272 to 2-274
locking 2-243, 2-296, 2-595 to 2-596
number of 2-302 to 2-304
numbers 2-216
parking heads 2-104, 2-186, 2-221 to 2-225, 2-248, 2-253, 2-279, 2-565, 2-592 to 2-594
polling for changes 2-242, 2-296, 2-595 to 2-596
polling period 2-245, 2-296, 2-595 to 2-596
reading information 2-228, 2-282, 2-312
retries 2-284
selecting 2-254, 2-301
specification required 2-264 to 2-271
spinning down 2-291 to 2-292, 2-596
stepping heads 2-221 to 2-225, 2-279, 2-305 to 2-306, 2-592 to 2-594
timeouts 2-223, 2-596
unlocking 2-244, 2-296, 2-595 to 2-596
'Disc not found' error 3-64
'Disc not known' error 2-216
'Disc not present' error 2-216, 3-64
'Disc not understood...' error 2-322
discs
 addresses 2-206, 2-208 to 2-209, 2-223
 internal 2-209
 physical 2-208 to 2-209
allocation unit 2-203
background transfers 2-593 to 2-594

boot block 2-203, 2-213 to 2-215, 2-592
 checksum 2-215
disc record *see* discs (record)
 DOS – copying 2-334
 hardware parameters 2-214
 partition descriptor 2-214
 boot option 2-27, 2-91, 2-129, 2-130, 2-143,
 2-177, 2-558, 2-560 to 2-561,
 2-572 to 2-573, 2-716
 changing 2-216
 compacting 2-250
 copy protecting 2-263 to 2-264
 copying 2-247
 cycle id 2-219
 defect list 2-213, 2-571
 alternate 2-222
 defects 2-123, 2-158, 2-203, 2-260
 mapping out 2-124, 2-158, 2-572
 dismounting 2-104, 2-186, 2-253, 2-496
 ejecting 2-246, 2-296, 2-595 to 2-596
 errors 2-274 to 2-276
 format specification string 2-277
 format specifier 2-235, 2-330
 format structure 2-224, 2-235, 2-330
 formats 2-197, 2-307
 checking achievable 2-234 to 2-236,
 2-287, 2-325, 2-329 to 2-331
 identifying 2-6, 2-218 to 2-220, 2-277,
 2-319, 2-321, 2-324
 listing 2-278, 2-324, 2-494 to 2-495
 logical layout 2-197
 physical layout 2-197
 selecting 2-324 to 2-325
 vetting 2-234, 2-287 to 2-288, 2-325,
 2-329
 formatting 2-6, 2-221 to 2-225, 2-263, 2-279,
 2-307 to 2-308, 2-311, 2-319,
 2-324 to 2-326, 2-592 to 2-594
 fragments 2-203 to 2-205
 free space 2-131, 2-155, 2-203, 2-204, 2-229,
 2-250, 2-255, 2-283, 2-313, 2-374,
 2-514, 2-574 to 2-575, 2-718
see also desktop (free space display)

granularity 2-203
 heads 2-198
 interleaved sides 2-198
 largest creatable object 2-131, 2-229, 2-283,
 2-313
 map 2-199 to 2-208
 allocation bytes 2-203 to 2-205
 blocks 2-201
 checking 2-249
 checksums 2-200 to 2-201
 displaying 2-256
 fragment blocks 2-204
 fragment ids 2-204 to 2-205
 new format 2-201 to 2-208
 old format 2-200 to 2-201
 reading 2-230, 2-574
 zones 2-201
 mounting 2-217, 2-240 to 2-241,
 2-251 to 2-252, 2-257, 2-284, 2-296,
 2-342, 2-379, 2-382, 2-595 to 2-596,
 2-700
 name 2-143, 2-216, 2-322 to 2-323, 2-513,
 2-560 to 2-561
 naming 2-258, 2-575
 reading id 2-221 to 2-225, 2-279, 2-311,
 2-592 to 2-594
 record 2-202 to 2-203, 2-214, 2-240, 2-321,
 2-592
 reading 2-232, 2-286, 2-314
 sequenced sides 2-198
 size 2-131
 maximum 2-205 to 2-206
 specifying 2-216 to 2-217, 2-221 to 2-225,
 2-279, 2-311, 2-592 to 2-594
 updating 2-133
 verifying 2-221 to 2-225, 2-260, 2-279, 2-284,
 2-311, 2-592 to 2-594
see also sectors and tracks
 display *see* monitor and screen
 DMA 1-16, 1-21

DOSFS 2-3, 2-6, 2-317 to 2-336
 data corruption 2-328
 filename mapping 2-327 to 2-328
 SWI numbers 2-328
see also discs, image files and image filing systems
 DragASprite module 3-299 to 3-302
 dragging *see* sprites and Wimp (dragging)
 Draw
 file format 4-457 to 4-469
 object types 4-548
 tagged object types 4-548
 Draw application 3-634
 Draw module 3-523 to 3-551
 Bezier curves 3-524, 3-528, 3-550
 flattening 3-524, 3-527, 3-531, 3-534,
 3-535 to 3-537, 3-538, 3-540,
 3-544 to 3-545, 3-572
 cap styles 3-532, 3-551
 dash patterns 3-533
 dashed lines 3-524, 3-536, 3-540
 data structures 3-528 to 3-533
 element types 3-524, 3-528 to 3-529
 examples 3-548 to 3-551
 fill styles 3-530, 3-536, 3-539, 3-541
 filling 3-524, 3-527, 3-533, 3-535 to 3-539,
 3-572
 floating point support 3-527
 internal units 3-525, 3-530, 3-533
 join styles 3-532, 3-551
 line caps 3-524
 line thickness 3-531, 3-536, 3-541, 3-551
 mitre limits 3-532
 moves 3-528
 path elements 3-524
 paths 3-524, 3-528 to 3-529
 continuing 3-528
 ending 3-528
 printing 3-526, 3-527, 3-534
 see also printing
 rotation 3-526, 3-530
 scaling 3-526, 3-530, 3-533

stroking 3-524, 3-527, 3-529, 3-533,
 3-535 to 3-537, 3-540 to 3-547,
 3-572, 3-573
 subpaths 3-524, 3-528 to 3-529
 closing 3-524, 3-528 to 3-529, 3-536,
 3-538
 terminology 3-524 to 3-525
 transform units 3-525, 3-530
 transformation matrices 3-524, 3-526,
 3-530, 3-534, 3-535 to 3-537,
 3-546 to 3-547, 3-548, 3-572
 translation 3-526, 3-530, 3-550
 user units 3-525, 3-533
 winding rules 3-524, 3-526
 DrawV 1-70, 1-84, 1-99, 3-563, 3-571
 drives *see* disc drives

E

ECF patterns 1-532, 1-540 to 1-542, 1-576, 1-578,
 1-726, 3-45, 3-46, 3-194, 3-205, 3-341,
 3-351, 4-555
 default 1-542, 1-590
 defining 1-582
 examples 1-742 to 1-744
 native/BBC 1-539, 1-542, 1-582, 1-597
 origin 1-542, 1-599, 1-718
 reading 1-676
 simple 1-592
 sprites' usage 1-752
 Econet 1-135, 2-337, 2-385, 2-609 to 2-731,
 2-745 to 2-746
 background tasks 2-624 to 2-627
 banner 2-673
 broadcast transmissions 2-627 to 2-628
 local 2-628
 long 2-628
 control blocks *see* Econet (RxCBs and TxCBs)
 Count 2-615
 data frame *see* Econet (frames)
 Delay 2-615
 detecting 2-671, 2-691

- error handling 2-616 to 2-620, 2-666
 events 2-623 to 2-627
final acknowledge frame *see Econet (frames)*
 flag bytes 2-620, 2-641
 frames 2-611
hourglass *see NetStatus*
 immediate operations 2-629 to 2-637,
 2-668 to 2-671, 2-679 to 2-682
 Continue 2-635
 GetRegisters 2-636 to 2-637
 Halt 2-635
 JSR 2-631 to 2-632
 MachinePeek 2-635 to 2-636
 OSProcedureCall 2-631 to 2-632, 2-634
 Peek 2-630
 Poke 2-630
 UserProcedureCall 2-631 to 2-634
 killing 2-643
 local loopback 2-628 to 2-629, 2-641
 message tokens 2-619 to 2-620
 net numbers 2-627, 2-638 to 2-640, 2-663,
 2-672, 2-690
 obsolete calls 2-729 to 2-731
 packets 2-611, 2-627
 size 2-614, 2-687 to 2-688
 port numbers 2-620 to 2-623, 2-640
 allocation 2-621 to 2-623,
 2-676 to 2-677
 claiming 2-621 to 2-623, 2-676, 2-678
 releasing 2-621 to 2-623, 2-675, 2-677
 wild 2-640
 powering down 4-197, 4-200 to 4-201
 protection word 2-637, 2-668 to 2-671
 receiving data 1-157, 2-612 to 2-614,
 2-651 to 2-652, 2-683 to 2-684
 remote procedure calls 1-155, 1-158
 RxCBs 2-612 to 2-614
 abandoning 2-613, 2-653,
 2-654 to 2-655, 2-683 to 2-684
 claiming memory for 2-612, 2-647
 creating 2-612, 2-647 to 2-648
 listing handles 2-656
 polling 2-613, 2-654 to 2-655
 status 2-612, 2-613, 2-649 to 2-650,
 2-654 to 2-655
 wild 2-626
scout acknowledge frame *see Econet (frames)*
scout frame *see Econet (frames)*
 sequence number 2-707, 2-708
 starting 2-637, 2-642
 station numbers 2-627, 2-638 to 2-639,
 2-663, 2-672, 2-690
 transmitting data 1-158, 2-614 to 2-616,
 2-641, 2-657 to 2-658
 retries 2-615 to 2-616
 transport
 name 2-689
 state 2-686
 type 2-674
 version 2-685
 TxCBs 2-614 to 2-616
 abandoning 2-616, 2-660,
 2-661 to 2-662, 2-681 to 2-682
 claiming memory for 2-616, 2-658,
 2-680
 creating 2-614, 2-657 to 2-658,
 2-661 to 2-662, 2-679 to 2-682
 polling 2-616, 2-661 to 2-662,
 2-681 to 2-682
 status 2-614 to 2-615, 2-659,
 2-661 to 2-662, 2-681 to 2-682
 Econet OS remote procedure event 1-158
 Econet receive event 1-157
 Econet transmit event 1-158
 Econet user remote procedure event 1-155
 EconetV 1-70, 1-84, 1-100, 2-733, 2-745
 editors *see applications*
 eigenfactors *see VDU drivers (variables)*
 ellipses *see graphics (plotting)*
 'End of file' error 2-60
 entry vector 4-426

- errors 1-41 to 1-47, 1-256
 blocks 1-42
 generating 1-44 to 1-47, 2-42, 2-529,
 2-590 to 2-591, 2-593, 2-598
 see also Wimp (error reporting)
 handling 1-28, 1-43 to 1-44
 see also printing (error handling)
 numbers 1-42 to 1-43, 2-528, 2-590 to 2-591,
 4-546
 see also exceptions and handlers (error)
- ErrorV 1-43, 1-80
 see also software vectors
- Esc key 1-44, 1-154, 1-839, 1-847, 1-879, 1-894,
 1-911, 2-140, 2-142, 3-38, 3-43, 3-123,
 3-180
- escape conditions 1-839, 1-847 to 1-848, 1-903,
 1-911, 1-940, 2-223, 3-43, 3-115, 3-586
 acknowledging 1-848, 1-868
 character causing 1-839, 1-847, 1-889
 clearing 1-848, 1-866
 detecting 1-848, 1-912
 disabling 1-848, 1-879, 1-894
 effects 1-848, 1-896
 enabling 1-894
 setting 1-847, 1-867
 summary 1-847
- escape event 1-154, 1-839, 1-848
- events 1-145 to 1-160, 1-841
 disabling 1-146, 1-148
 enabling 1-146, 1-150
 generating 1-152
 handler routines 1-146
 list 1-145
- EventV 1-77, 1-82, 1-290
- exceptions 1-43, 1-44, 1-111 to 1-115, 4-388,
 4-389
- exit() 1-348
- expansion cards 1-117, 4-115 to 4-162
 Acorn conformance bit 4-123
 adding sprites to Wimp pool 2-407
 address space
 reading from 4-147
 writing to 4-148 to 4-149
- addresses 1-144, 4-150 to 4-151,
 4-154 to 4-155
- chunk directories 4-116, 4-127 to 4-129
 presence of 4-123
- chunks 4-127 to 4-129
 addresses 4-152
 information 4-140 to 4-141,
 4-152 to 4-153
 listing 4-140 to 4-141, 4-152 to 4-153
 reading from 4-142
- CMOS RAM 4-132, 4-150 to 4-151,
 4-154 to 4-155
- code space 4-129
 reading from 4-143, 4-159
 writing to 4-144, 4-157
- country code 4-123
- device drivers 1-122 to 1-123
- device vectors 1-120
- devices' registers 4-147 to 4-148
- event usage 1-146
- handling interrupts 1-125 to 1-134
- headers 4-139
- ID field 4-120, 4-123
- IDE *see* disc drives (controller)
- identity 4-116, 4-119 to 4-123,
 4-138 to 4-139
 extended 4-121 to 4-124
 simple 4-119 to 4-120
- interrupt status bits 4-120, 4-123, 4-125
- interrupt status pointers 4-116, 4-125,
 4-126 to 4-127, 4-139
 presence of 4-123
- interrupts 4-125 to 4-127
 listing 4-158
- loaders 4-116, 4-129 to 4-132
 calling 4-145 to 4-146
 entry conditions 4-130
 error returning 4-131
 example 4-131 to 4-132
 loading 4-132, 4-140, 4-152
 resetting 4-138, 4-139
- manufacturer code 4-123, 4-547
- number of 4-156

operating system identity
 byte 4-128 to 4-129, 4-140, 4-152
 podules 4-133
 presence of 4-120, 4-124
 product type code 4-123, 4-547
 resetting hardware 4-134
 ROM images 4-129
 example program 4-160 to 4-162
 ROM sections 4-133
 ST506 *see* disc drives (controller)
 width 4-120, 4-121, 4-123
 see also modules
 expressions *see* conversions (expression evaluation)
 extension ROMs 1-485, 4-115 to 4-162
 extended identity 4-124
 headers 4-118
 width 4-118
 see also modules, *and* expansion cards *for topics not mentioned above*

F

fast interrupt mode *see* FIQ mode
 fast interrupts 1-112, 1-129 to 1-133
 device numbers 1-130
 disabling 1-133 to 1-134
 requests 1-113, 1-129
 speed of handling 1-131
 see also FIQ vector
 'File ... not found' error 2-553
 file formats 4-453 to 4-493
 AIF 4-434 to 4-441
 ALF 4-430 to 4-433
 AOF 4-417 to 4-429
 b9999x9999 files 4-475 to 4-483
 Draw 4-457 to 4-469
 Encodings files 4-484 to 4-485
 f9999x9999 files 4-475 to 4-483
 font Messages files 4-486 to 4-487
 fonts 4-470 to 4-487
 IntMet... files 4-470 to 4-473

layering 4-414
 music 4-488 to 4-492
 Outlines files 4-475 to 4-483
 sprites 4-454
 Squash 4-493
 templates 4-455 to 4-456
 x90y45 files 4-474 to 4-475
 'File locked' error 2-546
 file server protocols 2-693 to 2-726
 access rights 2-695
 attributes 2-695
 Catalogue header 2-705
 client handles 2-693
 Close object 2-707
 command codes 2-694
 Create directory, specifying size 2-718
 Create file 2-719
 dates 2-695
 Decode command lines 2-698 to 2-701
 Delete object 2-716
 disc titles 2-696
 Examine 2-704 to 2-705
 function codes 2-693
 Get byte 2-707 to 2-708
 Get bytes 2-708 to 2-709
 Load as 2-706
 Load file 2-703
 Log off 2-717
 Manager Interface 2-722 to 2-724
 object names 2-696
 object types 2-695
 Open object 2-706
 passwords 2-696
 privilege 2-696
 Put byte 2-708
 Put bytes 2-710 to 2-711
 Read client user id 2-720
 Read current users' information 2-712
 Read current users' information
 (extended) 2-720 to 2-721
 Read disc free space 2-718
 Read disc information 2-712
 Read 'end-of-file' status 2-713

- file server protocols (*continued*)**
- Read file server date and time 2-713
 - Read file server version number 2-717
 - Read object information 2-714 to 2-715
 - Read random access information 2-711
 - Read single user's environment 2-717
 - Read single user's information
 - (extended) 2-721
 - Read user environment 2-716
 - Read user free space 2-719
 - reply ports 2-693
 - Rx headers 2-694
 - Save file 2-701 to 2-702
 - Set file server date and time 2-718 to 2-719
 - Set object attributes 2-715
 - Set random access information 2-711
 - Set user boot option 2-716
 - Set user free space 2-720
 - Tx headers 2-693
 - user identifiers 2-696
- file servers** 2-3, 2-727 to 2-728
- adding 2-370
 - currently selected 2-344 to 2-347, 2-372, 2-375
- disc configuration 2-712
- disc names – adding 2-362, 2-370
- errors 2-725 to 2-726
- free space 2-374, 2-719 to 2-720
- see also* discs (free space)
- listing 2-339, 2-354 to 2-357, 2-364, 2-369, 2-377
- logging off 2-104, 2-186, 2-342, 2-371, 2-717, 2-724
- logging on 2-342, 2-376, 2-378, 2-700
- operations 2-338, 2-340, 2-352, 2-360, 2-383
- passwords 2-381, 2-722 to 2-723
- port number 2-620
- protocols *see* file server protocols
- selecting 2-339, 2-345, 2-347, 2-372, 2-375
- shutting down 2-724
- time 2-713, 2-718 to 2-719
- unique identifier for objects 2-367
- users**
- adding 2-723
 - ID 2-366, 2-720
 - information 2-717, 2-721
 - listing 2-712, 2-720 to 2-721
 - privilege 2-724
 - removing 2-724
 - version 2-717
- file types** *see* files (types)
- File\$Path variable** 2-15, 2-16 to 2-17, 2-172, 4-499
- File\$type... variables** 1-263, 2-184, 3-51, 4-498, 4-546, 4-557
- FileCore** 1-199, 2-4 to 2-5, 2-6, 2-195 to 2-260, 2-318, 2-326
- FileCore modules** 2-4
- adding 2-5, 2-98, 2-196, 2-226 to 2-227, 2-521, 2-587 to 2-596
- descriptor block** 2-587
- flag bits 2-588
- initialising** 2-587
- interfaces** 2-592 to 2-596
- private word** 2-196, 2-227, 2-588
- removing** 2-589
- SWI handling** 2-589
- Filer module** 2-7, 2-321, 2-489 to 2-502, 3-242
- shutting down 2-493
- see also* Filers
- Filer_Action** 1-5, 2-7, 2-503 to 2-509, 3-235 to 3-237
- initialising 2-503, 2-509
- Filers** 2-7, 2-321, 2-327, 2-489 to 2-502, 3-233 to 3-234
- initialising 2-490 to 2-492, 3-242
 - path variables 2-408
 - resources 2-408
 - shutting down 2-493
- see also* Filer module
- files**
- addresses 1-181, 2-13 to 2-14, 2-33, 2-34, 2-35, 2-43, 2-71, 2-157, 2-166, 2-167, 2-547 to 2-548, 2-549, 2-552, 2-564, 2-566, 2-700, 2-715

- appending to 2-140, 2-188, 3-53
 attributes 1-181, 2-13, 2-30 to 2-32, 2-34,
 2-35, 2-43, 2-71, 2-105, 2-138, 2-143,
 2-152, 2-166, 2-167, 2-506, 2-529,
 2-546, 2-547, 2-548 to 2-549, 2-552,
 2-559 to 2-560, 2-564, 2-566, 2-700,
 2-715
 block size 2-45, 2-532, 2-552 to 2-553
 boot 1-838, 1-945, 2-28, 2-96, 2-146, 2-150,
 2-165, 2-177, 4-345, 4-348
see also applications (booting) and
 desktop (boot files)
 buffer allocation 1-346, 2-528, 2-588
 buffers 2-299
 canonicalised names 2-55, 2-118,
 2-529 to 2-530, 2-568 to 2-570
 closing 1-181, 2-24, 2-72 to 2-74, 2-97,
 2-103, 2-104, 2-117, 2-145, 2-185,
 2-186, 2-248, 2-249, 2-253, 2-342,
 2-371, 2-524, 2-540, 2-545, 2-565,
 2-707, 3-230
 Command *see* command scripts
 compressing *see* Squash
 copying 2-107 to 2-109, 2-152 to 2-154,
 2-406, 2-506
 counting 2-111, 2-155, 2-506
 creating 1-181, 2-38, 2-142, 2-157, 2-187,
 2-550 to 2-551, 2-706, 2-719, 3-52
 data format 2-215
 date stamp *see* files (stamp)
 decompressing *see* Squash
 deleting 1-181, 2-37, 2-110, 2-160, 2-179,
 2-193, 2-506, 2-550, 2-716
 disc holding 2-132
 displaying 2-162, 2-171, 2-178, 2-190
 format 2-147, 2-487
 end-of-file 2-25, 2-53, 2-535, 2-541, 2-579,
 2-713
 ensuring 1-181, 2-543
 EOF-error-on-next-read flag 2-51, 2-57,
 2-60, 2-62, 2-65, 2-66, 2-528, 2-535,
 2-580
 execing 1-840, 1-848, 1-877, 1-896, 1-925,
 4-346
 execution address *see* files (addresses)
 extent *see* files (length)
 finding by name 2-506
 finding by offset within image 2-134,
 2-577 to 2-578
 flushing 2-59, 2-542
 handles 2-72, 2-75, 2-532
 hexadecimal dump 2-162
 icon bar *see* icon bar (adding and removing
 directories etc)
 laying out 2-237
 length 2-35, 2-43, 2-50, 2-51, 2-71, 2-76,
 2-157, 2-166, 2-167, 2-528, 2-537,
 2-539, 2-539 to 2-540, 2-543, 2-549,
 2-564, 2-566, 2-579, 2-580, 2-700,
 2-711
 listing *see* directories (listing) and library
 (listing)
 load address *see* files (addresses)
 loading 2-13 to 2-14, 2-15 to 2-17,
 2-30 to 2-32, 2-40, 2-172, 2-181,
 2-502, 2-553, 2-703, 2-706,
 2-727 to 2-728, 3-251 to 3-252,
 4-342, 4-361, 4-498
 messages *see* message files
 moving 2-108, 2-153, 2-506
see also files (renaming)
 names 2-10 to 2-12
 Obey *see* command scripts
 obeying 4-346, 4-350
 opening 1-181, 2-72, 2-75 to 2-76, 2-142,
 2-531 to 2-533, 2-706, 3-51, 3-53
 overwriting 2-108, 2-142, 2-187
 pinboard – placing on *see* pinboard (adding
 directories etc)
 reading 2-60, 2-63 to 2-64, 2-66,
 2-534 to 2-535, 2-580,
 2-707 to 2-709
 example code 2-581 to 2-586
 renaming 1-181, 2-106, 2-153, 2-180, 2-559
see also files (moving)

files (*continued*)

resources *see* ResourceFS
running 1-323, 1-483, 1-927, 2-13 to 2-14,
2-15 to 2-17, 2-84 to 2-85, 2-165,
2-181, 3-265, 4-342, 4-361, 4-498
see also files (execing and obeying)
saving 2-30 to 2-32, 2-33, 2-183, 2-546,
2-701 to 2-702, 3-53,
3-250 to 3-251, 4-360
selecting 2-505
sequential pointer 2-48, 2-49, 2-76, 2-528,
2-535, 2-537, 2-538 to 2-539, 2-540,
2-579, 2-580, 2-711
size allocated 2-52, 2-54, 2-528, 2-537,
2-541, 2-711
spooling to 1-492, 1-498 to 1-499, 1-513,
1-925, 2-187, 2-188, 2-487
stamp 2-14, 2-33, 2-34, 2-43, 2-71, 2-154,
2-166, 2-167, 2-184, 2-189, 2-340,
2-341, 2-506, 2-544, 2-545, 2-566,
2-700, 2-715
stream status word 2-57
system internal name 2-71, 2-566
templates *see* templates
temporary 4-501
time stamp *see* files (stamp)
truncating names 2-151
types 2-14, 2-33, 2-34, 2-43, 2-71, 2-84, 2-99,
2-113, 2-120, 2-166, 2-167, 2-184,
2-321, 2-506, 2-700, 2-715, 3-51,
3-263, 4-498, 4-545, 4-557 to 4-560
listing all 2-184
mapping to DOS
extensions 2-327 to 2-328,
2-336
naming 1-263
Utility *see* transient utilities
writing 1-181, 2-62, 2-63 to 2-65, 2-140,
2-142, 2-187, 2-188, 2-536 to 2-537,
2-543, 2-579, 2-708, 2-710 to 2-711
example code 2-581 to 2-586
FileSwitch 1-80, 2-3, 2-318, 2-319, 2-326

FileSwitch\$... variables 2-12, 4-497

FileSwitch\$SpecialField 2-18
FileV 1-80, 1-81, 2-30
filing systems
adding 2-4, 2-9, 2-93, 2-521 to 2-586, 4-547
address of 2-101
background transfers 2-227
booting from 2-96, 2-560
checking for presence 2-94
currently selected 4-497
declaring 2-23, 2-93, 2-522, 2-524
diagram 2-8
Free module
deregistering from 2-516
registering with 2-512 to 2-515
support routines 2-512 to 2-515
information block 2-93, 2-522
information word 2-57, 2-102,
2-522 to 2-523
extra 2-523
initialising 2-93, 2-522
interfaces 2-531 to 2-580
introduction 2-527 to 2-530
internal file handles 2-102
introduction 2-3 to 2-8
message level 2-27, 2-91, 2-176
names 2-115, 4-547
numbers 2-19, 2-115, 4-547
private word 2-93, 2-528
reading information 2-67
re-entrancy 2-20
removing 2-97, 2-524
secondary modules *see* FileCore modules
selecting 1-924, 2-3, 2-11, 2-12, 2-80, 2-95,
2-149, 2-298, 2-316, 2-376, 2-380,
2-417, 2-420, 2-524, 2-565, 2-589
service call handler 2-524
shutting down 2-97, 2-104, 2-524, 2-565
stack 2-527
temporary 2-12, 2-48, 2-92, 2-97, 2-100,
2-101, 4-497
FilingSystem\$Path_Message variables 4-498

Filter Manager 3-84, 3-224 to 3-225,
3-303 to 3-312
dying 3-305
starting 3-304
see also Wimp (filters)

FindV 1-80, 1-82

FIQ disable flag *see* registers (PSR)
FIQ mode 1-12, 1-14, 1-112, 1-113, 4-363
FIQ vector 1-113, 1-131
claiming 1-132, 1-136 to 1-137
releasing 1-132, 1-135

FIQs *see* fast interrupts

flex 1-343
advantages 1-343, 1-346
description 1-346
limitations 1-346
see also C (storage manager)
floating point 1-112, 4-163 to 4-184
available systems 4-164
C flag 4-172, 4-182
control register 4-164, 4-175 to 4-176
coprocessor data operation
instructions 4-180 to 4-182
coprocessor data transfer
instructions 4-177 to 4-178
coprocessor multiple data transfer
instructions 4-178 to 4-179
coprocessor register transfer
instructions 4-180
coprocessor status transfer
instructions 4-182 to 4-183
denormalised numbers 4-171
division by zero 4-173
exponents 4-166 to 4-169
IEEE system 4-164 to 4-176
inexact results 4-174
infinities 4-166 to 4-169, 4-173
instruction set 4-177 to 4-183
invalid operations 4-173
literals 4-178
NaNs 4-166 to 4-169, 4-171, 4-173
not-a-number *see* floating point (NaNs)

number formats 4-165 to 4-169
double extended precision 4-167
expanded packed decimal 4-169, 4-172
IEEE double precision 4-166
IEEE single precision 4-166
packed decimal 4-168, 4-172
overflow 4-174
precision 4-165
registers 4-164
status register 4-164, 4-170 to 4-174
cumulative exception flags byte 4-164,
4-172 to 4-174
exception trap enable byte 4-164,
4-170 to 4-171
system control byte 4-171 to 4-172
system ID byte 4-170
synchronous operation 4-172
undefined instructions 4-178
underflow 4-174
version of emulator 4-184
writeback 4-177, 4-179
see also assembler
floppy discs *see* discs
FN key 1-850
'Font ... not found' error 3-420
Font Manager 1-97, 3-403 to 3-518
version 3-418
Font\$Path variable 2-408, 3-410 to 3-412, 3-417,
3-451, 3-468, 3-512, 3-513, 3-515
Font\$Prefix variable 2-408, 3-410 to 3-412, 3-513
FontPrint application 3-263 to 3-265, 3-590
fonts
age of 3-413, 3-425
anti-alias palette 3-414, 3-455 to 3-456
see also fonts (colours)
anti-aliasing 3-403, 3-441 to 3-443,
3-453 to 3-460, 3-465,
3-502 to 3-503, 3-575
availability 3-411 to 3-412, 3-417,
3-512 to 3-513, 3-515
bitmaps 3-403, 3-435, 3-466 to 3-467,
3-500 to 3-501, 3-504 to 3-505

fonts (*continued*)
 bounding boxes 3-415, 3-426, 3-434,
 3-446 to 3-447
 cache 3-404, 3-405, 3-412 to 3-413, 3-416,
 3-470
 altering 3-468 to 3-469, 3-504 to 3-505
 amount used 3-418, 3-514
 free space 3-413, 3-514
 loading from file 3-413, 3-516
 saving to file 3-413, 3-517
 size 3-412 to 3-413, 3-418,
 3-498 to 3-499, 3-510, 3-514
 colours 3-103, 3-220 to 3-221, 3-341,
 3-365 to 3-368, 3-405, 3-414, 3-432,
 3-441 to 3-443, 3-453 to 3-454,
 3-488 to 3-490, 3-569, 3-575
 control sequences 3-406, 3-415,
 3-429 to 3-435
 encodings 3-421, 3-425, 3-482,
 3-491 to 3-492
 file formats *see* file formats
 files 3-408 to 3-409
 finding 3-473 to 3-474
 finishing using 3-412, 3-423
 FontMax values 3-470 to 3-472,
 3-500 to 3-509
 handles 3-57, 3-171, 3-412, 3-415,
 3-419 to 3-422, 3-441 to 3-443
 hints 3-403
 identifiers 3-410, 3-420, 3-425,
 3-450 to 3-452, 3-493 to 3-495
 information – reading 3-415, 3-424 to 3-425,
 3-496 to 3-497
 justification 3-415, 3-428, 3-430 to 3-431,
 3-518
 kerning 3-415, 3-477 to 3-480
 listing 3-411, 3-413, 3-417, 3-450 to 3-452,
 3-511, 3-514
 masters 3-409
 menus 3-411, 3-450 to 3-452, 3-481 to 3-482
 Messages files 3-410
 metrics 3-407, 3-416, 3-477 to 3-480
 names 3-410, 3-420, 4-550
 outputting 3-406, 3-415, 3-429 to 3-435,
 3-576
 to a buffer 3-475 to 3-476
 printing *see* printing (fonts)
 qualifiers 3-419 to 3-421
 reference counts 3-57, 3-171
 rubout boxes 3-415, 3-430 to 3-431
 scaffolding 3-434
 selecting 3-412, 3-419 to 3-422, 3-440,
 3-453 to 3-454
 slaves 3-409
 split character 3-427, 3-485
 strings
 bounding boxes 3-463 to 3-464, 3-485
 information 3-483 to 3-486
 width 3-427 to 3-428
 subpixel scaling 3-434, 3-466 to 3-467,
 3-506 to 3-509
 subscripts 3-433
 substrings 3-432
 superscripts 3-433
 text direction 3-432, 3-485
 threshold values 3-414, 3-457 to 3-460
 transformation matrices 3-415, 3-420,
 3-425, 3-431 to 3-432, 3-485
 underline position 3-415, 3-433
 underline thickness 3-415, 3-433
 usage count 3-413, 3-425, 3-514
 Fonts application 3-278
 form feed 1-550, 1-560, 3-712
 FormEd 3-56
 FPA *see* floating point
 FPE *see* floating point
 FPPC *see* floating point
 Free module 2-511 to 2-517
 FSCV 1-82, 2-77
 ftp 4-511
 function keys 1-313, 1-843, 1-844 to 1-846,
 1-857, 1-885, 1-892, 1-920, 3-38, 3-42,
 3-123
 defaults 1-861

G

GPBV 1-80, 1-81, 2-63
 GCOL *see* colours (graphics)
 GMT *see* UTC
 graphics 1-534
 changed box 1-547, 1-724
 clearing 1-546, 1-564
 colours *see* colours (graphics)
 cursor *see* cursors (graphics)
 dot-dash line style 1-544, 1-547, 1-578,
 1-583, 1-676
 horizontal line draw routine 1-705
 origin 1-547, 1-577, 1-610, 1-613
 plotting 1-546, 1-607 to 1-609, 1-717
 see also Draw module
 plotting actions *see* colours (plotting
 actions)
 see also sprites and VDU drivers
 graphics hardware – replacing 1-105, 1-109
 Greek alphabet *see* alphabets (Greek)
 GSTrans *see* conversions (GS string operations)

H

half word
 definition 4-413
 handlers 1-114, 1-283, 1-288 to 1-295
 address exception 1-289, 1-302, 1-315,
 4-229
 break point 1-290, 1-305, 1-306, 1-315, 4-229
 CallBack 1-292, 1-304, 1-308, 1-315, 1-334
 data abort 1-289, 1-302, 1-315, 4-229
 defaults 1-288, 1-321
 entry conditions 1-289
 error 1-43, 1-45, 1-256, 1-289, 1-296, 1-315,
 2-100, 3-75
 escape 1-290, 1-296, 1-315, 1-839, 1-847,
 1-866, 1-867, 1-868
 event 1-290, 1-296, 1-315
 exit 1-291, 1-300, 1-302, 1-315, 1-318, 2-82
 installing 1-315

prefetch abort 1-289, 1-302, 1-315, 4-229,
 4-382
 undefined instruction 1-289, 1-302, 1-315,
 4-229, 4-382
 unused SWI 1-291, 1-307, 1-315
 UpCall 1-291, 1-315, 2-84, 2-108
 see also modules (service call handler *and* SWI
 handler), *and* keyboard (handler)

hard discs *see* discs
 hardware addresses *see* addresses
 hardware exception vectors 1-111
 hardware scrolling *see* screen (hardware
 scrolling)

hardware vectors 1-111 to 1-115
 claiming 1-114
 passing on a call 1-114
 priorities 1-115
 releasing 1-114

headphones 4-3, 4-23, 4-57, 4-62

heap sort *see* sorting
 heaps 1-337, 3-60, 3-61, 3-207
 claiming blocks 1-372
 describing 1-371
 descriptor 1-338, 1-349
 extending 1-375
 extending blocks 1-374
 fragmentation 1-338
 free list 1-349
 freeing blocks 1-373
 initialising 1-370
 internal format 1-349
 manager 1-338, 1-348 to 1-350
 reading size of blocks 1-376
 system 1-351
 configured size 1-397

Hebrew alphabet *see* alphabets (Hebrew)
 help

 commands 1-947
 Help application 3-242, 3-244 to 3-245
 listing formats 2-494 to 2-495
 HIMEM (BASIC keyword) 3-207

hourglass 1-100, 2-733 to 2-744, 3-43
colours 2-742
display indicators 2-741, 2-745 to 2-746
Econet *see* NetStatus
percentages 2-739 to 2-740, 2-743 to 2-744,
 2-745
turning off 2-736 to 2-737
turning on 2-734 to 2-735, 2-738
HSV *see* conversions

icon bar 3-20
 adding directories etc 3-294
 removing directories etc 3-298
iconising *see* windows (iconising)
icons 3-20 to 3-25
 action 3-38
 Adjust Size 3-17, 3-28, 3-119
 applications 3-33, 3-51
 Back 3-15, 3-27
 blocks 3-96 to 3-107
 border types 3-106
 bounding box 3-21
 button types 3-22, 3-100
 Close 3-15, 3-27, 3-119, 3-257
 creating 3-20 to 3-23, 3-24, 3-96 to 3-107
 data 3-22 to 3-23, 3-101
 deleting 3-24, 3-110
 dialogue boxes 3-33
 error 3-33
 exclusive selection groups 3-22, 3-39, 3-99,
 3-104, 3-121, 3-163
 Filer 3-32
 flags 3-21 to 3-22, 3-99, 3-139, 3-141, 3-162
 icon bar 3-32
 identifying 3-162 to 3-163
 menus 3-33
 option 3-33, 3-39
 pinboard 3-33
 plotting 3-186 to 3-187
 pointer 3-33

radio 3-33, 3-39
resolution 3-31 to 3-32
Scroll Bars *see* windows (scroll bars)
selecting 3-22
state 3-139 to 3-142
text and sprite 3-106 to 3-107
3D 3-34
Title Bar *see* windows (title bar)
Toggle Size 3-16, 3-27
validation strings 3-102 to 3-106
writable 3-23, 3-38, 3-41

IDE low-level commands 2-294
IIC bus 1-944
'Illegal window handle' error 3-65
image files
 closing 2-24, 2-526, 2-545, 2-568
 see also files (closing)
 creating 2-567 to 2-568
 see also files (creating)
 laying out 2-326, 2-332 to 2-333
 structure specifiers 2-333
 used space map 2-128
 see also discs

image filing systems 2-6, 2-317 to 2-327
 adding 2-6, 2-116, 2-320, 2-525 to 2-586
 declaring 2-116, 2-525
 formatter 2-6, 2-318, 2-319, 2-324 to 2-326,
 2-494 to 2-495

identifier 2-6, 2-318, 2-319, 2-321 to 2-323
image handler 2-6, 2-318, 2-319, 2-321
image stamp 2-56, 2-133, 2-544,
 2-576 to 2-577

information block 2-116, 2-525
information word 2-526
initialising 2-116, 2-525
interfaces 2-531 to 2-580
 introduction 2-527 to 2-530

private word 2-116, 2-528
removing 2-117, 2-526
service call handler 2-526
shutting down 2-117, 2-526
 stack 2-527

input buffer full event 1-153

'Input focus window not found' error 3-65
 input/output controller *see* IOC
 Insert key 1-892, 1-920, 3-123
 InsV 1-77, 1-82, 1-88, 4-83, 4-88, 4-91
 interlace *see* monitor (interlace)
 International module 3-759 to 3-784
 internationalisation 2-409, 3-58, 3-737 to 3-848
 Internet 2-674
 Internet event 1-159
 Internet receive event 1-160
 Internet transmission status event 1-160
 interrupt mode *see* IRQ mode
 interrupts 1-117 to 1-144, 1-145
 clearing 1-129
 device drivers 1-118 to 1-129
 entry conditions 1-126
 restrictions 1-126
 device numbers 1-118 to 1-119
 device vectors 1-118 to 1-129
 claiming 1-120, 1-121 to 1-122
 releasing 1-120, 1-123 to 1-124
 disabling 1-133 to 1-140, 1-218
 enabling 1-138
 error handling 1-128
 OS_Byte calls 1-52
 requests 1-113, 1-117
 speed of handling 1-127
 unknown 1-86
 interval timer event 1-154
 interval timer *see* timers (interval)
 IntKey application 3-778
 'Invalid time interval' error 1-429
 'Invalid Wimp operation in this context'
 error 3-65
 IOC 1-9, 1-17 to 1-18, 1-113, 1-125, 4-6
 address 1-142
 registers 1-142 to 1-143
 see also counters
 IOEB ASIC 1-722
 IRQ disable flag *see* registers (PSR)
 IRQ mode 1-12, 1-14, 1-15, 1-113, 1-125, 1-126,
 4-363
 IRQ vector 1-113, 1-125

IRQs *see* interrupts
 IRQUtils 1-120
 IRQV 1-77, 1-80, 1-86, 1-113, 1-126

J

joysticks 4-207 to 4-209
 reading state of 4-208 to 4-209

K

kbd: 2-485, 2-486
 kernel
 introduction i-3
 key numbers
 low-level 1-156
 key up/down event 1-156, 1-842
 Key\$... variables 1-313, 1-845, 1-861, 1-920,
 3-123
 keyboard 1-156, 1-836 to 1-839, 1-841 to 1-848
 auto-repeat 1-837, 1-844
 defaults 1-859, 1-916, 1-918
 delay 1-858, 1-874, 1-916
 disabling 1-858, 1-916
 rate 1-859, 1-875, 1-918
 buffer codes 1-837, 1-891 to 1-893
 currently selected 3-762, 3-770,
 3-772 to 3-773, 3-781 to 3-782,
 3-783 to 3-784, 3-789, 3-823
 default 3-778 to 3-779
 disable flag 1-842, 1-881
 driver 1-841, 3-778
 handler 1-837, 1-841, 1-843, 1-851, 1-914,
 3-762, 3-770, 3-786, 3-789, 3-823
 ID 1-851, 1-914, 3-775, 3-778, 3-781
 interface 1-17
 internal key numbers 1-849 to 1-850
 LEDs 1-842, 1-862
 low level key codes 1-837, 1-841, 1-842
 numeric keypad 1-844, 1-900, 1-906

keyboard (*continued*)
 scanning 1-837, 1-842, 1-863 to 1-865,
 1-870 to 1-872
 selecting 3-762, 3-770, 3-772 to 3-773,
 3-781 to 3-782, 3-783 to 3-784,
 3-789, 3-823
 status 1-842, 1-883

Latin alphabets *see* alphabets (Latin...)
 LCD

grey-scaling 4-196
 powering down 4-200 to 4-201

LCD ASIC 1-722

leafname 2-10

LIB_
 name of ALF files 4-416

LIB_DATA 4-432

LIB_DIRY 4-430

LIB_VSRN 4-432

library 2-127, 2-135, 2-137, 2-174, 2-217
 currently selected 2-12, 2-67, 2-81, 2-170,
 2-257, 2-373, 2-376, 2-378, 2-379,
 2-382, 2-555, 2-562, 2-693, 2-700,
 2-701, 2-716, 4-497

language 1-294, 1-340

listing 2-88, 2-89, 2-168, 2-169,
 2-556 to 2-557

privilege 2-67, 2-562

selecting 2-81, 2-170, 2-257, 2-342, 2-373,
 2-376, 2-378, 2-379, 2-382, 2-555,
 2-693, 2-700, 2-701

default 2-217

linefeed 1-543, 1-550, 1-558, 1-911, 2-142

lines *see* graphics (plotting)

link register *see* registers (R14)

linker pre-defined symbols 4-427

little endian 4-413

logical colour *see* colours (logical-physical
 mapping)

logical links *see* TIP (logical links)

LR *see* registers (R14)

LZW *see* Squash

machine

ID 1-722

type 1-936

Maestro application

file format 4-488 to 4-492

MakePSFont module 3-733 to 3-734

malloc 1-341, 1-343

allocation of blocks 1-343

block alignment 1-343

fragmentation of heap 1-346

guard constant 1-343

heap 1-343

RMA usage 1-348

see also C (storage manager)

'Map full' error 2-199

MDFS 2-727

medium

absent 1-179, 1-186, 2-596

not known 2-596

unknown 1-179

MEMC 1-9, 1-18 to 1-21, 1-112, 1-337, 1-339,
 1-353, 4-6, 4-189

DAG 4-6

protection modes 1-20

updating control register 1-366

memory

allocation

controlling 1-352, 1-377

example 1-351

reading 1-388

C *see* flex and malloc

applications 3-54

clearing 1-846, 1-880

copying between tasks *see* tasks (transferring
 data)

counting pages 1-383

- deallocated blocks – avoiding
 references 1-341
- disassembling 4-227 to 4-228
- displaying values in 4-223 to 4-228
- editing contents of 4-225 to 4-226
- efficient use 1-340, 1-342
- fonts 3-245, 3-319
- initialising 4-222
- limit 1-298, 1-302, 1-315
- loss – avoiding 1-341
- lost blocks – searching for 1-342
- low amounts 1-340
- management 1-337 to 1-398, 3-54 to 3-55
- map 1-18 to 1-21, 1-350, 3-54
 altering 1-352, 1-353, 1-377, 1-386, 3-68,
 4-189
- initialisation 1-351
- reading mapping 1-384, 1-390
- validating addresses 1-379
- moving 1-194
- page size 1-19, 1-352
 reading 1-383
- protection 1-352
- protection levels 1-20
- saving to file 2-33, 2-183
- screen 1-337, 1-351, 1-353, 1-537, 1-544,
 1-698, 1-715, 1-720, 3-188
- sprites 1-544, 1-755, 1-816, 3-245, 3-319
- see also* Wimp
- memory controller *see* MEMC
- Menu *see* mouse (Menu button)
- menus 3-34 to 3-35
 blocks 3-157
 closing 3-159, 3-242 to 3-243, 3-741
 creating 3-35, 3-156 to 3-160, 3-450, 3-741,
 3-747 to 3-749
 keyboard short-cuts 3-37
 scroll bar 3-158
 selecting from 3-35, 3-123 to 3-124, 3-161,
 3-222 to 3-223, 3-239, 3-481
 state 3-222 to 3-223, 3-741
- submenus 3-35
 auto-opening 3-268, 3-273, 3-275
 creating 3-199 to 3-200, 3-239
 title bar 3-158
- 'Message file already open' error 3-743
- message files 3-737, 3-787
 buffer sizes 3-742
 buffering 3-741, 3-743 to 3-744
 closing 3-69, 3-740, 3-741, 3-750
 descriptor 3-738
 format 3-738 to 3-739
 global 3-738
 information 3-742
 lookup 3-745 to 3-746, 3-753 to 3-756
 menu creation *see* menus (creating)
 opening 3-743 to 3-744
 parameter substitution 3-739
 tokens 3-737, 3-738 to 3-739
 alternatives 3-738
 listing 3-751 to 3-752
 see also conversions (message token to
 string)
 see also MessageTrans
- 'Message token ... not found' error 3-740
- messages 3-6, 3-230 to 3-267
 acknowledging 3-128, 3-197
 adding to a task 3-226
 applications 3-243 to 3-245
 data transfer 3-249 to 3-256
 desktop saving 3-245 to 3-247
 device claiming 3-247 to 3-249
 Filer 3-233 to 3-238
 iconising 3-257 to 3-259
 NetFiler 3-238 to 3-239
 numbers 4-546
 printing 3-259 to 3-265, 3-558
 removing from a task 3-227
 running files 3-265
 sending 3-127 to 3-128, 3-196 to 3-198
 system 3-230 to 3-233
 task windows 3-266 to 3-267
 Wimp 3-239 to 3-243

MessageTrans 3-69, 3-737 to 3-757
 default strings 3-739
 error returning 3-753 to 3-754, 3-757
see also message files

MIDI 4-12
 MIDI event 1-159
 millipoins 3-404, 3-407, 3-557
 modems 1-490
 modes *see* screen (modes)
 Module\$... variables 4-548
 modules 1-38, 1-197 to 1-282
 command table 1-213 to 1-217, 1-927, 1-928
 creating 1-237, 1-238
 disabling 1-203, 1-281
 ensuring 1-203, 1-269, 3-60, 3-247
 environment string 1-208
 errors 1-204, 1-208, 1-210, 1-225, 1-265
 expansion cards'
 adding 1-244
 extension ROMs'
 adding 1-244
 faster running 1-270
 header format 1-205
 help string 1-212, 1-947
 help table 1-213 to 1-217, 1-947
 initialisation code 1-207
 initialising 1-202, 1-207, 1-227, 1-228, 1-264,
 1-274, 1-277, 1-342, 3-63
see also modules (reinitialising)

inserting 1-271
 instantiations 1-198
 creating 1-241
 preferring 1-206, 1-243
 renaming 1-242

introduction 1-3
 killing 1-114, 1-209, 1-225, 1-231, 1-236,
 1-268, 1-273, 1-281, 1-342, 3-55,
 3-73, 3-175 to 3-176, 3-230

listing 1-246, 1-248, 1-266, 1-279
 loading 1-227, 1-228, 1-274, 1-277
 memory usage 1-347, 3-68
 names 4-548
 OS_Module summary 1-203

power on default 1-945
 reading information 1-239, 1-245, 1-266,
 1-279
 reinitialising 1-230, 1-275
 requirements 1-197
 resources *see* ResourceFS
 running 1-206, 1-227, 1-229, 1-277, 3-70,
 3-240 to 3-241
 service call handler 1-210, 2-491, 3-62, 3-70
 start code 1-206
 SWI chunk base 1-217
 SWI decoding code 1-221 to 1-222
 SWI decoding table 1-220
 SWI handler 1-217 to 1-219
 tidying 1-203, 1-207, 1-209, 1-235, 1-278,
 4-34
 title string 1-212, 1-225, 1-266
 versions 1-202, 1-248
 Wimp tasks 1-294
 workspace allocation 1-233, 1-234, 1-240
 workspace pointer 1-204, 1-209, 1-266
 monetary quantities *see* numbers (formatting)
 monitor
 alignment 1-533, 1-537, 1-650, 1-739, 1-741
 interlace 1-533, 1-537, 1-580, 1-650, 1-739,
 1-741
 powering down drivers 4-200 to 4-201
 Super-VGA 1-576, 4-555
 sync type 1-537, 1-721
 types 1-533, 1-537, 1-574, 1-624, 1-721,
 1-731, 4-553
 VGA 1-576, 4-555
see also screen and VDU drivers

monotonic timer *see* timers (monotonic)
 mouse 1-156, 1-532, 1-543, 3-9 to 3-10
 Adjust button 3-9, 3-15 to 3-17, 3-22, 3-35,
 3-48, 3-120, 3-123 to 3-124
 bounding box 1-685, 3-36
 buttons 1-699, 3-9, 3-74, 3-121 to 3-122,
 3-143 to 3-144
see also mouse (Adjust button and Menu
 button and Select button)
 double clicks 3-10, 3-269 to 3-270

internal key numbers 1-849
 Menu button 3-123
 multipliers 1-687, 1-733
 position 1-166, 1-543, 1-689, 1-691, 1-699,
 3-74, 3-121
 Select button 3-9, 3-15 to 3-17, 3-22, 3-48,
 3-123 to 3-124
see also pointer
 mouse button event 1-156
 MouseV 1-83

N

N flag *see* registers (PSR)
 negative flag *see* registers (PSR)
 NetFS 2-3, 2-337 to 2-383
 differences from FileCore based filing
 systems 2-340
 selecting 2-376, 2-380
 shutting down 2-343
 timeouts 2-339 to 2-340, 2-350 to 2-351
see also file servers *and* files
 NetMonitor application 2-611
 NetPrint 2-3, 2-385 to 2-403
 timeouts 2-387 to 2-388, 2-393 to 2-394
see also printer servers
 netprint: 2-485, 2-486
 NetStatus 2-745 to 2-746
 network interfaces 2-644 to 2-646
 networking *see* Econet
 new lines 1-505
 new-style libraries *see* ALF
 Nexus 2-674
 'No acknowledge from IIC device' error 1-944
 'No room for variable' error 1-313
 'No room in RMA' error 3-370
 'No room on supervisor stack' error 1-929
 no *see* confirmation
 'No such SWI' error 1-26, 1-83, 1-95
 'No writeable memory at this address'
 error 2-553
 'Not enough application memory' error 1-294

'Not open for reading' error 1-878
 null: 2-485, 2-486, 2-487
 Num Lock key 1-842, 1-862, 1-884
 numbers
 formatting 3-836 to 3-838
 numeric keypad *see* keyboard (numeric keypad)

O

Obey files *see* command scripts
 Obey\$Dir variable 3-58, 3-60, 4-346 to 4-347,
 4-495, 4-500
 OBJ_
 name of AOF files 4-416
 OBJ_AREA
 areas chunk 4-421
 OBJ_IDFN 4-427
 OBJ_STRT 4-427
 ObjAsm 4-356
see also assembler
 object file
 format 4-417
 chunk names 4-417
 type 4-418
 version ID 4-418
 objects *see* files *and* directories
 OFL_SYMT 4-432, 4-433
 OFL_TIME 4-433
 old-style libraries *see* ALF
 operators 1-445
 OS units 1-574, 3-404, 3-407, 3-525, 3-557, 4-553
 OS_Byt e 1-49 to 1-57, 1-81
 adding calls 1-52, 1-257
 calling 1-50
 parameters 1-49
 printing 3-565
see also Index of OS_Bytes
 OS_Word 1-59 to 1-62, 1-81
 adding calls 1-59, 1-258
 calling 1-59
 parameters 1-59
see also Index of OS_Words

OSBYTE *see* OS_Byte
 OSCLI (BASIC keyword) 1-36, 1-923
 OSWORD *see* OS_Word
 output buffer empty event 1-153
 overflow flag *see* registers (PSR)

P

Page Down key 1-892, 3-123
 page size *see* memory (page size)
 Page Up key 1-892, 3-123
 paged mode *see* VDU drivers (paged mode)
 Paint application 1-747
 palette 1-16, 1-531, 1-538, 1-540, 3-340
 default 1-540
 devices 3-373
 reading 1-104, 1-109, 1-540, 1-677, 1-701,
 3-192 to 3-193, 3-387 to 3-388,
 3-585
 setting 1-104, 1-110, 1-568 to 1-571, 1-679,
 3-47, 3-79, 3-188, 3-190 to 3-191,
 3-232, 3-281, 3-287 to 3-288, 3-337,
 3-342, 3-369, 3-389 to 3-390
 see also colours
 PaletteV 1-84, 1-104, 1-109 to 1-110, 1-627
 parallel port 2-5, 2-477 to 2-484
 controller 2-480 to 2-484
 control register 2-484
 data register 2-482 to 2-483
 status register 2-482
 locking 2-481
 transferring data with 2-477 to 2-478
 parallel: 2-477 to 2-478, 2-485
 parallelograms *see* graphics (plotting)
 parameters *see* conversions (parameter substitution)
 passwords
 hiding 1-910, 3-103
 passwords *see* file servers (passwords)
 pathnames
 definition 2-10

paths 2-16 to 2-18, 2-408 to 2-409, 2-429, 3-56,
 3-60, 4-495, 4-499
 see also File\$Path variable and Run\$Path variable
 PC Emulator event 1-157
 PC *see* registers (R15)
 PDriver\$Address variable 3-614
 PDriver\$For variable 3-614
 PDumperDM\$Extra variable 3-714
 PDumperIW\$Extra variable 3-720
 PDumperLJ\$Extra variable 3-722
 peripheral controllers 1-118, 1-130
 addresses 1-144
 permission *see* files (attributes)
 physical colour *see* colours (logical-physical mapping)
 pinboard 3-293 to 3-298
 adding directories etc 3-296
 backdrop *see* desktop (backdrop)
 starting 3-297
 see also windows (iconising)
 PipeFS 2-405 to 2-406
 pipelining *see* ARM (pipelining)
 pipes 2-405 to 2-406
 closing 1-188
 deleting 1-188
 'Please insert disc...' error 2-323, 3-58
 PLOT command 1-96
 plotting *see* graphics (plotting)
 pointer 1-532, 1-544
 active point 1-683, 1-788, 3-166
 colours *see* colours (pointer)
 linking to mouse 1-637
 position 1-693, 1-695, 3-143 to 3-144
 shape 1-940, 3-33, 3-43 to 3-44, 3-166, 3-188
 defining 1-544, 1-683, 1-788
 selecting 1-544, 1-637, 3-105
 size 1-683
 switching off 1-544, 1-637, 3-284
 window work areas 3-44, 3-120
 see also mouse
 points *see* graphics (plotting)
 Portable BMU interrupt event 1-160

Portable module 4-195 to 4-205
see also Battery Management Unit

PostScript

- Encapsulated 3-634, 3-636
- fonts 3-590, 3-595 to 3-597, 3-733
 - downloading 3-595, 3-638 to 3-639
 - names 3-596 to 3-597
- power on 2-146, 2-150
- power saving *see Portable module and Battery Management Unit*
- prefetch abort vector 1-112
- print jobs
 - aborting 3-563, 3-619 to 3-622, 3-674
 - cancelling 3-563, 3-588, 3-629, 3-633
 - ending 3-561, 3-617 to 3-618, 3-688
 - file handles 3-563, 3-615
 - listing 3-563, 3-631
 - selecting 3-559, 3-613 to 3-614, 3-634 to 3-635
 - starting 3-673, 3-686 to 3-687
 - suspending 3-559, 3-613
 - title strings 3-614
- Print key 1-892, 1-920, 3-123
- PrintEdit application 3-590, 3-593, 3-697 to 3-731
 - Character mappings 3-728 to 3-731
 - Graphics mode 3-702 to 3-722
 - Dump information 3-702 to 3-710
 - Dump strings 3-711 to 3-722
 - Printer definition editor 3-699 to 3-701
 - Text mode 3-723 to 3-727
- printer drivers 3-248, 3-555 to 3-661
 - adding 3-594
 - configuring 3-606 to 3-607, 3-656 to 3-658
 - deregistering 3-642
 - example program 3-659 to 3-661
 - features word 3-558, 3-603 to 3-605
 - fonts
 - declaring for a job 3-559, 3-638 to 3-639
 - printer lists 3-647 to 3-651
 - illustrations 3-634 to 3-637
 - listing 3-644
 - message file 3-600, 3-693

miscellaneous operations 3-645 to 3-655

numbers 3-595, 3-640, 4-550

private words 3-640 to 3-641

reading current selection 3-643

reason code handlers 3-640 to 3-641

rectangles 3-560

- getting 3-626 to 3-628
- specifying 3-623 to 3-625

registering 3-599, 3-640 to 3-641

screen dumps 3-630

selecting 3-601, 3-643

sharer module 3-590 to 3-591

- starting 3-599

transformation matrices 3-557, 3-624

VDU state 3-579 to 3-580

version 3-558, 3-603, 3-670, 3-698

printer dumpers 3-591 to 3-592, 3-663 to 3-677

- adding 3-594, 3-697
- colours 3-671, 3-689 to 3-690
- configuration data 3-657, 3-668 to 3-670
- configuration word 3-670
- deregistering 3-653, 3-663, 3-677
- direct control 3-654, 3-674 to 3-675
- filename copying 3-695
- memory allocation 3-682 to 3-688
- names 3-665
- numbers 3-652, 3-665, 4-550
- private words 3-652, 3-664
- reason code handlers 3-652, 3-663, 3-664
- reason codes 3-668 to 3-675
- registering 3-652, 3-663, 3-676
- selecting 3-656 to 3-657, 3-668 to 3-670
- strip types 3-665
- strips 3-670 to 3-671, 3-691 to 3-692
- support module 3-592, 3-679 to 3-695
 - adding 3-594
 - information 3-680 to 3-681
 - version 3-680

- printer servers
 converting name to number 2-395
 currently selected 2-386 to 2-387,
 2-389 to 2-392, 2-400,
 2-402 to 2-403
 listing 2-396 to 2-397, 2-401
 port number 2-620
 selecting 2-386 to 2-387, 2-390, 2-392,
 2-400, 2-402 to 2-403
 status 2-397, 2-398
 printer: 2-485, 2-486, 2-487, 3-559, 3-561
 printers 1-491, 1-546
 buffer size 1-395
 definition files 3-589 to 3-590,
 3-697 to 3-731
 adding 3-593
 notation 3-698
 destination 1-491, 1-497, 1-508, 1-515,
 2-442, 4-502
 default 1-497, 1-525
 features – checking 3-559, 3-608
 halftone resolution 3-558, 3-602
 ignore character 1-497, 1-510 to 1-512,
 1-517, 1-524, 1-526, 1-549
 information 3-558, 3-602 to 3-605
 interlacing 3-705 to 3-706, 3-714 to 3-715,
 3-716 to 3-718
 names 3-558, 3-605, 3-699
 network 1-491, 1-497, 1-508, 1-515, 1-525,
 2-387
 see also NetPrint and printer servers
 paper size 3-559, 3-609 to 3-612, 3-699
 parallel 1-491, 1-497, 1-508, 1-515, 1-525,
 2-477, 2-487
 printable area 3-559, 3-609 to 3-612, 3-699
 printing characters 1-521
 serial 1-491, 1-497, 1-508, 1-515, 1-525,
 2-487
 sink 1-491, 1-497, 1-508, 1-515, 1-525, 2-487
 stream 1-491, 1-494 to 1-497, 1-546,
 1-549 to 1-551, 2-387
 user driver 1-491, 1-508, 1-515, 1-525, 2-487
- Printers application 3-589
 back ends 3-589, 3-697
 adding 3-594, 3-697
 front end 3-589
 ‘!Printers is required...’ error 3-264
 PrinterType\$... variables 4-502
 printing 3-18, 3-259 to 3-265, 3-555 to 3-734,
 4-498
 characters 3-565, 3-579 to 3-585
 code skeleton 3-562, 3-666 to 3-667
 colours 3-335, 3-564, 3-566 to 3-570
 error handling 3-561, 3-586 to 3-588,
 3-693 to 3-694
 persistent errors 3-587 to 3-588
 escape handling 3-586 to 3-587
 fonts 3-565, 3-573 to 3-576
 graphics 3-564, 3-571 to 3-573
 multitasking 3-561 to 3-562
 pages 3-560, 3-626 to 3-628, 3-672 to 3-673
 single 3-634
 sprites 3-565, 3-576 to 3-579
 summaries of structure 3-592 to 3-593
 trapping output calls 3-563 to 3-585
 VDU codes 3-579 to 3-585
 privileged modes *see* ARM (privileged modes)
 see also individual modes (eg SVC mode)
 processor modes *see* individual modes (eg SVC mode)
 processor *see* ARM
 processor status register *see* registers (PSR)
 program counter *see* registers (R15)
 protocol flags *see* TIP (data structures)
 protocol information block *see* TIP (data
 structures)
 protocol modules *see* TIP (protocol modules)
 PSR *see* registers (PSR)

R

- RAM 1-9, 1-18
 see also memory

RamFS 2-3, 2-5, 2-195, 2-309 to 2-316, 3-81
 selecting 2-316
 size 1-382, 2-315, 3-245, 3-319
 see also disc drives and discs
rawkbd: 2-485, 2-486
rawvdu: 2-485, 2-487
RdchV 1-80
ReadLineV 1-82
realloc 1-345
real-time clock *see* timers (real-time)
'Rectangle area full' error 3-65
rectangles *see* graphics (plotting)
redirection 1-925 to 1-926, 1-931, 2-486 to 2-487
registering names and numbers 4-545 to 4-550
registers 1-13 to 1-15, 4-362 to 4-363
 displaying contents 4-229 to 4-230
 FIQ 1-13, 1-15, 4-363
 floating point 3-117 to 3-118
 IRQ 1-13, 4-363
 PSR (processor status register) 1-14, 1-28,
 3-585, 3-834, 4-362 to 4-363,
 4-366 to 4-376, 4-378, 4-379, 4-383,
 4-386
 R13 (stack pointer) 1-13, 1-15
 R14 (subroutine link) 1-13, 1-14, 1-28, 1-289,
 4-370
 R15 (program counter) 1-13, 1-14, 1-28,
 4-358, 4-362 to 4-363, 4-366, 4-367,
 4-369, 4-372, 4-375, 4-378, 4-383,
 4-384, 4-385, 4-386, 4-388, 4-390
 save area 1-315
 save block 1-290, 1-304, 1-306
 SVC 1-13, 4-363
relocatable module *see* modules
relocation
 Additive and PCRelative 4-422
RemV 1-70, 1-77, 1-82, 1-90, 4-83, 4-88, 4-91
Reset switch 1-838, 1-846, 2-96
reset vector 1-111

resets 1-111, 1-264, 1-838, 1-846, 1-879, 1-892,
 1-903, 1-904, 2-146, 2-150, 2-492, 3-69,
 3-72, 3-740, 3-787, 4-134
 hard 1-838, 1-846
 soft 1-838, 1-846
Resource\$... variables 4-549
ResourceFS 2-3, 2-407 to 2-417
 adding files 2-410, 2-411, 2-413, 2-414
 data format 2-410
 directory structure 2-408
 initialising 2-413
 removing files 2-410, 2-411, 2-415
 resolving name clashes 2-410
 selecting 2-417
 shutting down 2-412
return code 1-300, 4-500
'Return code limit exceeded' error 1-300
Return key 3-38, 3-104, 3-123, 3-158, 3-180
RISC processors 1-11
RISC OS
 versions 1-6 to 1-7
 reading 1-872, 1-936
RMA 1-197, 1-347, 1-351
 check words 1-341
 clearing blocks 1-348
 configured size 1-396
 deallocating 1-341
 describing 1-232
ROM 1-9, 1-18, 1-111
RS423 error event 1-155
!Run file 3-59
Run\$Path variable 2-15, 2-16 to 2-17, 2-85,
 2-181, 4-347, 4-499
!RunImage file 3-60

S

SaveDesk\$File variable 3-246
Scrap application 3-249

screen 1-493, 1-499 to 1-500
 address 1-697
 bandwidth 1-574, 4-553
 banks 1-533, 1-537, 1-577, 1-639 to 1-644,
 1-671 to 1-672, 1-740
 blanking 4-107 to 4-111
 delay 4-111
 end of 4-109
 start of 4-108
 clearing 1-534, 1-545, 1-560, 1-578, 1-586
 displaying 1-354
 dumping to printer *see* printer drivers (screen
 dumps)
 hardware scrolling 1-354, 1-697, 1-712
 loading from file 1-535, 1-545, 1-547, 1-755,
 1-765, 1-819
 memory 1-574, 1-578, 1-736, 4-553
 modes 1-528, 1-545, 1-574 to 1-578, 1-721,
 1-729, 3-188 to 3-189, 3-218, 3-240,
 3-276, 3-286, 4-553 to 4-556
 adding 1-620 to 1-623
 changing 1-529, 1-536, 1-617 to 1-619,
 1-627, 1-740, 3-44 to 3-45,
 3-337, 3-342, 3-369, 3-416
 checking valid 1-715
 reading 1-649
 translating 1-627
 refresh rate 1-404, 1-405, 1-574, 4-553
 resolution 1-528, 1-574, 4-553
 saving to file 1-535, 1-545, 1-749, 1-755,
 1-764, 1-820
see also monitor and VDU drivers
 taking over 3-19
 writing characters 1-501
 writing directly 1-353
 scroll bars *see* windows (scroll bars)
 Scroll Lock key 1-842, 1-862, 1-884
 scrolling *see* VDU drivers (scrolling)
 scrolling window *see* VDU drivers (text window)
 sectors
 cache 2-233
 data 2-199
 gap 2-199
 ID 2-199, 2-263
 reading 2-221 to 2-225, 2-279, 2-284, 2-311,
 2-592 to 2-594
 skew 2-199
 varying size 2-263
 writing 2-221 to 2-225, 2-279, 2-284, 2-311,
 2-592 to 2-594
see also discs and tracks
 Select *see* mouse (Select button)
 serial port 1-492, 1-498, 1-840, 2-5,
 2-439 to 2-475
 baud rates 2-439, 2-440, 2-443,
 2-444 to 2-445, 2-457,
 2-469 to 2-472
 default 2-473
 break 2-440, 2-466
 buffering 1-854, 2-440, 2-441, 2-442, 2-455
 powering down 4-197, 4-200 to 4-201
 threshold 2-440, 2-442, 2-453, 2-463,
 2-468
 control byte 2-440, 2-446, 2-452
 data format 2-440, 2-443, 2-464 to 2-465
 default 2-443, 2-475
 errors 1-155
 handshaking 2-440, 2-443, 2-461 to 2-463
 input interpretation 2-440, 2-449
 line names 2-443
 parity 2-443, 2-464 to 2-465
 default 2-475
 receiving 2-440, 2-468
 status word 2-461 to 2-463
 stop bits 2-443, 2-464 to 2-465
 default 2-475
 transmitting 2-440, 2-467
 word length 2-443, 2-464 to 2-465
 default 2-475
 serial: 2-485
 SerialV 1-84
 service calls 1-200, 1-205, 1-210, 1-250
 claim FIQ 1-136
 claim FIQ in background 1-137
 summary 1-251
 setvbuf 1-346

shadow memory *see* screen (banks)
 shared C library 1-5, 4-231 to 4-336
 arithmetic functions 4-232
 ARM Procedure Call Standard 4-238
 buffering of input/output 4-307
 C library kernel 4-232, 4-234 to 4-240
 interfacing to 4-236 to 4-238
 characters – testing and mapping 4-278,
 4-295
 codeend 4-236
 codestart 4-236
 ctype.h 4-295 to 4-296
 EDOM 4-297
 environment variables 4-235
 ERANGE 4-297
 errno.h 4-297
 error handling 4-243
 errors
 domain 4-297
 operating system 4-235
 range 4-297
 ESIGNUM 4-297
 event handling 4-238
 EventProc 4-238
 FastEventProc 4-238
 FILE 4-304
 files
 creating 4-305
 deleting 4-304
 generating names 4-305
 opening 4-306 to 4-307
 position indicators 4-316 to 4-318
 renaming 4-305
 FinaliseProc 4-237
 floating point instruction set 4-235
 fpos_t 4-304
 function call – bypassing 4-278, 4-301
 heap allocation 4-242
 I/O functions 4-304 to 4-318
 InitProc 4-237
 input 4-313, 4-314, 4-315
 functions 4-311 to 4-312
 interfacing to 4-245 to 4-253

IRQ state – manipulating 4-232, 4-235
 locale.h 4-298
 math.h 4-299 to 4-300
 mathematical functions 4-278,
 4-299 to 4-300, 4-324 to 4-325
 memory allocation functions 4-321 to 4-322
 memory management 4-235
 multibyte character
 functions 4-325 to 4-326
 multibyte string functions 4-326 to 4-327
 NameProc 4-238
 operating system interface 4-323
 output 4-313, 4-314, 4-315, 4-316
 functions 4-308 to 4-311, 4-312
 program termination functions 4-322
 programs, calling from C 4-233,
 4-241 to 4-242
 random number generating functions 4-321
 RISC OS command types 4-241
 search functions 4-323, 4-324
 setjmp.h 4-301
 shared C library
 stack, run-time 4-233
 signal handling 4-302 to 4-303
 signal.h 4-302 to 4-303
 sort functions 4-324
 stack extension 4-240
 stack, run-time 4-239 to 4-240
 stack-limit checking 4-232
 stdio.h 4-304 to 4-318
 stdlib.h 4-319 to 4-327
 storage management 4-242
 streams
 closing 4-306
 flushing 4-306
 string functions
 appending 4-329
 comparison 4-329 to 4-330
 conversion 4-319 to 4-321
 copying 4-328
 error message mapping 4-332
 length 4-331, 4-332
 locating 4-330 to 4-331

- shared C library (*continued*)
 - string functions (*continued*)
 - time 4-335 to 4-336
 - tokenising 4-331 to 4-332
 - transformation 4-330
 - string.h 4-328 to 4-332
 - SWIs 4-232
 - time.h 4-333 to 4-336
 - TrapProc 4-237
 - UncaughtTrapProc 4-237
 - UnhandledEventProc 4-238
 - UnwindProc 4-238
 - ShellCLI 3-329 to 3-332
 - Shift key 1-545, 1-842, 1-849, 1-884, 1-892, 1-906, 1-919, 2-28, 2-146, 2-150, 3-9, 3-104, 3-257
 - shutting down 3-81 to 3-82, 3-233, 3-246
 - SIN *see* files (system internal name)
 - software vectors 1-5, 1-28, 1-32, 1-38, 1-63 to 1-110, 1-193
 - calling directly 1-70
 - chains 1-64
 - claiming 1-63, 1-66, 1-72, 1-76
 - error returning 1-77
 - example of use 1-106 to 1-108
 - intercepting a call 1-78
 - list 1-78
 - multiple uses 1-64
 - passing on a call 1-64, 1-78
 - register usage 1-77
 - releasing 1-68, 1-74
 - see also* applications (vector usage)
 - sorting 1-937 to 1-939
 - sound 1-17, 1-86, 4-3 to 4-80
 - bar length 4-44, 4-51 to 4-52
 - beat counter 1-157, 4-12, 4-44, 4-51 to 4-52
 - bell 1-532, 1-542, 1-555, 1-661 to 1-666, 4-57, 4-77
 - channel 1-542, 1-661
 - duration 1-542, 1-666
 - frequency 1-542, 1-664
 - volume 1-542, 1-662, 1-728, 1-735
 - buffer filling 4-13 to 4-15, 4-68
 - flag byte 4-14
 - buffer format 4-8 to 4-10
 - buffer length 4-6, 4-8
 - buffer period 4-6, 4-7
 - Channel Handler 4-4 to 4-5, 4-10 to 4-12
 - dying 4-17
 - fill code 4-10
 - linear-to-log table 4-10, 4-72
 - log-scale table 4-11
 - overrun fixup code 4-10
 - replacing 4-18 to 4-19
 - starting 4-17
 - channels
 - attaching voices *see* sound (voices)
 - interleaving *see* sound (buffer format)
 - number of 4-18, 4-55
 - clock 4-7
 - configuring 4-6 to 4-10, 4-18 to 4-19
 - delay 4-45, 4-58
 - disabling 4-20, 4-54
 - DMA Address Generator *see* MEMC (DAG)
 - DMA Handler 4-4, 4-6 to 4-10
 - dying 4-17
 - starting 4-17
 - duration 4-39, 4-58, 4-60
 - enabling 4-20, 4-54
 - ending note 1-896
 - envelopes 4-72
 - glissando effects 4-40
 - making 4-36, 4-39 to 4-40, 4-45, 4-58, 4-60 to 4-61
 - oscillators 4-69 to 4-70
 - accumulator-divider 4-69
 - output period 4-6, 4-7
 - pitch 4-7, 4-39, 4-58, 4-60
 - queue
 - adding to 4-45 to 4-46, 4-58 to 4-59
 - flushing 4-44
 - format 4-12
 - free slots 4-12, 4-48
 - initialising 4-44
 - random bit generator 4-72 to 4-73

sample length 4-6, 4-8, 4-18
 sample period 4-6, 4-7, 4-13, 4-18
 sample rate 4-7
 Scheduler 4-5, 4-12
 dying 4-17
 replacing 4-18 to 4-19
 starting 4-17
 see also sound (queue)
 Sound Channel Control Block 4-11, 4-13,
 4-42 to 4-43
 sound pointer 4-6
 stereo position 4-21 to 4-22, 4-63
 tempo 4-12, 4-44, 4-50, 4-64
 tuning 4-37, 4-65
 vibrato effects 4-69
 Voice Generators *see* sound (voices)
 voices 4-5, 4-13 to 4-16, 4-25, 4-67,
 4-77 to 4-80
 adding 4-28 to 4-29, 4-31, 4-68 to 4-76
 attaching to a channel 4-13, 4-16, 4-35,
 4-41, 4-55 to 4-56
 default 4-57
 example 4-74 to 4-76
 fill code 4-13, 4-15
 free code 4-13, 4-16
 gate off code 4-13, 4-15, 4-40
 gate on code 4-13, 4-15, 4-40
 initialising 4-13
 instantiate code 4-13, 4-16
 libraries 4-68
 listing 4-66
 names 4-13, 4-30 to 4-33
 removing 4-34
 table 4-12
 update code 4-13, 4-15, 4-70
 see also sound (buffer filling)
 volume 4-8, 4-11, 4-25 to 4-27, 4-39, 4-58,
 4-60, 4-67, 4-70 to 4-72, 4-74
 default 4-57
 wavetables 4-70, 4-74
 example 4-78 to 4-79
 loading into WaveSynth 4-80
 sound start of bar event 1-157

SP *see* registers (R13)
 speakers 4-3
 disabling 4-23 to 4-24, 4-57, 4-62
 enabling 4-23 to 4-24, 4-57, 4-62
 special fields 2-10, 2-12, 4-497
 sprites 1-745 to 1-834
 anti-aliasing 1-748, 1-758, 1-804
 appending 1-747, 1-757, 1-786
 areas
 clearing 1-746
 control block 1-749
 format 1-749
 free space 1-769, 1-828
 initialising 1-755, 1-767
 listing contents 1-746, 1-755, 1-826
 loading from file 1-747, 1-755
 merging from file 1-747, 1-755, 1-769,
 1-828
 reading information 1-746, 1-755,
 1-766, 1-825
 saving to file 1-747, 1-755
 backdrop *see* desktop (backdrop)
 columns
 deleting 1-747, 1-756, 1-797, 1-809
 inserting 1-747, 1-756, 1-796, 1-809
 control block 1-749
 pointer to 1-751
 copying 1-747, 1-756, 1-778, 1-818
 creating 1-747, 1-756, 1-773
 deleting 1-747, 1-756, 1-776, 1-821, 1-829
 dragging 3-299 to 3-302
 editing 1-747
 file format 4-454
 format 1-749
 image format 1-750
 loading from file 1-747, 1-768, 1-827
 masks 1-566, 1-747
 creating 1-756, 1-780
 deleting 1-756, 1-781
 format 1-751
 plotting 1-799, 1-800
 reading 1-757, 1-794

- sprites (*continued*)
 masks (*continued*)
 redirecting output to 1-747, 1-753,
 1-758, 1-760, 1-813
 scaling 1-801
 writing 1-757, 1-795
 mode numbers to use 1-751
 names 1-755, 1-771
 outputting to 1-725
 palette 1-750
 creating 1-790
 deleting 1-790
 256 entries *see* sprites (256 colours)
 pixel translation 1-752, 1-834,
 3-208 to 3-209, 3-341, 3-346,
 3-397 to 3-398, 3-569, 3-576
 plot actions 1-753
 plotting 1-748, 1-758, 1-779, 1-785
 grey scaled 1-804
 see also sprites (scaling and transforming)
 pointer to 1-751
 printing *see* printing (sprites)
 reading 1-757, 1-792
 reading from screen 1-747, 1-756, 1-772,
 1-774, 1-824
 reading information 1-757, 1-791
 redirecting output to 1-747, 1-753, 1-758,
 1-760, 1-811
 referencing 1-746
 reflecting about x axis 1-747, 1-757, 1-784,
 1-822
 reflecting about y axis 1-747, 1-757, 1-798,
 1-823
 renaming 1-747, 1-756, 1-777, 1-830
 rows
 deleting 1-747, 1-756, 1-783, 1-809
 inserting 1-747, 1-756, 1-782, 1-809
 save areas 1-753 to 1-754, 1-758, 1-811
 size of 1-758, 1-815
 saving to file 1-747, 1-770, 1-831
 scale factors 1-752
 scaling 1-748, 1-752, 1-758, 1-803, 3-576
 selecting 1-759, 1-775, 1-817, 3-579
 summary of calls 1-761 to 1-763
 system area 1-746
 see also sprites (areas)
 transforming 1-758, 1-806 to 1-808
 see also sprites (scaling)
 256 colours 1-750, 1-832 to 1-834
 user areas 1-746
 see also sprites (areas)
 wastage 1-750
 removing 1-757, 1-805
 Wimp border pool *see* windows (tool sprites)
 Wimp pool 1-746, 3-24 to 3-25, 3-31 to 3-34,
 3-83, 3-201 to 3-203
 adding to 3-282 to 3-283, 4-550
 addresses 3-203
 see also sprites (areas)
 writing 1-747, 1-757, 1-793
!Sprites file 3-59
SpriteV 1-84, 3-563, 3-576
squares *see* graphics (plotting)
Squash 4-101 to 4-105
 compressing data 4-102 to 4-103
 decompressing data 4-104 to 4-105
 file format 4-493
stack pointer *see* registers (R13)
'Station not present' error 2-340
status
 providing 1-261
status variables 1-49 to 1-62
streams 2-421, 2-441, 2-528
 closing 1-192, 2-427, 2-431, 2-600
 creating 1-191, 2-605
 handles 2-599
 input 1-836, 1-841, 1-854, 1-873, 2-441
 number per device 2-430
 opening 2-599
 printer *see* printers (stream)
strings
 comparing 3-834 to 3-835
 definition 4-413
 inputting 1-841, 1-908, 1-910
 outputting 1-481, 1-503, 1-504, 1-518, 1-522
 transforming 3-842 to 3-843

width *see* fonts (strings)
see also characters
submenus *see* menus (submenus)
subroutine link register *see* registers (R14)
SuperSample module 3-519 to 3-521
supervisor mode *see* command line mode or SVC mode
supervisor stack 1-347
SVC mode 1-12, 1-14, 1-15, 1-113, 1-348, 4-363
 setting 1-140
SWI vector 1-113
SWIs 1-4, 1-23 to 1-32, 1-34
 calling 1-113
 from assembler 1-24
 from BASIC 1-23, 1-24
 from C 1-25
 from SWI routines 1-31
chunk identification numbers 1-27, 4-546
decoding 1-28, 1-63
device driver usage 1-127
error handling when vectored 1-32
error-generating 1-41, 1-43
error-returning 1-41
example documentation 1-29
handling 1-217 to 1-219
names 1-23, 1-25, 1-220, 4-546
numbers 1-23, 1-26 to 1-27, 1-217, 4-546
parameters 1-23
queueing *see* sound (Scheduler)
re-entrancy 1-129
register usage 1-23
results 1-23
unknown *see* UKSWIV
see also conversions (SWI...)

Sys\$Date variable 4-500
Sys\$DateFormat variable 4-500
Sys\$RCLimit variable 1-300, 4-500
Sys\$ReturnCode variable 1-300, 2-109, 4-500
Sys\$Time variable 1-286, 1-328, 4-500
Sys\$Year variable 4-500
system (C procedure) 1-37, 1-923
System application 3-61, 3-249, 3-278, 4-500
system bus 1-17

system clock *see* timers (system)
system devices 2-3, 2-18, 2-485 to 2-487
system extension modules *see* modules
system heap *see* heaps (system)
system variables 1-283, 1-286 to 1-287,
 4-495 to 4-502
 checking values 1-332
 code 1-286, 1-332
 deleting 1-287, 1-311, 1-331
 integers 1-286, 1-327
 listing 1-330
 macros 1-286, 1-328
 naming 1-286
 reading 1-286, 1-309, 1-332
 setting 1-286, 1-311, 1-325 to 1-329
 strings 1-286, 1-325
 substituting for 1-443, 1-444, 1-923
 types 1-286
see also individual variable names
System\$Dir variable 4-500
System\$Path variable 3-60, 4-500

T

tab 1-543, 1-550, 1-557, 1-843, 1-887
Tab key 3-104, 3-123
Task Manager 3-54, 3-240 to 3-242,
 3-313 to 3-319
 shutting down 3-81
task windows 1-187 to 1-188, 3-266 to 3-267,
 3-321 to 3-327, 4-501
 information 3-322
 using 3-326 to 3-327
tasks
 handles 2-491 to 2-492, 3-70 to 3-73, 3-219
 finding for icon/window 3-198
 killing 3-73, 3-75, 3-175 to 3-176, 3-230
 listing 3-315 to 3-316
 modules 3-62 to 3-63
 see also modules
 names
 finding from handles 3-242, 3-314

- tasks (*continued*)
 - number of 3-218
 - poll word 1-187
 - sleeping 1-187
 - starting 2-490 to 2-491, 3-68, 3-70, 3-240 to 3-241
 - 'child' tasks 3-177 to 3-178, 3-291
 - task window usage 3-322
 - transferring data 3-216 to 3-217, 3-238, 3-249 to 3-256, 4-501
 - in memory 3-255 to 3-256
 - TaskWindow\$Server variable 4-501
 - TCP/IP Protocol Suite 1-159
 - Teletext 1-575, 4-554, 4-572 to 4-575
 - templates 3-56 to 3-57
 - closing 3-169
 - creating 3-56, 3-171
 - file format 4-455 to 4-456
 - loading 3-56, 3-170 to 3-172
 - opening 3-56, 3-168
 - tempo *see* sound (tempo)
 - terminal emulator flags *see* TIP (data structures)
 - terminal emulators *see* TIP (terminal emulators)
 - Terminal Interface Protocol *see* TIP
 - territories *see* territory modules
 - territory manager 3-785 to 3-848
 - starting 3-788, 3-790, 3-793
 - see also* alphabets, conversions, territory modules *and* time zones
 - territory modules 1-401, 3-785 to 3-848
 - currently selected 3-786, 3-787 to 3-788, 3-792, 3-805
 - default 3-787, 3-846, 4-562
 - deregistering 3-795
 - initialising 3-788, 3-793
 - killing 3-795
 - listing 3-848
 - loading 3-787
 - names 3-789, 3-796, 4-547
 - numbers 3-789, 4-547
 - presence check 3-797
 - registering 3-788, 3-790, 3-793 to 3-794
 - scope 3-789
 - selecting 3-791
 - SWI handler 3-788, 3-793 to 3-794
 - see also* alphabets, conversions, territory manager *and* time zones
 - text *see* characters
 - text window *see* VDU drivers (text window)
 - TickerV 1-77, 1-83, 1-98, 1-431
 - time 1-399 to 1-439, 4-500
 - calendar information 3-839 to 3-840
 - displaying 1-439
 - format strings 1-402, 3-839 to 3-840, 4-500
 - see also* conversions *and* timers (real-time)
 - time zones 3-786, 3-789
 - currently selected 3-801
 - default 3-847
 - information 3-801, 3-806
 - timers 1-98, 1-125
 - calling code 1-403, 1-429 to 1-433
 - chain *see* timers (calling code)
 - events 1-154, 1-399, 1-403
 - interval 1-400, 1-403
 - reading 1-412
 - writing 1-413
 - monotonic 1-400, 1-699, 3-66, 3-184
 - reading 1-434
 - real-time 1-399, 1-400, 1-401
 - reading 1-415, 1-417, 1-421, 1-439, 3-66
 - soft copy 1-401
 - writing 1-423 to 1-428, 3-800
 - system 1-400
 - reading 1-409
 - writing 1-411
 - vertical sync 1-404
 - tints *see* colours (tints)
 - TIP 4-503 to 4-544
 - aborting file operations 4-508, 4-537
 - choosing protocol modules 4-506
 - closing connections 4-507, 4-521
 - closing logical links 4-507, 4-516
 - connection 4-504
 - data structures 4-505, 4-510 to 4-511, 4-514 to 4-515
 - directory operations 4-508, 4-543 to 4-544

file transfer SWIs 4-505
 finding base SWI numbers 4-513
 finding protocol modules 4-506,
 4-510 to 4-512
 generating a Break 4-508, 4-531 to 4-532
 getting a file 4-508, 4-539 to 4-540, 4-542
 getting menu trees 4-508
 getting state of logical links 4-529 to 4-530
 logical links 4-503
 menus 4-508, 4-517, 4-526 to 4-527
 multiple links and connections 4-506
 opening connections 4-506, 4-518 to 4-520
 opening logical links 4-506, 4-514 to 4-515
 poll words 4-506, 4-507, 4-518
 protocol modules 4-503 to 4-506
 receiving a file 4-507
 receiving data 4-507, 4-524 to 4-525
 sending a file 4-507
 sending data 4-507, 4-522 to 4-523,
 4-533 to 4-536
 service calls 4-504
 SWI support 4-504 to 4-505
 terminal emulators 4-506 to 4-508
 token dictionary 1-519
 'Too long' error 1-929
 'Too many windows' error 3-65
 tracks
 gaps 2-198 to 2-199
 index mark 2-198
 index pulse 2-198, 2-271
 layout 2-198 to 2-199, 2-264
 reading 2-221 to 2-225, 2-279, 2-311,
 2-592 to 2-594
 writing 2-221 to 2-225, 2-279, 2-311,
 2-592 to 2-594
 see also discs and sectors
 transient utilities 1-285, 1-337, 2-84
 triangles *see* graphics (plotting)

U

UKPLOTV 1-83, 1-96, 1-705

UKSWIV 1-26, 1-83, 1-95, 1-291
 UKVDU23V 1-82, 1-94
 'Unable to start application' error 2-82
 undefined instruction vector 1-112
 'Undefined RGB font colours' error 3-488, 3-489
 unique machine ID *see* machine (ID)
 UpCalls 1-176 to 1-194
 UpCallV 1-83, 1-291
 URD *see* directories (user root)
 'Use *Desktop to start...' errors 3-280
 user event 1-155
 user mode 1-12, 1-14, 4-363
 UserV 1-80
 USR mode 1-348
 UTC 1-401

V

V flag 1-28, 1-41
 V flag *see* registers (PSR)
 'Variable not found' error 1-313
 'Variable value too long' error 1-313
 variables *see* system variables
 VDU drivers 1-499 to 1-500, 1-527 to 1-744
 destination of output 1-97, 1-506, 1-514,
 2-441, 3-77
 disabling 1-545, 1-550, 1-573
 enabling 1-545, 1-554
 graphics window 1-530, 1-545, 1-546, 1-564,
 1-577, 1-610, 1-613, 3-18
 defining 1-606
 list of codes 4-551 to 4-552
 null operation 1-548
 paged mode 1-544, 1-545, 1-562 to 1-563,
 1-577, 1-896, 4-352
 disabling 1-563
 line count 1-667
 plotting sprites 1-758
 printing *see* printing (VDU codes)
 queue size 1-544, 1-669, 1-896, 3-585
 scrolling 1-546, 1-584, 1-610, 1-734, 1-737
 status 1-535, 1-645, 1-654

VDU drivers (*continued*)
 text window 1-529, 1-545, 1-577, 1-584,
 1-586, 1-610
 defining 1-612
 variables 1-544, 1-545, 1-652,
 1-703 to 1-706, 1-709 to 1-711,
 3-585
see also graphics, monitor, screen *and* sprites
 vdu: 2-485, 2-487
 VDUXV 1-83, 1-97, 1-500, 1-535
 vectors *see* software vectors *and* hardware vectors
 versions of RISC OS *see* RISC OS (versions)
 vertical sync event 1-154, 1-404, 1-405, 1-534,
 1-547, 1-631, 1-698
 vertical tab 1-543, 1-550, 1-559
 V flag
see also errors
 VIDC 1-9, 1-15 to 1-17, 1-528, 1-531, 1-537,
 1-576, 1-621, 4-7, 4-8, 4-555
 buffers 1-15 to 1-17
 clock rates 1-16, 1-621
 cursor support 1-16
 registers 1-621 to 1-623
see also palette *and* sound
 video controller *see* VIDC
 voices *see* sound (voices)
 volume *see* sound (volume)
 VSync *see* vertical sync event

W

WaveSynth 4-77 to 4-80
 wildcards 2-10, 2-31, 2-570 to 2-571
 Wimp 3-3 to 3-292
 character redefinitions 4-562
 colours *see* colours (Wimp)
 current slot 3-55, 3-59, 3-61, 3-68,
 3-206 to 3-207, 3-241 to 3-242,
 3-289 to 3-290

dragging 3-19, 3-48 to 3-49, 3-121 to 3-122,
 3-132, 3-143, 3-145 to 3-149,
 3-271 to 3-272
see also sprites (dragging)
 error reporting 3-64, 3-77, 3-179 to 3-181,
 3-273
 event codes 3-115 to 3-128
 disabling 3-6, 3-116 to 3-117
 priority 3-116
 filters
 adding 3-84, 3-224 to 3-225, 3-304,
 3-306 to 3-309
 listing 3-312
 removing 3-224 to 3-225, 3-305,
 3-310 to 3-311
 flags 3-273 to 3-274
 free memory 3-61, 3-206 to 3-207
 claiming 3-210 to 3-211
 free space 3-54 to 3-55
 hot keys 3-42, 3-173
 initialising 3-87
 menus *see* menus
 messages *see* messages
 next slot 3-54 to 3-55, 3-206 to 3-207, 3-241,
 3-245, 3-289 to 3-290
 polling 3-6 to 3-7, 3-115 to 3-128,
 3-184 to 3-185
 slot
 contents 1-345
 system information 3-218 to 3-219
 templates *see* templates
 version 3-8, 3-66, 3-219
see also icons *and* windows
'Wimp is currently active' error 3-75
'Wimp transfer out of range' error 3-216
'Wimp unable to claim work area' error 3-65
Wimp\$Path variable 2-409, 2-419
'Wimp\$Scrap not defined' error 3-249
Wimp\$Scrap variable 3-249, 4-501
Wimp\$ScrapDir variable 4-501
Wimp\$State variable 3-219, 4-501
'Wimp_GetRectangle called incorrectly'
error 3-65

'Window definition won't fit' error 3-65
 Window Manager *see* Wimp
 WindowManager\$Path variable 2-409
 windows
 blocks 3-89 to 3-94, 3-137
 border sprites *see* windows (tool sprites)
 bounding box 3-182 to 3-183
 bringing to top 3-16
 button types 3-94
 closing 3-15, 3-53, 3-114, 3-119 to 3-120,
 3-121
 command 3-212 to 3-213
 creating 3-89 to 3-95
 deleting 3-108
 dragging 3-16, 3-273
 flags 3-14, 3-90 to 3-92, 3-135, 3-137
 iconising 3-33, 3-257 to 3-259
 input focus 3-26, 3-27, 3-41, 3-125
 opening 3-16 to 3-17, 3-52, 3-112, 3-119,
 3-212, 3-240
 panes 3-39 to 3-40, 3-119, 3-120
 redrawing 3-15 to 3-17, 3-18, 3-64, 3-119,
 3-129 to 3-130, 3-133 to 3-134,
 3-186
 forcing 3-19, 3-150 to 3-151, 3-240
 resizing 3-16 to 3-17, 3-273
 restricting to screen 3-273
 scroll bars 3-16, 3-17, 3-28, 3-29, 3-119,
 3-164
 scroll offsets 3-10 to 3-14
 scrolling 3-16 to 3-17, 3-124 to 3-125, 3-273
 sending to back 3-15
 stack 3-14
 state 3-135 to 3-138
 title bar 3-16, 3-27, 3-119
 data 3-14, 3-93
 flags 3-14, 3-93
 tool sprites 3-26 to 3-31, 3-285
 RISC OS 2 compatibility 3-30
 updating 3-19, 3-131 to 3-134, 3-186
 visible area 3-10 to 3-14
 work area 3-10 to 3-14, 3-164 to 3-165
 copying 3-204 to 3-205

Wipe\$Options variable 2-193, 4-499
 WordV 1-81, 2-731
 WrchV 1-77, 1-80, 1-494, 1-501, 3-563, 3-579,
 4-111

X

X bit 1-26, 1-27, 1-41, 1-446, 1-459, 1-461

Y

yes *see* confirmation

Z

Z flag *see* registers (PSR)
 zero flag *see* registers (PSR)
 zones *see* discs (map)

Reader's Comment Form

RISC OS 3 Programmer's Reference Manual

We would greatly appreciate your comments about this Manual, which will be taken into account for the next issue:

Did you find the information you wanted?

Do you like the way the information is presented?

General comments:

If there is not enough room for your comments, please continue overleaf

How would you classify your experience with computers?

Used computers before

Experienced User

Programmer

Experienced Programmer

Cut out (or photocopy) and post to:

Dept RC, Technical Publications
Acorn Computers Limited
645 Newmarket Road
Cambridge CB5 8PB
England

Your name and address:

This information will only be used to get in touch with you in case we wish to explore your comments further



Acorn 

AKJ03